•15P0073B1•

SINUS M

VARIABLE FREQUENCY DRIVE

USER MANUAL

-Installation and Programming Instructions-

Issued on 17/02/11 R.03.1 SW Ver. EU2.3



- This manual is integrant and essential to the product. Carefully read the instructions contained herein as they provide important hints for use and maintenance safety.
- This device is to be used only for the purposes it has been designed to. Other uses should be considered improper and dangerous. The manufacturer is not responsible for possible damages caused by improper, erroneous and irrational uses.
- Elettronica Santerno is responsible for the device in its original setting.
- Any changes to the structure or operating cycle of the device must be performed or authorized by the Engineering Department of Elettronica Santerno.
- Elettronica Santerno assumes no responsibility for the consequences resulting by the use of non-original spare-parts.
- Elettronica Santerno reserves the right to make any technical changes to this manual and to the device without prior notice. If printing errors or similar are detected, the corrections will be included in the new releases of the manual.
- Elettronica Santerno is responsible for the information contained in the original version of the Italian manual.
- The information contained herein is the property of Elettronica Santerno and cannot be reproduced. Elettronica Santerno enforces its rights on the drawings and catalogues according to the law.



Elettronica Santerno S.p.A.
Strada Statale Selice, 47 - 40026 Imola (BO) Italy
Tel. +39 0542 489711 - Fax +39 0542 489722
santerno.com sales@santerno.com



Thank you for purchasing ES Variable Frequency Drives!

SAFETY INSTRUCTIONS

- Always follow safety instructions to prevent accidents and potential hazards from occurring.
- In this manual, safety messages are classified as follows:

! WARNING

Improper operation may result in serious personal injury or death.



Improper operation may result in slight to medium personal injury or property damage.

■ Throughout this manual, the following pictograms are used to make you aware of safety considerations:



Identifies potential hazard under certain conditions.

Read the message and follow the instructions carefully.



Identifies shock hazard under certain conditions.

Particular attention should be paid because dangerous voltage may be present.

- Keep operating instructions handy for quick reference.
- Read this manual carefully to maximize the performance of Sinus M series inverters and ensure safe usage.



WARNING

- Do not remove the inverter cover while power is applied or the unit is operating. Otherwise, electric shock could occur.
- Do not run the inverter with the front cover removed.

 Otherwise, you may get an electric shock due to high voltage terminals or charged capacitor exposure
- Do not remove the cover except for periodic inspections or wiring, even if the input power is not applied.

Otherwise, you may access the charged circuits and get an electric shock.



■ Wiring and periodic inspections should be performed at least 10 minutes after disconnecting the input power and after checking the DC link voltage is discharged with a meter (below DC 30V).

Otherwise, you may get an electric shock.

Operate the switches with dry hands.

Otherwise, you may get an electric shock.

■ Do not use the cable when its insulating tube is damaged.

Otherwise, you may get an electric shock.

■ Do not subject the cables to scratches, excessive stress, heavy loads or pinching. Otherwise, you may get an electric shock.



CAUTION

- Install the inverter on a non-flammable surface. Do not place flammable material nearby. Otherwise, fire could occur.
- Disconnect the input power if the inverter gets damaged.

Otherwise, it could result in a secondary accident and fire.

■ After the input power is applied or removed, the inverter will remain hot for a couple of minutes.

Otherwise, you may get bodily injuries such as skin-burn or damage.

■ Do not apply power to a damaged inverter or to an inverter with parts missing even if the installation is complete.

Otherwise, electric shock could occur.

■ Do not allow lint, paper, wood chips, dust, metallic chips or other foreign matter to enter the drive.

Otherwise, fire or accident could occur.



OPERATING PRECAUTIONS

 ☐ Handle according to the weight of the product. ☐ Do not stack the inverter boxes higher than the number recommended. ☐ Install according to instructions specified in this manual. ☐ Do not open the cover during delivery. ☐ Do not place heavy items on the inverter. ☐ Check the inverter mounting orientation is correct. ☐ Do not drop the inverter, or subject it to impact. ☐ Follow your national electrical code for grounding. Recommended Ground impedance 	Handling and installation									
 □ Install according to instructions specified in this manual. □ Do not open the cover during delivery. □ Do not place heavy items on the inverter. □ Check the inverter mounting orientation is correct. □ Do not drop the inverter, or subject it to impact. 										
 □ Do not open the cover during delivery. □ Do not place heavy items on the inverter. □ Check the inverter mounting orientation is correct. □ Do not drop the inverter, or subject it to impact. 										
 □ Do not place heavy items on the inverter. □ Check the inverter mounting orientation is correct. □ Do not drop the inverter, or subject it to impact. 										
 ☐ Check the inverter mounting orientation is correct. ☐ Do not drop the inverter, or subject it to impact. 										
☐ Do not drop the inverter, or subject it to impact.	Do not place heavy items on the inverter.									
	·									
	·									
,	nce for									
2S/T class (200-230V) is below 100 Ω and for 4T class (380-480V) below 10 Ω .										
☐ SINUS M series contains ESD (Electrostatic Discharge) sensitive parts. Take protective	ctive									
measures against ESD before touching the PCB for inspection or installation.										
☐ Use the inverter under the following environmental conditions:										
D 030 the inverter under the following chivilonimental conditions.										
Ambient temperature - 10 ~ 50°C (non-freezing)										
Relative humidity 90% RH or less (non-condensing)										
Storage temperature - 20 ~ 65°C										
Storage temperature Location Altitude, Vibration Storage temperature - 20 ~ 65°C Protected from corrosive gas, combustible gas, oil mist or dust Max. 1,000m above sea level, Max.										
gas, oil mist or dust Max. 1,000m above sea level, Max.										
Altitude, Vibration 5.9m/sec ² (0.6G) or less										
Atmospheric pressure 70 ~ 106 kPa										
(2) Wiring										
☐ Do not connect a power factor correction capacitor, surge suppressor, or RFI filter to t	o the									
output of the inverter.										
☐ The connection orientation of the output cables U, V, W to the motor will affect the										
direction of rotation of the motor.										
☐ Incorrect terminal wiring could result in the equipment damage.										
☐ Reversing the polarity (+/-) of the terminals could damage the inverter.										
 Only authorized personnel familiar with inverter should perform wiring and inspections 	ons.									
☐ Always install the inverter before wiring. Otherwise, you may get an electric shock or										
have bodily injury.										
(3) Trial run										
☐ Check all parameters during operation. Changing parameter values might be required	red									
depending on the load.										

 $\hfill\square$ Always apply permissible range of voltage to the each terminal as indicated in this

manual. Otherwise, it could lead to inverter damage.



(4)	Ope	eration precautions
		When the Auto restart function is selected, stay away from the equipment as a motor will restart suddenly after an alarm stop.
		The Stop key on the keypad is valid only when the appropriate function setting has been made. Prepare an emergency stop switch separately.
		If an alarm reset is made with the reference signal present, a sudden start will occur. Check that the reference signal is turned off in advance. Otherwise an accident could occur.
		Do not modify or alter anything inside the inverter.
		Motor might not be protected by electronic thermal function of inverter.
		Do not use a contactor on the inverter input for frequent starting/stopping of the inverter.
		Use a noise filter to reduce the effect of electromagnetic interference. Otherwise nearby electronic equipment may be affected.
		In case of input voltage unbalance, install AC reactor. Power Factor capacitors and generators may become overheated and damaged due to potential high frequency noise transmitted from inverter.
		Use an insulation-rectified motor or take measures to suppress the micro surge voltage when driving 400V class motor with inverter. A micro surge voltage attributable to wiring constant is generated at motor terminals, and may deteriorate insulation and damage motor.
		Before operating unit and prior to user programming, reset user parameters to default settings.
		Inverter can easily be set to high-speed operations, Verify capability of motor or machinery prior to operating unit.
		Stopping torque is not produced when using the DC-Brake function. Install separate equipment when stopping torque is needed.
(5)	Fau	It prevention precautions
		Provide a safety backup such as an emergency brake which will prevent the machine and equipment from hazardous conditions if the inverter fails.
(6)	Mair	ntenance, inspection and parts replacement
		Do not conduct a megger (insulation resistance) test on the control circuit of the inverter. Refer to Chapter 14 for periodic inspection (parts replacement).
(7)	Disp	posal
		Handle the inverter as an industrial waste when disposing of it.

(8) General instructions

Many of the diagrams and drawings in this instruction manual show the inverter without a circuit breaker, a cover or partially open. Never run the inverter like this. Always place the cover with circuit breakers and follow this instruction manual when operating the inverter.



Important User Information

- The purpose of this manual is to provide the user with the necessary information to install, program, start up and maintain the SINUS M series inverter.
- To assure successful installation and operation, the material presented must be thoroughly read and understood before proceeding.
- This manual contains:

Chapter	Title	Description
Chapter	Basic information &	•
1		Provides general information and precautions for safe use of
	precautions	the Sinus M series inverter.
2	Installation	Provides instructions on how to install the Sinus M inverter.
3	Wiring	Provides instructions on how to wire the Sinus M inverter.
4	Basic configuration	Describes how to connect the optional peripheral devices to the inverter.
5	Programming keypad	Illustrates keypad features and display.
6	Basic operation	Provides instructions for quick start of the inverter.
7	Function list	Parameter values are listed.
8	Control block diagram	Shows control flow to help users easily understand operation mode.
9	Basic functions	Provides information for basic functions in the Sinus M
10	Advanced functions	Indicates advanced functions used for system application.
11	Monitoring	Gives information on the operating status and fault information.
12	Protective functions	Outlines protective functions of the Sinus M.
13	RS 485	Provides specification of RS485 communication.
14	Troubleshooting & maintenance	Defines the various inverter faults and the appropriate action to take as well as general troubleshooting information.
15	Specifications	Gives information on Input/Output rating, control type and more details of the Sinus M inverter.
16	Options	Explains options including Remote keypad, Conduit kits, EMC filters, DB resistors.
17	EC Declaration of Conformity	Contains the Manufacturer's certification stating that the equipment is compliant to EC Directives. The certification statement also contains the technical standards applied.



Table of Contents

CHAPTER 1 -	Basic information & precautions	1-1
1.1 Importa	nt precautions	1-1
1.2 Product	t Details	1-3
1.3 Product	t assembling & disassembling	1-4
CHAPTER 2 -	Installation	2-1
2.1 Installat	tion precautions	2-1
2.2 Dimens	ions	2-3
CHAPTER 3 -	Wiring	3-1
3.1 Termina	al wiring (Control I/Os)	3-1
3.2 Power to	erminal block	3-3
3.3 Control	terminal block	3-6
3.4 PNP/NF	PN selection and connector for communication option	3-7
3.5 Optiona	al External Relay	3-8
CHAPTER 4 -	Basic configuration	4-1
4.1 Connec	ction of peripheral devices to the inverter	4-1
4.2 Recomr	mended MCCBs and MCs	4-2
4.3 Recomr	mended Fuses and Reactors	4-3
CHAPTER 5 -	Programming Keypad	5-1
5.1 Keypad	features	5-1
5.2 Alpha-n	umeric view on the LED keypad	5-2
5.3 Moving	to other groups	5-3
5.4 How to	change the codes in a group	5-5
5.5 Parame	eter setting	5-7
5.6 Monitori	ing of operation status	5-10
CHAPTER 6 -	Basic operation	6-1
6.1 Frequer	ncy Setting and Basic Operation	6-1
CHAPTER 7 -	Function list	7-1
7.1 Drive gr	roup	7-1
7.2 Function	n group 1	7-4
7.3 Function	n group 2	7-10
7.4 I/O grou	лb 2	7-18
CHAPTER 8 -	Control block diagram	8-1
8.1 Frequer	ncy and Drive mode setting	8-2
8.2 Accel/D	ecel setting and V/F control	8-3
CHAPTER 9 -	Basic Functions	9-1
9.1 Frequer	ncy mode	9-1
9.2 Multi-Sto	ep Frequency setting	9-7
9.3 Operatii	ng command setting method	9-8
9.4 Accel/D	ecel time and pattern setting	9-12
9.5 V/F con	itrol	9-17



9.6 Stop method select	9-20
9.7 Frequency limit	9-21
CHAPTER 10 - Advanced functions	10-1
10.1 DC brake	10-1
10.2 Jog operation	10-3
10.3 UP-DOWN	10-5
10.4 3-Wire operation (Start – Stop via push buttons)	10-8
10.5 Dwell operation	10-9
10.6 Slip compensation	10-10
10.7 PID control	10-12
10.8 Auto-tuning	10-25
10.9 Sensorless Vector Control	10-26
10.10 Energy-saving operation	10-27
10.11 Speed search	10-28
10.12 Auto restart try	10-30
10.13 Operating sound select (Carrier frequency change)	10-31
10.14 2 nd motor operation	10-31
10.15 Self-Diagnostics function	10-33
10.16 Frequency setting and 2 nd drive method select	10-35
10.17 Over voltage trip prevention deceleration and Power Braking	10-37
10.18 External brake control	10-38
10.19 Kinetic energy buffering	10-39
10.20 DRAW Control	
10.21 2 Phase PWM	10-42
10.22 Cooling fan control	10-42
10.23 Operating mode selection when cooling fan trip occurs	
10.24 Parameter read/write	10-44
10.25 Parameters Restore default / Lock	10-45
10.26 Functions related to "Fire Mode"	10-48
CHAPTER 11 - Monitoring	11-1
11.1 Operating status monitoring	11-1
11.2 Monitoring the I/O terminal	11-4
11.3 Monitoring fault condition	11-5
11.4 Analog Output	11-7
11.5 Multi-function output terminal (MO) and Relay (3AC)	11-8
11.6 Output terminal select at keypad-inverter communication error	11-14
CHAPTER 12 - Protective functions	12-1
12.1 Electronic Thermal Protection	12-1
12.2 Overload Warning and trip	12-2
12.3 Stall prevention	12-3
12.4 Input/Output phase loss protection	12-5
12.5 External trip signal	12-6



12.6 Inverter Overload	12-7
12.7 Frequency command loss	12-7
12.8 DB Resistor Enable Duty setting	12-9
CHAPTER 13 - RS485 communication	13-1
13.1 Introduction	13-1
13.2 Specification	13-1
13.3 Installation	13-2
13.4 Operation	13-3
13.5 Communication protocol (MODBUS-RTU)	13-4
13.6 Communication protocol (ES BUS)	13-4
13.7 Parameter code list <common area=""></common>	13-8
13.8 Troubleshooting	13-17
13.9 Miscellaneous	13-17
CHAPTER 14 - Troubleshooting & Maintenance	14-1
14.1 Protective functions	14-1
14.2 Fault remedy	14-3
14.3 Precautions for maintenance and inspection	14-6
14.4 Check points	14-6
14.5 Part replacement	14-6
CHAPTER 15 - Specifications	15-1
15.1 Temperature Derating Information	15-4
15.2 Inverter Efficiency and Heating Loss	15-5
CHAPTER 16 - Options	16-1
16.1 Remote option	16-1
16.2 Conduit Kit	
16.3 EMC Filters	16-6
16.4 Braking resistors	16-10
CHAPTER 17 - EC Declaration of Conformity	17-1




CHAPTER 1 - BASIC INFORMATION & PRECAUTIONS

1.1 Important precautions

Unpacking and inspection

 Inspect the inverter for any damage that may have occurred during shipping. In order to make sure that the inverter unit is the correct one for your application, check the inverter type and output ratings on the nameplate. Also make sure that the inverter is intact.

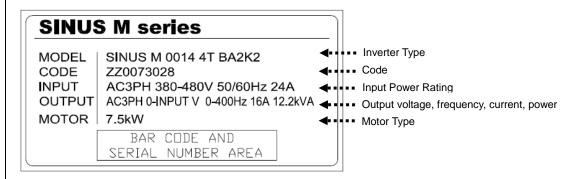

SINUS M 0001		001	4	4T		B A2		K		2				
	Moto	r rating*	Input power		Bra	Brake I		Filter		Keypad		Enclosure		
	0001	0.4	2S/T		В		A2		K		2			
	0001	0.75-1.1	2S/T		В	1	A2		K		2	ļ		
	0002	1.5-1.8			В	1	A2		K		2			
			2S/T		В						2	ļ		
ter	0005	2.2-3	2S/T	1/3	В		A2		K					
/er	0007	4-4.5	2S/T	phase		-	A2		K		2			
Ŀ <u>Ĺ</u>	0011	5.5	2S/T	200-	В		A2	_	K		2			
9	0014	7.5-9.2	2S/T	230Vac	В		A2	Jec	K		2			
<u>&</u>	0017	11	2S/T		-	B B			A2	on	K		2	
	0020	15	2S/T				A2	inc	<u> </u>	_	2			
	0025	18.5	2S/T			В	Jec Jec	A2	er	K	jec	2	0	
/S	0030	22	2S/T			В	included	A2	filt	K	included	2	P2	
l &	0001	0.4	4T		В	i.	A2	<u>'a</u>	K	in C	2	2= IP20		
ELETTRONICA SANTERNO inverter	0002	0.75-0.9	4T		- -	В	B=	A2	industrial filter included	K	굮	2	2	
	0003	1.5	4T				В	"	A2	ρ	K		2	
l È l	0005	2.2	4T		B A2 .	.⊑	K	2						
Щ	0007	4.5	4T	3 phase B 380- B	A2	A K	1	2						
	0011	5.5	4T				K		2					
	0014	7.5	4T	480Vac	В		A2		K		2			
	0017	11	4T		В		A2		K		2			
	0020	15	4T		В	1	A2		K		2			
	0025	18.5	4T		В	1	A2		K		2			
	0030	22	4T		В	1	A2		K		2			

^{*} The motor power is based on 220Vac for models "2S/T" and on 380Vac for models "4T".

If you find any difference with the equipment you ordered, or if it is damaged, please contact your sales representative.




Preparations of instruments and parts required for operation	Instruments and parts to be prepared depend on how the inverter is operated. Prepare equipment and parts as necessary.
Installation	To operate the inverter with high performance for a long time, install the inverter in a proper place in the correct direction and with proper clearances
Wiring	Connect the power supply, motor and operation signals (control signals) to the terminal block. Note that incorrect connection may damage the inverter and peripheral devices




1.2 Product Details

Appearance

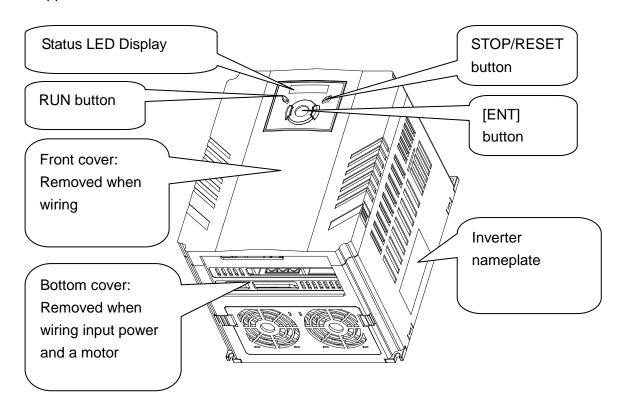


Inside view after front cover is removed
 Refer to "1.3 front cover removal" for details.

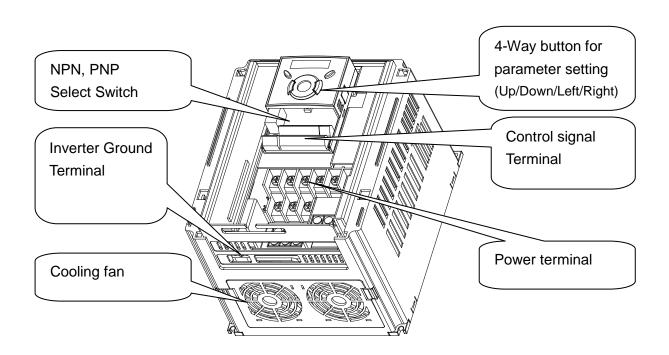




1.3 Product assembling & disassembling

• To remove the front cover: Lightly press both the indented sides of the cover and pull up.

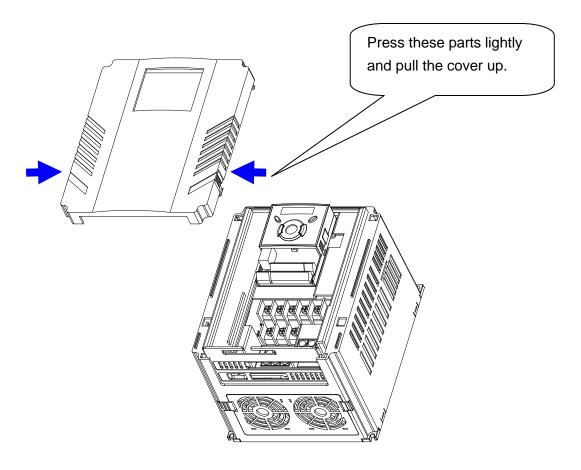

To change the inverter fan: Press the both sides of bottom cover lightly and pull out .

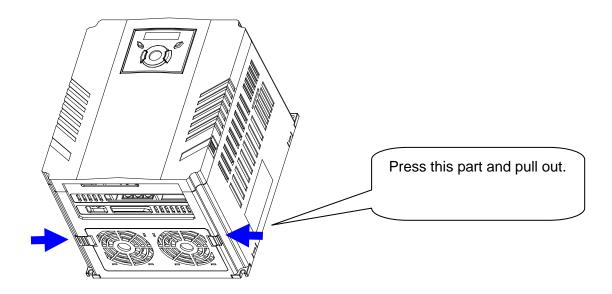



Notes:




CHAPTER 2 - INSTALLATION

2.1 Installation precautions


∕!∖ CAUTION

- Handle the inverter with care to prevent damage to the plastic components. Do not hold the inverter by the front cover. It may fall off.
- Install the inverter in a place where it is immune to vibration (5.9 m/s² or lower).
- Install in a location where temperature is within the permissible range (−10~50°C).

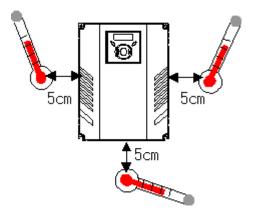

<Ambient Temp Checking Location>

- The inverter will be very hot during operation. Install it on a non-combustible surface.
- Mount the inverter on a flat, vertical and level surface. Inverter orientation must be vertical (top up) for proper heat dissipation. Also leave sufficient clearances around the inverter.

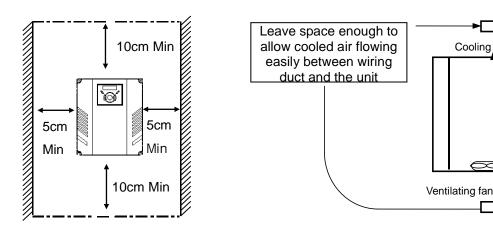


- Protect from moisture and direct sunlight.
- Do not install the inverter in any environment where it is exposed to waterdrops, oil mist, dust, etc. Install the inverter in a clean place or inside a "totally enclosed" panel any suspended matter is not entered.




- When two or more inverters are installed or a cooling fan is mounted in a panel, the inverters
 and fan must be installed in proper positions with extreme care to keep the ambient
 temperature below the permissible range.
- Install the inverter using screws or bolts to ensure that the inverter is firmly fastened.

< For installing multiple inverters in a panel>

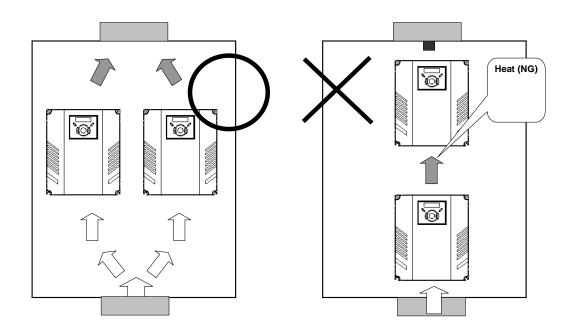

/!\ CAUTION


Take caution on proper heat ventilation when installing inverters and fans in a panel.

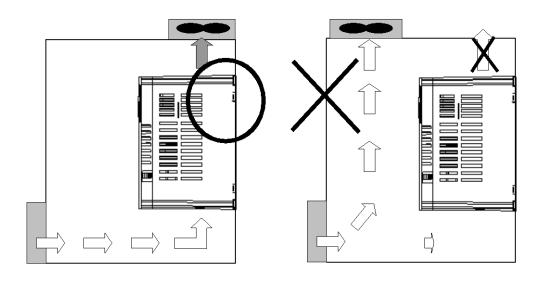




2.2 Dimensions


SINUS M 0001 2S/T - SINUS M 0002 2S/T SINUS M 0003 2S/T - SINUS M 0003 4T SINUS M 0001 4T - SINUS M 0002 4T

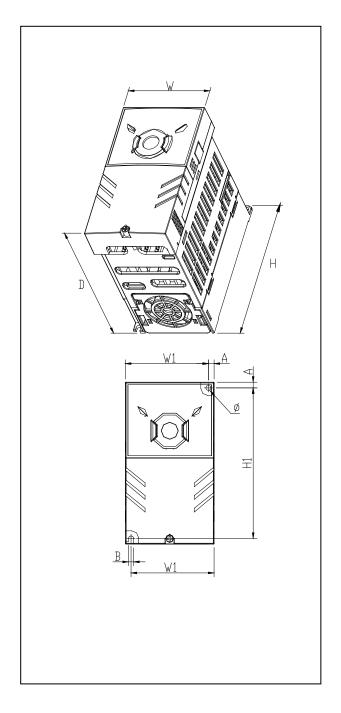


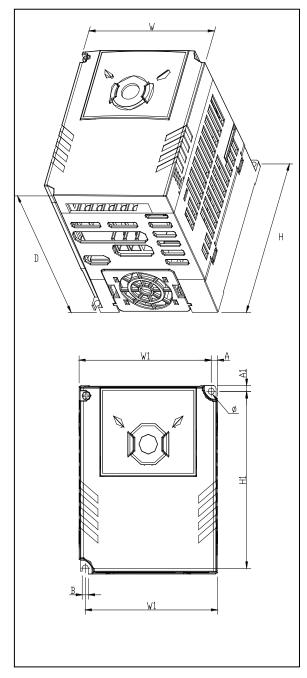



SINUS M 0005 2S/T - SINUS M 0007 2S/T SINUS M 0005 4T - SINUS M 0007 4T SINUS M 0011 2S/T - SINUS M 0014 2S/T SINUS M 0011 4T - SINUS M 0014 4T

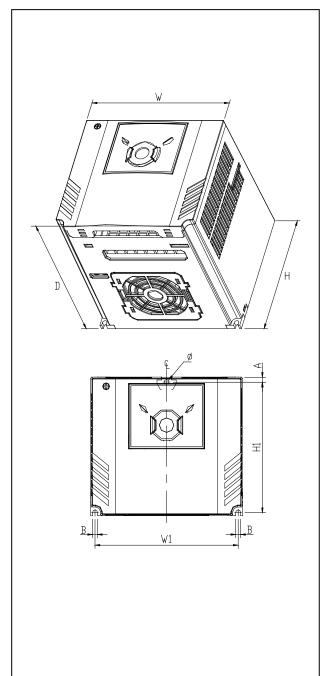


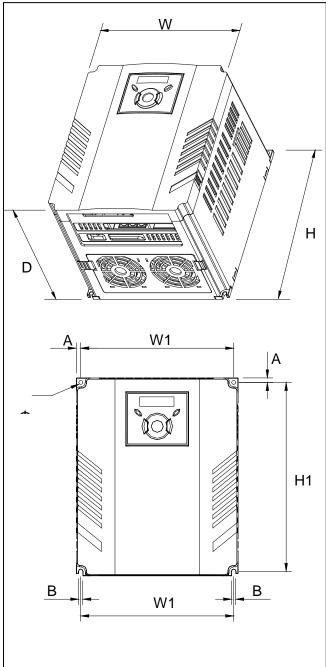




SINUS M 00017 2S/T - SINUS M 0020 2S/T SINUS M 0017 4T - SINUS M 0020 4T

SINUS M 0025 2S/T - SINUS M 0030 2S/T SINUS M 0025 4T - SINUS M 0030 4T

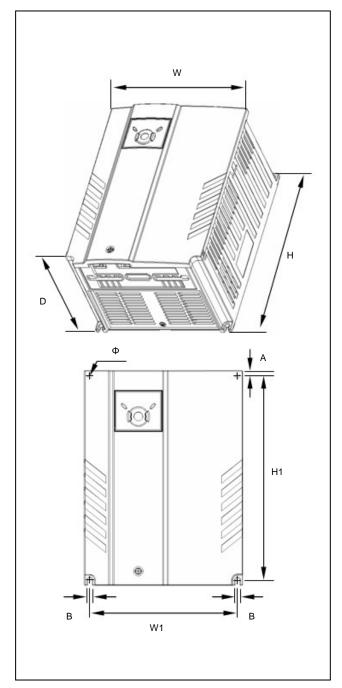

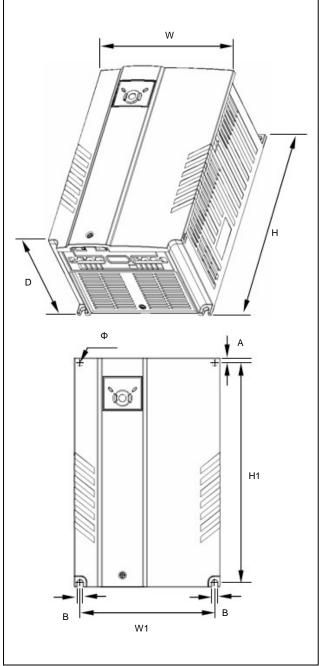



Invertor	[kW]*	W	W1	Н	H1	D	Φ	Α	В	[ka]
Inverter	[KVV]	[mm]	[mm]	[mm]	[mm]	[mm]	Ψ	[mm]	[mm]	[kg]
SINUS M 0001 2S/T	0.4	70	65.5	128	119	130	4.0	4.5	4.0	0.76
SINUS M 0002 2S/T	0.75-1.1	70	65.5	128	119	130	4.0	4.5	4.0	0.77
SINUS M 0003 2S/T	1.5-1.8	100	95.5	128	120	130	4.5	4.5	4.5	1.12
SINUS M 0005 2S/T	2.2-3	140	132	128	120.5	155	4.5	4.5	4.5	1.84
SINUS M 0007 2S/T	4-4.5	140	132	128	120.5	155	4.5	4.5	4.5	1.89
SINUS M 0011 2S/T	5.5	180	170	220	210	170	4.5	5.0	4.5	3.66
SINUS M 0014 2S/T	7.5-9.2	180	170	220	210	170	4.5	5.0	4.5	3.66
SINUS M 0017 2S/T	11	235	219	320	304	189.5	7.0	8.0	7.0	9.00
SINUS M 0020 2S/T	15	235	219	320	304	189.5	7.0	8.0	7.0	9.00
SINUS M 0025 2S/T	18.5	260	240	410	392	208.5	10.0	10.0	10.0	13.3
SINUS M 0030 2S/T	22	260	240	410	392	208.5	10.0	10.0	10.0	13.3
SINUS M 0001 4T	0.4	70	65.5	128	119	130	4.0	4.5	4.0	0.76
SINUS M 0002 4T	0.75-0.9	70	65.5	128	119	130	4.0	4.5	4.0	0.77
SINUS M 0003 4T	1.5	100	95.5	128	120	130	4.5	4.5	4.5	1.12
SINUS M 0005 4T	2.2	140	132	128	120.5	155	4.5	4.5	4.5	1.84
SINUS M 0007 4T	4.5	140	132	128	120.5	155	4.5	4.5	4.5	1.89
SINUS M 0011 4T	5.5	180	170	220	210	170	4.5	5.0	4.5	3.66
SINUS M 0014 4T	7.5	180	170	220	210	170	4.5	5.0	4.5	3.66
SINUS M 0017 4T	11	235	219	320	304	189.5	7.0	8.0	7.0	9.00
SINUS M 0020 4T	15	235	219	320	304	189.5	7.0	8.0	7.0	9.00
SINUS M 0025 4T	18.5	260	240	410	392	208.5	10.0	10.0	10.0	13.3
SINUS M 0030 4T	22	260	240	410	392	208.5	10.0	10.0	10.0	13.3


^{*} The motor power is based on 220Vac for models "2S/T" and on 380Vac for models "4T".



CHAPTER 3 - WIRING

3.1 Terminal wiring (Control I/Os)

Note: Wiring relates to the NPN configuration (see PNP/NPN selection and connector for communication option).

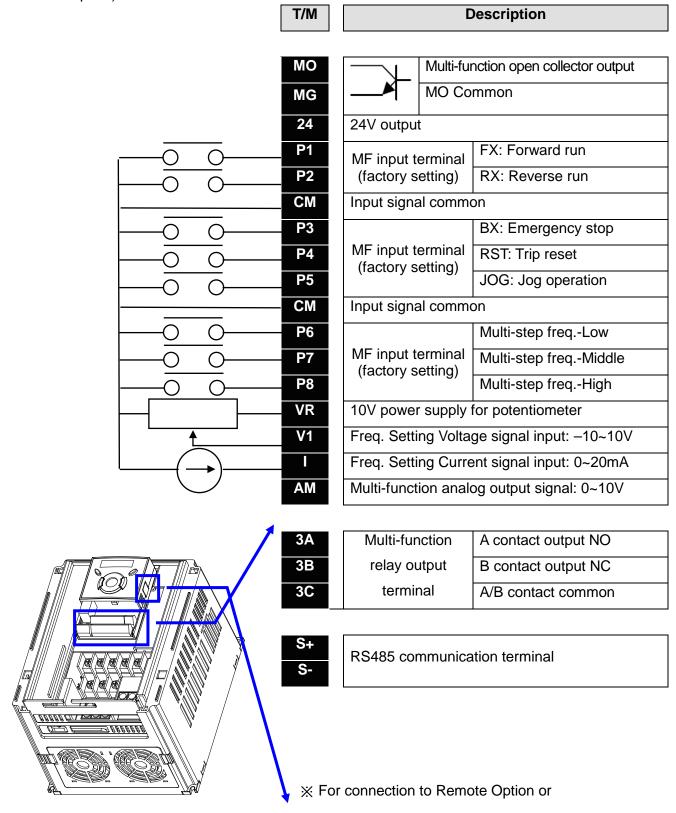



parameter copy.




Power Terminal Wiring

* Power terminal wiring (0.4 ~ 7.5kW)

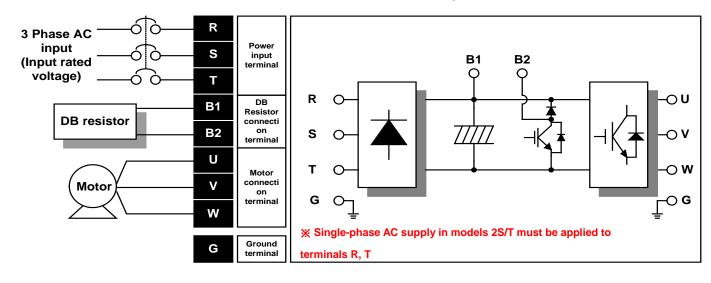


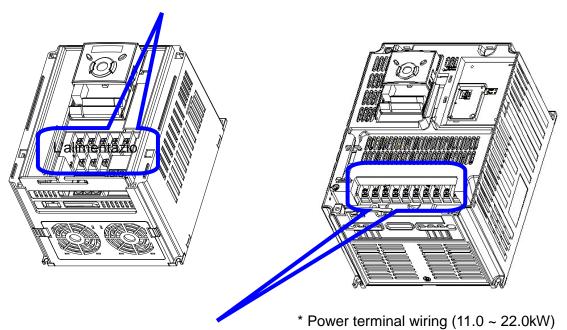

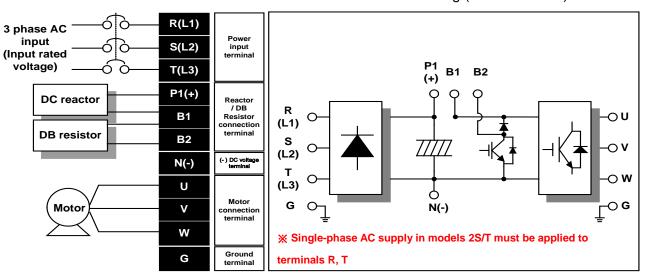




3.2 Power terminal block

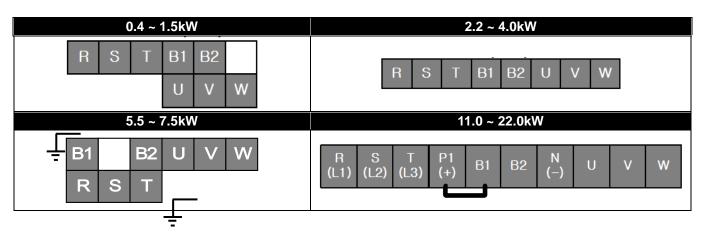

		S,T Size		V, W e Size	Ground Wire		Screw Size	Terminal Torque
	mm ²	AWG	mm ²	AWG	mm ²	AWG	Terminal Screw Size	Screw Torque (kgf·cm/lb·in)
SINUS M 0001 2S/T	2.5	14	2.5	14	4	12	M3.5	10/8.7
SINUS M 0002 2S/T	2.5	14	2.5	14	4	12	M3.5	10/8.7
SINUS M 0003 2S/T	2.5	14	2.5	14	4	12	M3.5	10/8.7
SINUS M 0005 2S/T	2.5	14	2.5	14	4	12	M4	15/13
SINUS M 0007 2S/T	4	12	4	12	4	12	M4	15/13
SINUS M 0011 2S/T	6	10	6	10	6	10	M5	32/28
SINUS M 0014 2S/T	10	8	10	8	6	10	M5	32/28
SINUS M 0017 2S/T	16	6	16	6	16	6	M6	30.7/26.6
SINUS M 0020 2S/T	20	4	20	4	16	6	M6	30.7/26.6
SINUS M 0025 2S/T	35	2	35	2	20	4	M8	30.6/26.5
SINUS M 0030 2S/T	35	2	35	2	20	4	M8	30.6/26.5
SINUS M 0001 4T	2.5	14	2.5	14	2.5	14	M3.5	10/8.7
SINUS M 0002 4T	2.5	14	2.5	14	2.5	14	M3.5	10/8.7
SINUS M 0003 4T	2.5	14	2.5	14	2.5	14	M4	15/13
SINUS M 0005 4T	2.5	14	2.5	14	2.5	14	M4	15/13
SINUS M 0007 4T	2.5	14	2.5	14	2.5	14	M4	15/13
SINUS M 0011 4T	4	12	2.5	14	4	12	M5	32/28
SINUS M 0014 4T	4	12	4	12	4	12	M5	32/28
SINUS M 0017 4T	6	10	6	10	10	8	M5	30.7/26.6
SINUS M 0020 4T	16	6	10	8	10	8	M5	30.7/26.6
SINUS M 0025 4T	16	6	10	8	16	6	M6	30.6/26.5
SINUS M 0030 4T	20	4	16	6	16	6	M6	30.6/26.5

 ^{*} Strip the sheaths of the wire insulation for 7mm when a ring terminal is not used for power connection.



^{*}For Sinus M 0025 and Sinus M 0030, UL-approved Ring or Fork Terminals must be used.



/!\ CAUTION

- Apply the rated torque to terminal screws. Loosen screws can cause short circuit and malfunction. Tightening the screws too much can damage the terminals and cause short circuit and malfunction.
- Use copper wires only with 600V, 75°C ratings for wiring.
- Make sure that the input power is off before wiring.
- When power supply is switched off, wait at least 10 minutes after the LED keypad display is off before you start working on it.
- Applying input power supply to output terminals U, V and W causes internal inverter damage.
- Use ring terminals with insulated caps when wiring the input power and motor wiring.
- Do not leave wire fragments inside the inverter. Wire fragments can cause faults, breakdowns and malfunctions.
- When more than one motor is connected to one inverter, the total wire length should be less than 200m. Do not use a 3-wire cable for long distances. Due to increased leakage capacitance between wires, the overcurrent protection may trip, or the equipment connected to the output side may malfunction. In case of long wire length, it should be required to lower carrier frequency or use du/dt filters or sinusoidal filters.

Length between Inverter and Motor	Up to 50m	Up to 100m	More than 100m
Allowable Carrier Frequency	Less than 15kHz	Less than 5kHz	Less than 2.5kHz

(For models of less than 3.7kW, the wire length should be less than 100m.)

- Never short B1 and B2 terminals. Shorting terminals may cause internal inverter damage.
- Do not install any power factor capacitor, surge suppressor or RFI filters in the output side
 of the inverter. Doing so may damage these components.

WARNING

The inverter power supply must be connected to R, S, and T Terminals.

Connecting it to U, V, W terminals causes internal damages to the inverter. Arranging the phase sequence is not necessary.


Motor should be connected to U, V, and W Terminals.

If the forward command (FX) is on, the motor should rotate counterclockwise when viewed from the load side of the motor. If the motor rotates in the reverse direction, switch U and V terminals.



! WARNING

- Use the Type 3 grounding method (Ground impedance: Below 100 Ω) for 2S/T class inverters.
- Use the Special Type 3 grounding method (Ground impedance: Below 10Ω) for 4T class inverters.
- Use the dedicated ground terminal to ground the inverter. Do not use the screw in the case or chassis, etc for grounding.

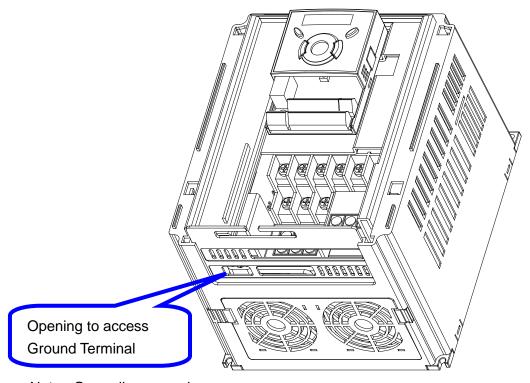

■ Note : Grounding procedure


- 1) Remove the front cover.
- 2) Connect the Grounding wire to the ground terminal through the opening for ground terminal as shown above. Enter the screw driver from vertical to the terminal and secure the screw tightly.

Note : Grounding work guidance

Inverter	2S/T Class	(1/3 phase 200	0-230Vac)	4T Class (3 phase 380-480Vac)			
capacity	Wire size	Terminal screw	Grounding method	Wire size	Terminal screw	Grounding method	
0.4~4.0 kW	4 mm ²	M3		2.5 mm ²	M3		
5.5~7.5 kW	6 mm ²	M4	Type 3	4 mm ²	M4	Special	
11 ~ 15 kW	16 mm ²	M5	Type 3	6 mm ²	M5	Type 3	
18.5~22 kW	25 mm ²	M6		16 mm ²	M5		



3.3 Control terminal block

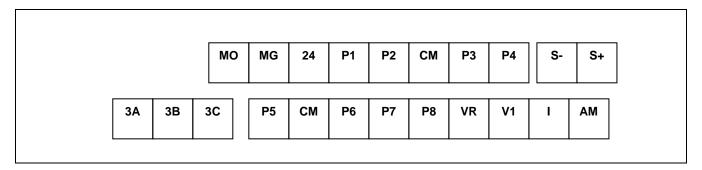

		Wire s	size[mm²]	Screw	Torque	
T/M	Terminal Description	Single wire	Stranded	size	Torque [Nm]	Specification
P1~P8	Multi-function input T/M 1-8	1.0	1.5	M2.6	0.4	
СМ	Common Terminal	1.0	1.5	M2.6	0.4	
VR	Power supply for external potentiometer	1.0	1.5	M2.6	0.4	Output voltage: 12V Max output current: 10mA Potentiometer:1 ~ 5kΩ
V1	Input terminal for Voltage operation	1.0	1.5	M2.6	0.4	Max input voltage: -12V ~ +12V input
T	Input terminal for Current operation	1.0	1.5	M2.6	0.4	0 ~ 20mA input Internal resistor: 250Ω
AM	Multi-function analog output terminal	1.0	1.5	M2.6	0.4	Max output voltage: 11[V] Max output current: 100mA
МО	Multi-function terminal for open collector	1.0	1.5	M2.6	0.4	Below 26V DC,100mA
MG	MO Common	1.0	1.5	M2.6	0.4	
24	24V External Power Supply	1.0	1.5	M2.6	0.4	Max output current: 100mA
3A	Multi-function relay output A contact NO	1.0	1.5	M2.6	0.4	
3B	Multi-function relay output B contact NC	1.0	1.5	M2.6	0.4	Below 250V AC, 1A Below 30V DC, 1A
3C	Common for Multi-function relays	1.0	1.5	M2.6	0.4	


Note 1) Tie the control wires more than 15cm away from the control terminals. Otherwise, it interferes with front cover reinstallation.


- Note 2) Use Copper wires rated 600V, 75°C and higher.
- Note 3) Use the recommended tightening torque when securing terminal screws.
- Note 4) When you use external power supply (24V) for multi-function input terminal (P1~P8), terminals will be active above 12V level. Take caution not to drop the voltage below 12V.




3.4 PNP/NPN selection and connector for communication option

1. When using DC 24V inside inverter [NPN]

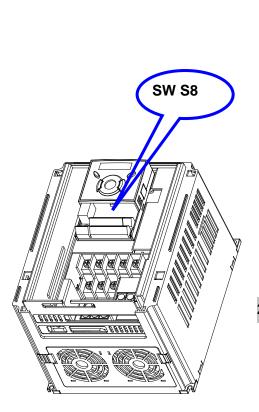

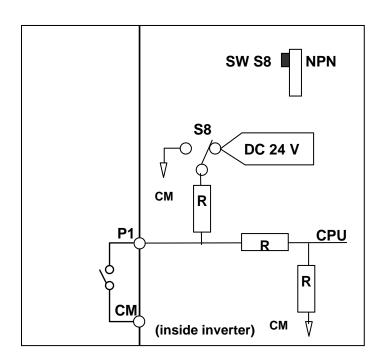


2. When using external DC 24V [PNP]

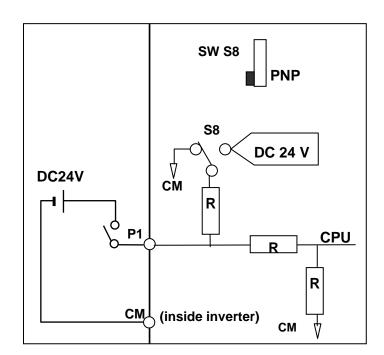



3.5 Optional External Relay

An optional external relay with a +24Vdc coil may be connected to the Open Collector output as shown below:

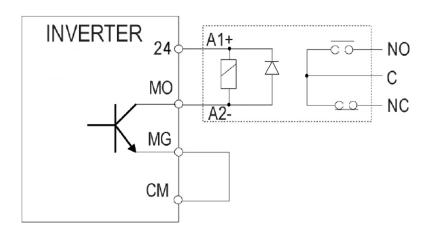

Caution: Respect the features of terminals MO and MG.


Notes:



CHAPTER 4 - BASIC CONFIGURATION

4.1 Connection of peripheral devices to the inverter

The following devices are required to operate the inverter. Proper peripheral devices must be selected and correct connections made to ensure proper operation. An incorrectly applied or installed inverter may cause a system malfunction or reduction in product life as well as component damage. Must be red and understood this manual thoroughly before proceeding.

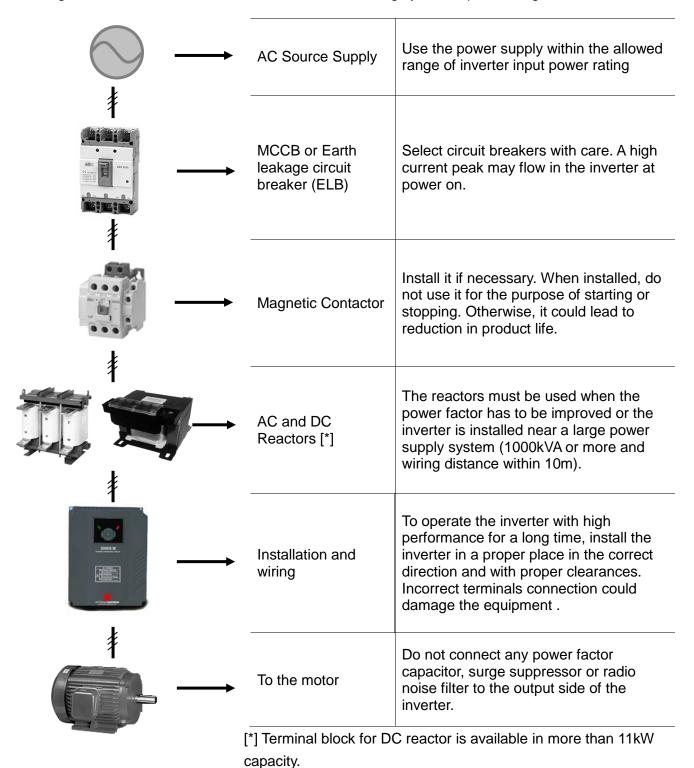



4.2 Recommended MCCBs and MCs

Model	МССВ	AC1 MC
Wodel	Current [A]	Current [A]
Sinus M 0001 2S/T	6	25
Sinus M 0002 2S/T	10	25
Sinus M 0003 2S/T	16	25
Sinus M 0005 2S/T	20	25
Sinus M 0007 2S/T	32	45
Sinus M 0011 2S/T	50	60
Sinus M 0014 2S/T	63	100
Sinus M 0017 2S/T	80	100
Sinus M 0020 2S/T	80	100
Sinus M 0025 2S/T	100	125
Sinus M 0030 2S/T	125	160

Model	МССВ	AC1 MC
Model	Current [A]	Current [A]
Sinus M 0001 4T	4	25
Sinus M 0002 4T	6	25
Sinus M 0003 4T	8	25
Sinus M 0005 4T	10	25
Sinus M 0007 4T	16	25
Sinus M 0011 4T	25	30
Sinus M 0014 4T	32	45
Sinus M 0017 4T	50	60
Sinus M 0020 4T	63	100
Sinus M 0025 4T	80	100
Sinus M 0030 4T	80	100



4.3 Recommended Fuses and Reactors

Model		ut Fuse al Fuse)	AC Input	DC Reactor	
Model	Current [A]	Voltage [V]	Reactor	DC Reactor	
Sinus M 0001 2S/T	10	500	IM0126000	_	
Sinus M 0002 2S/T	10	500	IM0126002	_	
Sinus M 0003 2S/T	15	500	IM0126004	_	
Sinus M 0005 2S/T	25	500	IM0126044	_	
Sinus M 0007 2S/T	40	500	IM0126044	_	
Sinus M 0011 2S/T	40	500	IM0126084	_	
Sinus M 0014 2S/T	50	500	IM0126124	_	
Sinus M 0017 2S/T	70	500	IM0126144	IM0140254	
Sinus M 0020 2S/T	100	500	IM0126164	IM0140254	
Sinus M 0025 2S/T	100	500	IM0126164	IM0140284	
Sinus M 0030 2S/T	125	500	IM0126164	IM0140284	
Sinus M 0001 4T	5	500	IM0126000	_	
Sinus M 0002 4T	10	500	IM0126000	_	
Sinus M 0003 4T	10	500	IM0126000	_	
Sinus M 0005 4T	10	500	IM0126002	_	
Sinus M 0007 4T	20	500	IM0126004	_	
Sinus M 0011 4T	20	500	IM0126044	_	
Sinus M 0014 4T	30	500	IM0126044	_	
Sinus M 0017 4T	35	500	IM0126084	IM0140154	
Sinus M 0020 4T	45	500	IM0126124	IM0140204	
Sinus M 0025 4T	60	500	IM0126124	IM0140204	
Sinus M 0030 4T	70	500	IM0126144	IM0140254	

• Short Circuit Rating

Suitable for use on a circuit capable of delivering not more than 65kA symmetrical Amperes. 240V drives or 480V drives Volts Maximum.


Short Circuit FUSE/BREAKER Marking


Use Class H or K5 UL Listed Input Fuses and UL Listed breakers only. See the table above for the voltage and current rating of the fuses and the breakers.



AC Reactors

INDUCTANCE MODEL		DIMENSIONS					HOLE	WGT	LEAKAGE			
IVIODEL	mH	Α	TYPE	L	Н	Р	М	Е	G	mm	kg	W
IM0126004	2.00	11	Α	120	125	75	25	67	55	5	2.9	29
IM0126044	1.27	17	Α	120	125	75	25	67	55	5	3	48
IM0126084	0.70	32	В	150	130	115	50	125	75	7x14	5.5	70
IM0126124	0.51	43	В	150	130	115	50	125	75	7x14	6	96
IM0126144	0.30	68	В	180	160	150	60	150	82	7x14	9	150
IM0126164	0.24	92	В	180	160	150	60	150	82	7x14	9.5	183

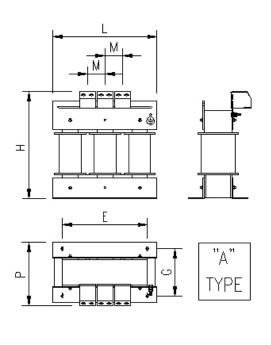

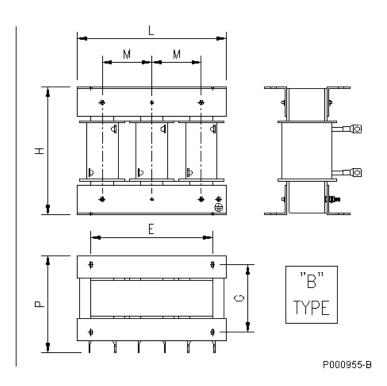


DC Reactors

INDUCTANCE		TANCE NGS		DIM	IENSIONS			HOLE	WGT	LEAKAGE
MODEL	mH	Α	Ш	Ι	Ρ	Ш	G	mm	kg	W
IM0140154	2.8	32.5	160	140	120	100	100	7x10	8	50
IM0140204	2	47	160	210	160	97	120	7x14	13	80
IM0140254	1.2	69	160	210	160	97	120	7x14	13.5	90
IM0140274	0.96	94	contact Elettronica Santerno							



CHAPTER 5 - PROGRAMMING KEYPAD

5.1 Keypad features

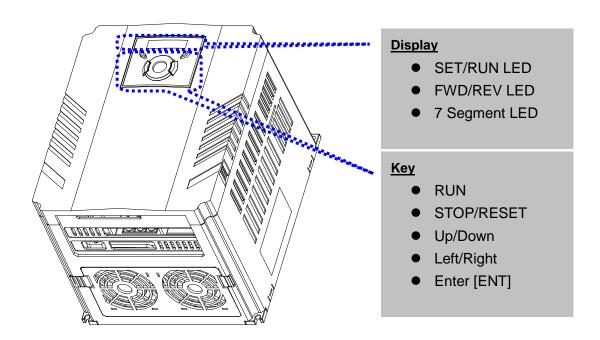

Display								
FWD	Lit during forward run							
REV	Lit during reverse run	Blinks when a fault occurs						
RUN	Lit during Operation	Dilliks when a fault occurs						
SET	Lit during parameter setting							
7 segment	Displays operation status and parameter information							

Key	S	
RUN		Run command
STOP/RESET		STOP: Stop command during operation, RESET: Reset command when fault occurs.
	UP	Used to scroll through codes or increase parameter value
▼	Down	Used to scroll through codes or decrease parameter value
◀	Left	Used to jump to other parameter groups or move a cursor to the left to change the parameter value
•	Right	Used to jump to other parameter groups or move cursor to the right to change the parameter value
•	ENT	Used to set the parameter value or save the changed parameter value




5.2 Alpha-numeric view on the LED keypad

Ü	0	R	Α	ŗ.	K	11	U
1	1	P	В	1	L	L	V
2	2	7	С	-	M	11	W
3	3	ri d	D	, Ti	N	4	X
4	4	F	E	L.	0	77	Υ
5	5	F	F	P	Р	11.	Z
5	6	につ	G	4	Q		
7	7	K	Н	,-	R		
8	8	;	ı	5	S		
9	9	_;	J	F	Т		




5.3 Moving to other groups

• There are 4 different parameter groups in Sinus M series as shown below.

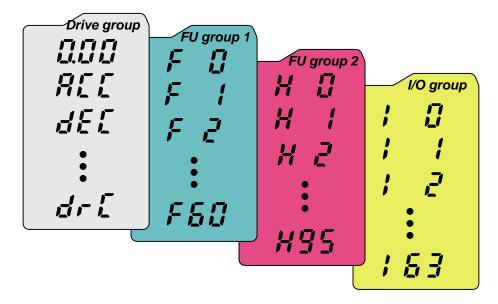

Drive group	Basic parameters necessary for the inverter to run. Parameters such as Target frequency, Accel/Decel time settable.
Function group 1 Basic function parameters to adjust output frequency and voltage.	
Function group 2	Advanced function parameters to set parameters for such as PID Operation and second motor operation.
I/O (Input/Output) group	Parameters necessary to make up a sequence using Multi- function input/output terminal.

 Moving to other parameter groups is only available in the first code of each group as the figure shown below.

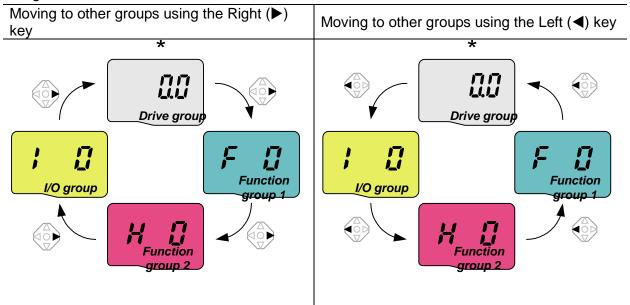


^{*} Target frequency can be set at **0.0** (the 1st code of drive group). Even though the preset value is 0.0, it is user-settable. The changed frequency will be displayed after it is changed.



• How to move to other groups at the 1st code of each group

1		 The 1st code in Drive group "0.00" will be displayed when AC input power is applied. Press the right arrow (▶) key once to go to Function group 1.
2	F	 The 1st code in Function group 1 "F0" will be displayed. Press the right arrow (►) key once to go to Function group 2.
3	H D	 The 1st code in Function group 2 "H0" will be displayed. Press the right arrow (►) key once to go to I/O group.
4		The 1st code in I/O group "I0" will be displayed Press the right arrow (▶) key once again to return to Drive group.
5		Return to the 1st code in Drive group "0.00".
♣ If	the left arrow	key (◀) is used, the above will be executed in the reverse order.

How to move to other groups from any codes other than the 1st code

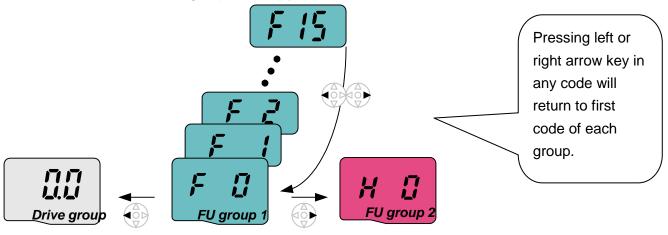


To move from the F15 to function group 2

1	F 15	In F15, press the Left (◄) or Right arrow (▶) key. Pressing the key goes to the first code of the group.
2	F	 The 1st code in function group 1 "F0" is displayed. Press the right arrow (▶) key.
3	H Ü	The 1 st code in function group 2 "H0" will be displayed.



5.4 How to change the codes in a group

Code change in Drive group

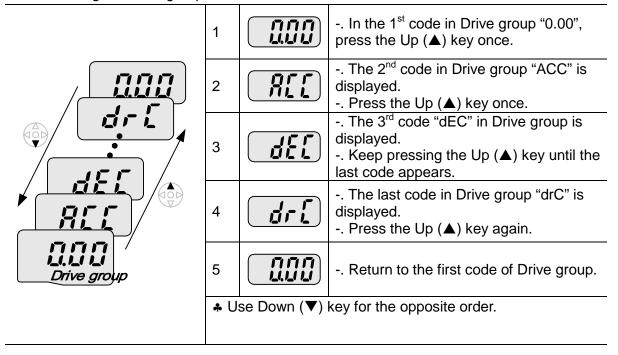

Code jump


When moving from the "F0" to the "F15" directly 1 -. Press the Ent (●) key in "F0". -. 1 (the code number of F1) is displayed. 2 Use the Up (▲) key to set to 5. -. "05" is displayed by pressing the Left (◄) key once to move the cursor to the left. The numeral having a cursor is 3 displayed brighter. In this case, 0 is active. -. Use the Up (▲) key to set to 1. -. **1**5 is set. 4 FU group 1 -. Press the Ent (●) key once. 5 -. Moving to F15 has been complete.

♣ Function group 2 and I/O group are settable with the same setting.



Navigating codes in a group

When moving from F1 to F15 in Function group 1

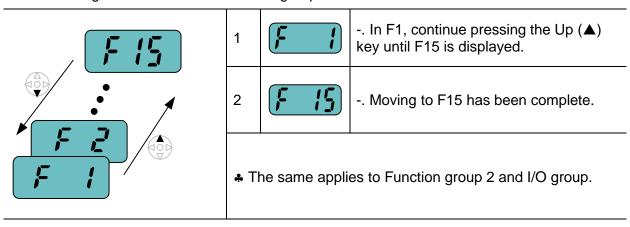

♣ Note: Some codes will be skipped in the middle of increment (▲)/decrement (▼) for code change. That is because it is programmed that some codes are intentionally left blank for future use or the codes user does not use are invisible.


For example, when F24 [High/low frequency limit select] is set to "O (No)", F25 [High frequency limit] and F26 [Low frequency limit] are not displayed during code change. But When F24 is set to "1(Yes)", F25 and F26 will appear on the display.



5.5 Parameter setting

Changing parameter values in Drive Group

When changing ACC time from 5.0 sec to 16.0 sec

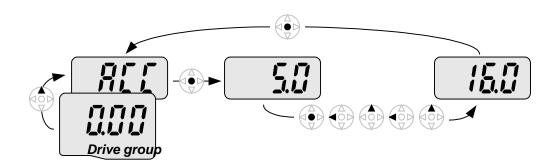

1		In the first code "0.00", press the Up (▲) key once to go to the second code.
2		 ACC [Accel time] is displayed. Press the Ent key (●) once.
3		 Preset value is 5.0, and the cursor is in the digit 0. Press the Left (◄) key once to move the cursor to the left.
4	5. 0	The digit 5 in 5 .0 is active. Then press the Up (▲) key once.
5	5. []	 The value is increased to 6.0 Press the Left (◄) key to move the cursor to the left.
6		 0.60 is displayed. The first 0 in 0.60 is active. Press the Up (▲) key once.
7		 16.0 is set. Press the Ent (●) key once. 16.0 is blinking. Press the Ent (●) key once again to return to the parameter name.
8		ACC is displayed. Accel time is changed from 5.0 to 16.0 sec.


♣ In step 7, pressing the Left (◄) or Right (▶) key while 16.0 is blinking will disable the setting.

Note 1) Pressing the Left (\blacktriangleleft) / Right (\blacktriangleright) /Up (\blacktriangle) /Down (\blacktriangledown) key while cursor is blinking will cancel the parameter value change. Pressing the Enter key (\bullet) in this status will enter the value into memory.



Frequency setting

 When changing run frequency to 30.05 Hz in Drive group




1		In "0.00", press the Ent (●) key once.
2		 The second decimal 0 becomes active. Press the UP (▲) key until 5 is displayed.
3		Press the Left (◀) key once.
4		The first decimal 0 becomes active Press the Left (◄) key once.
5		Press the Left (◀) key once.
6		Set 3 using UP (▲) key.
7		Press the Ent (●) key 30.05 is blinking Press the Ent (●) key.
8	3005	30.05 is entered into memory.

- ♣ Sinus M display can be extended to 5 digits using left (◄)/right (▶) keys.
- Parameter setting is disabled when pressing other than Enter Key in step 7.



• Changing parameter value in Input/Output group

When changing the parameter value of F28 from 2 to 5

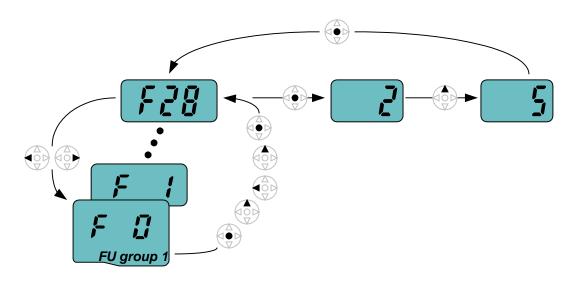

1		In F0, press the Ent (●) key once.
2		 Check the present code number. Increase the value to 8 by pressing the Up (▲) key.
3		When 8 is set, press the Left (◀) key once.
4		 0 in 08 is active. Increase the value to 2 by pressing the Up (▲) key.
5		2 8 is displayed Press the Ent (●) key once.
6	FZB	 The parameter number F28 is displayed. Press the Ent (●) key once to check the set value.
7		 The preset value 2 is displayed. Increase the value to 5 using UP key (▲).
8	5	Press the Ent (●) key twice.
9	(F 28)	 Parameter change is complete. Press either the Left (◄) or Right (►) key.
10	F	Moving to first code of Function group 1 is complete.


♣ The above setting is also applied to change parameter values in function group 2 and I/O group.



5.6 Monitoring of operation status

Output current display

Monitoring output current in Drive group

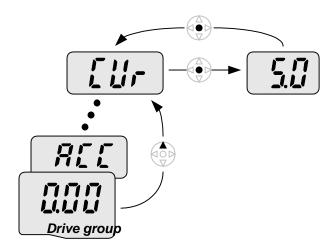


1	In [0.0], continue pressing the Up (▲) or Down (▼) key until [CUr] is displayed.
2	 Monitoring output current is provided in this parameter. Press the Enter (●) key once to check the current.
3	 Present output current is 5 A. Press the Enter (●) key once to return to the parameter name.
4	Return to the output current monitoring code.

♣ Other parameters in Drive group such as dCL (Inverter DC link voltage) or vOL (Inverter output voltage) can be monitored with the same method.




Fault display

How to monitor a fault condition in the Drive group

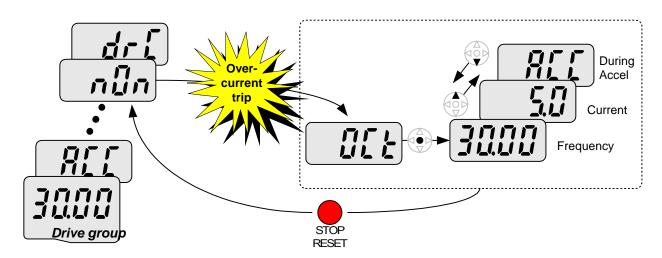

1		 This message appears when an Overcurrent fault occurs. Press the Enter (●) key or UP/Down key once.
2	3000	 The run frequency at the time of fault (30.0) is displayed. Press the Up (▲) key once.
3	5.0	 The output current at the time of fault is displayed. Press the Up (▲) key once.
4	SE .	 Operating status is displayed. A fault occurred during acceleration. Press the STOP/RST key once.
5	uñu	A fault condition is cleared and "nOn" is displayed.

When more than one fault occurs at the same time

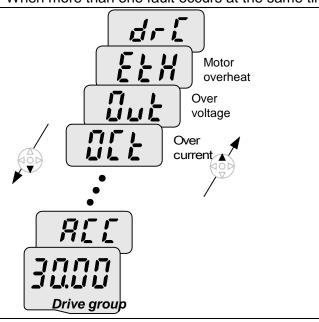


-. Maximum three faults information is displayed as shown left.



Parameter initialize

How to initialize parameters of all four groups in H93

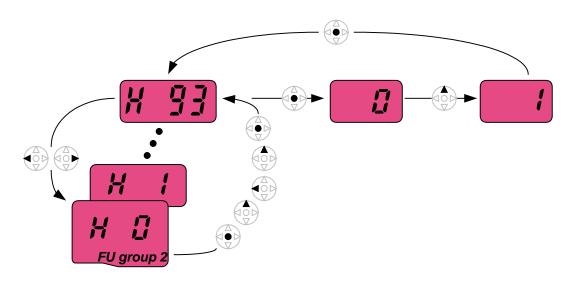

1	<u>u ii</u>	In H0, press the Enter (●) key once.
2		 Code number of H0 is displayed. Increase the value to 3 by pressing the Up (▲) key.
3	3	In 3, press the Left (◄) key once to move the cursor to the left.
4		 03 is displayed. 0 in 03 is active. Increase the value to 9 by pressing the Up (▲) key.
5	93	93 is set Press the Enter (●) key once.
6	H 33	 The parameter number is displayed. Press the Enter (●) key once.
7		 Present setting is 0. Press the Up (▲) key once to set to 1 to activate parameter initialize.
8		Press the Enter (●) key twice.
9	$H \mathcal{G}$	 Parameter initialize is complete. Press either the Left (◄) or Right (►) key.
10		Return to H0.



CHAPTER 6 - BASIC OPERATION

6.1 Frequency Setting and Basic Operation

Caution: The following instructions are given based on the fact that all parameters are set to factory defaults. Results could be different if parameter values are changed. In this case, initialize parameter values back to factory defaults and follow the instructions below.

_	Frequency Setting via keypad & operating via terminals			
1	, ,	Apply AC input power to the in		
2		When 0.00 appears, press the	e Ent (●) key once.	
3		The second digit in 0.00 is lit a Press the Left (◄) key three ti	•	
4		0 0.00 is displayed and the firs Press the Up (▲) key.	t 0 is lit.	
5		10.00 is set. Press the Ent (● 10.00 is blinking. Press the Er	•	
6		Run frequency is set to 10.00 Turn on the switch between P	• •	
7	• <u> </u>	frequency is displayed on the LE	Hz is reached, 10.00 is displayed.	
8	°	LED.	decelerating frequency is displayed on the ed to 0Hz, Run and FWD lamp turn off and 10.00	
3P O R V Motor S N V Motor T T P1(FX) ON OFF				
		Wiring	Operating pattern	




•	Frequency Setting via potentiometer & operating via terminals			
1		Apply AC input power to the inv	verter.	
2		When 0.00 appears Press the	Up (▲) key four times.	
3	Frq	Frq is displayed. Frequency se Press the Ent (●) key once.	etting mode is selectable.	
4		Present setting method is set to Press the Up (▲) key three time	o 0 (frequency setting via keypad). nes.	
5	3	After 3 (Frequency setting via p	potentiometer) is set, press the Ent (●) key once.	
6	Frq	Frq is redisplayed after 3 stops Turn the potentiometer to set to	s blinking. o 10.00 Hz in either Max or Min direction.	
7		RUN lamp begins to blink with displayed on the LED.	(FX) and CM (See Wiring below). FWD lamp lit and the accelerating frequency is eached, the value is displayed as shown left. (FX) and CM terminals.	
8			decelerating frequency is displayed on the LED. d to 0Hz, Run and FWD lamp turn off and 10.00	
	3P AC input	R V Motor T P1(FX)	Freq. ON OFF	
		Wiring	Operating pattern	



• Frequency setting via potentiometer & operating via the Run key

1		Apply AC input power to the inverter.	
2		When 0.00 is displayed, press the Up (▲) key three times.	
3 D 'r U		 "drv" is displayed. Operating method is selectable. Press the Ent (●) key. 	
4		 Check the present operating method ("1": Run via control terminal). Down (▼) key once. 	
5		After setting "0", press the Ent (●) key. When 0 is blinking, press the Ent again.	
6 dru		"drv" is displayed after "0" is blinking. Operation method is set via the Run k on the keypad Press the Up (▲) key once.	еу
7 F, Q		 Different frequency setting method is selectable. Press the Ent (●) key. 	
8		 Check the present frequency setting method ("0" is run via keypad). Press the Up (▲) key three times. 	
9		After checking "3" (frequency setting via potentiometer), press the Ent (●) k twice.	сеу
10 F-9		 "Frq" is displayed. Frequency is set via the potentiometer. Turn the potentiometer to set to 10.0 Hz in either Max or Min direction.	
11 0 1000	•	Press the Run key on the keypad RUN lamp begins to blink with FWD lamp lit and accelerating frequency is displayed on the LED When run frequency 10Hz is reached, 10.00 is displayed as shown left Press the STOP/RST key.	
12 0 1000	0	RUN lamp begins to blink and decelerating frequency is displayed on the LED When run frequency is reached to 0Hz, Run and FWD lamp turn off and 10 is displayed.	.00
9 3 10 F, 9 11 • 1000		 Press the Up (▲) key three times. After checking "3" (frequency setting via potentiometer), press the Ent (€ twice. "Frq" is displayed. Frequency is set via the potentiometer. Turn the potentiometer to set to 10.0 Hz in either Max or Min direction. Press the Run key on the keypad. RUN lamp begins to blink with FWD lamp lit and accelerating frequency displayed on the LED. When run frequency 10Hz is reached, 10.00 is displayed as shown left. Press the STOP/RST key. RUN lamp begins to blink and decelerating frequency is displayed on the LED. When run frequency is reached to 0Hz, Run and FWD lamp turn off and 	is

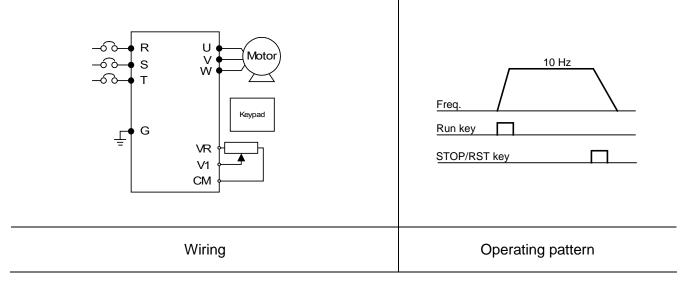



Notes:



CHAPTER 7 - FUNCTION LIST

7.1 Drive group

LED display	Parameter name	Setting range		D	escription	Factory defaults	Adj. during run
0.00	[Frequency command]	0 ~ 400 [Hz]	the Dui Dui Dui Mu It ca	inverter is coring Stop: From Stop: From Stop: Our ing Multi-step frequ		0.00	0
ACC	[Accel time]	0 ~ 6000			cel/Decel operation, this	5.0	0
dEC	[Decel time]	[Sec]	par 0.	ameter serve	es as Accel/Decel time	10.0	0
drv	[Drive mode]	0 ~ 3	0	keypad		1	Х
			1	Terminal	FX: Motor forward run RX: Motor reverse run		
			2	operation	FX: Run/Stop enable RX: Direction	_	
			3	RS485 con	nmunication		
Frq	[Frequency	0 ~ 8	0	Digital	Keypad setting 1	0	X
	setting method]		1		Keypad setting 2	-	
			2	- Analog	V1 1: -10 ~ +10 [V]		
			3		V1 2: 0 ~ +10 [V]	-	
			4		Terminal I: 0 ~ 20 [mA]	-	
			5		Terminal V1 setting 1 + Terminal I		
			6		Terminal V1 setting 2+ Terminal I		
			7	RS485			
			8	Digital Volu	me (Up-Down)		
REF	PID Ref	-	Dis	plays PID re	ference	-	-
FBK	PID Feedback	-	Dis	plays PID Fe	eedback	-	-
St1	[Multi-Step frequency 1]	0 ~ 400 [Hz]		s Multi-Step Iti-step opera	frequency 1 during ation.	10.00	0
St2	[Multi-Step frequency 2]			s Multi-Step Iti-step opera	frequency 2 during ation.	20.00	0
St3	[Multi-Step frequency 3]			s Multi-Step Iti-step opera	frequency 3 during ation.	30.00	0
CUr	[Output current]		Dis mo		tput current to the	-	-



LED display	Parameter name	Setting range			D	escription	Factory defaults	Adj. during run
rPM	[Motor RPM]		Disp	olays	the nu	mber of Motor RPM.	-	-
dCL	[Inverter DC link voltage]			olays erter.	DC link	voltage inside the	-	-
vOL	[User display select]			ected		displays the item - [Monitoring item	vOL	-
			vOL	vOL Output voltage POr Output power tOr Torque		t voltage		
			PO					
			tOr			e		
nOn	[Fault Display]		and	Displays the types of faults, frequency and operating status at the time of the fault				-
drC	[Direction of motor	F, r		Sets the direction of motor rotat when dry - [Drive mode] is set to			F	0
	rotation select]		F			urd	_	
4)	-		r		Rever			
drv2 1)	[Drive mode 2]	0 ~ 3	0	Run/ keyp	•	ia Run/Stop key on the	1	X
			1	Terminal operation		FX: Motor forward run RX: Motor reverse run	-	
			2		FX: Run/Stop enable RX: Direction			
			3			RS485 Communication		
Frq2 1)	[Frequency	0 ~ 7	0	Digit	al	Keypad setting 1	0	Χ
	setting		1			Keypad setting 2		
	method 2]		2	Anal	og	V1 1: -10 ~ +10 [V]	_	
			3			V1 2: 0 ~ +10 [V]	_	
			4			Terminal I: 0 ~ 20 [mA]		
			5			Terminal V1 setting 1 + Terminal I		
			6	•		Terminal V1 setting 2+ Terminal I		
			7	Digit	al	RS485 Communication		

Displayed only when one of the Multi-function input terminals 1-8 [I17~I24] is set to "22".



LED display	Parameter name	Setting range		D	escription	Factory defaults	Adj. during run
Frq3	[Frequency	0 ~ 7	0	Digital	Keypad setting 1		
	setting		1		Keypad setting 2		
	method]		2		V1 1: -10 ~ +10 [V]		
			3		V1 2: 0 ~ +10 [V]	1	
		4	-	Terminal I: 0 ~ 20 [mA]	0	x	
			5	Analog	Terminal V1 setting 1 + Terminal I		^
			6		Terminal V1 setting 2+ Terminal I		
			7		RS485		
rEF	PID Reference	-	PIE	control star	ndard value setting	0.00	0
FBK	PID Feedback	-	Dis	plays PID Fe	eedback	-	-



7.2 Function group 1

LED display	Parameter name	Min/Max range	Description		Factory defaults	Adj. during run
F0	[Jump code]	0 ~ 64	Sets the parameter code riump.	number to	1	0
F1	[Forward/	0 ~ 2	0 Fwd and rev run ena	ble	0	Х
	Reverse run		1 Forward run disable			
	disable]		2 Reverse run disable			
F2	[Accel pattern]	0 ~ 1	0 Linear		0	X
F3	[Decel pattern]		1 S-curve			
F4	[Stop mode select]	0 ~ 3	Decelerate to stop		0	X
	Joicot		1 DC brake to stop			
			2 Free run to stop			
			Power braking stop			
F8 ¹⁾	[DC Brake start frequency]	0.1 ~ 60 [Hz]	This parameter sets DC be frequency. It cannot be set below F23 frequency].	5.00	X	
F9 ¹⁾	[DC Brake wait time]	0 ~ 60 [sec]	When DC brake frequency the inverter holds the outp setting time before starting	0.1	X	
F10 ¹⁾	[DC Brake voltage]	0 ~ 200 [%]	This parameter sets the any voltage applied to a motor to the set in percent of H33 - current].		50	X
F11 ¹⁾	[DC Brake time]	0 ~ 60 [sec]	This parameter sets the ting apply DC current to a mot motor is at a stop.		1.0	X
F12	[DC Brake start voltage]	0 ~ 200 [%]	This parameter sets the any voltage before a motor state it is set in percent of H33 current].	irts to run.	50	X
F13	[DC Brake start time]	0 ~ 60 [sec]	DC voltage is applied to the DC Brake start time before accelerates.		0	X
F14	[Time for magnetizing a motor]	0 ~ 60 [sec]	This parameter applies the motor for the set time befor accelerates during Sensor control.	1.0	X	
F20	[Jog frequency]	0 ~ 400 [Hz]	This parameter sets the from Jog operation. It cannot be set above F2 frequency].		10.00	0

Displayed only when F4 is set to 1 (DC brake to stop).



LED display	Parameter name	Min/Max range	Description	Factory defaults	Adj. during run
F21 ¹⁾	[Max frequency]	40 ~ 400 [Hz]	This parameter sets the highest frequency the inverter can output. It is frequency reference for Accel/Decel (See H70)	50.00	X
			Caution: Any frequency cannot be set above Max frequency except Base frequency.		
F22	[Base frequency]	30 ~ 400 [Hz]	The inverter outputs its rated voltage to the motor at this frequency (see motor nameplate).	50.00	X
F23	[Start frequency]	0.1 ~ 10 [Hz]	The inverter starts to output its voltage at this frequency. It is the frequency low limit.	0.50	X
F24	[Frequency high/low limit select]	0 ~ 1	This parameter sets high and low limit of run frequency.	0	X
F25 ²⁾	[Frequency high limit]	0 ~ 400 [Hz]	This parameter sets high limit of the run frequency. It cannot be set above F21 – [Max frequency].	50.00	X
F26 ²⁾	[Frequency low limit]	0.1 ~ 400 [Hz]	This parameter sets low limit of the run frequency. It cannot be set above F25 - [Frequency high limit] and below F23 – [Start frequency].	0.50	X
F27	[Torque Boost select]	0 ~ 1	0 Manual torque boost1 Auto torque boost	0	X
F28	[Torque boost in forward direction]	0 ~ 15 [%]	This parameter sets the amount of torque boost applied to a motor during forward run. It is set in percent of Max output voltage.	2	X
F29	[Torque boost in reverse direction]		This parameter sets the amount of torque boost applied to a motor during reverse run. It is set as a percent of Max output voltage	2	X

^{!:} If H40 is set to 3 (Sensorless vector), Max. frequency is settable up to 300Hz.

^{2:} Displayed only when F24 (Frequency high/low limit select) is set to 1.



LED display	Parameter name	Min/Max range	Description	Factory defaults	Adj. during run
F30	[V/F pattern]	0 ~ 2	0 {Linear}1 {Square}2 {User V/F}	0	X
F31 ¹⁾	[User V/F frequency 1]	0 ~ 400 [Hz]	It is used only when V/F pattern is set to 2(User V/F).	15.00	X
F32 1)	[User V/F voltage 1]	0 ~ 100 [%]	It cannot be set above F21 – [Max frequency].	25	Х
F33 ¹⁾	[User V/F frequency 2]	0 ~ 400 [Hz]	The value of voltage is set in percent of H70 – [Motor rated voltage]. The values of the lower-numbered	30.00	Х
F34 ¹⁾	[User V/F voltage 2]	0 ~ 100 [%]	parameters cannot be set above those of higher-numbered.	50	X
F35 ¹⁾	[User V/F frequency 3]	0 ~ 400 [Hz]	J	45.00	X
F36 1)	[User V/F voltage 3]	0 ~ 100 [%]		75	Х
F37 1)	[User V/F frequency 4]	0 ~ 400 [Hz]		60.00	Х
F38 ¹⁾	[User V/F voltage 4]	0 ~ 100 [%]		100	X
F39	[Output voltage adjustment]	40 ~ 110 [%]	This parameter adjusts the amount of output voltage. The set value is the percentage of input voltage.	100	X
F40	[Energy-saving level]	0 ~ 30 [%]	This parameter decreases output voltage according to load status.	0	0
F50	[Electronic thermal select]	0 ~ 1	This parameter is activated when the motor is overheated (time-inverse).	1	0
F51 ²⁾	[Electronic thermal level for 1 minute]	50 ~ 200 [%]	This parameter sets max current capable of flowing to the motor continuously for 1 minute. The set value is the percentage of H33 – [Motor rated current]. It cannot be set below F52 –[Electronic thermal level for continuous].	150	0
F52 ²⁾	[Electronic thermal level for continuous]		This parameter sets the max motor current for continuous operation. It cannot be set higher than F51 – [Electronic thermal level for 1 minute].	100	0

^{1.} Set F30 to 2(User V/F) to display this parameter.

^{2:} Set F50 to 1 to display this parameter.



LED display	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run
F53 ²⁾	[Motor cooling method]	0 ~ 1	0	Standard motor having cooling fan directly connected to the shaft	0	0
			1	A motor using a separate motor to power a cooling fan.		
F54	[Overload warning level]	30 ~ 150 [%]	curren relay o (see I5 The se	arameter sets the amount of to issue an alarm signal to the or multi-function output terminal 64, 155). It value is a percentage of H33-rated current].	150	0
F55	[Overload warning time]	0 ~ 30 [Sec]		time of the current level set in Overload warning level]	10	0
F56	[Overload trip select]	0 ~ 1		arameter turns off the inverter when motor is overloaded.	1	0
F57	[Overload trip level]	30 ~ 200 [%]	This parameter sets the amount of overload current. The value is the percentage of H33- [Motor rated current].		180	0
F58	[Overload trip time]	0 ~ 60 [Sec]	when to	arameter turns off the inverter he current greater than F57- bad trip level] flows to the motor B- [Overload trip time].	60	0

^{2:} Set F50 to 1 to display this parameter.



LED display	Parameter name	Min/Max range			Description		Factory defaults	Adj. during run
F59	[Stall prevention select]	0 ~ 7	dur fred stop	ing acce quency c	eter stops accel eleration, decrea luring constant serating ramp du n.	ses the speed and	0	X
				During Decel	During constant run	During Accel		
				Bit 2	Bit 1	Bit 0		
			0	-	-	-		
			1	-	-	✓		
			2	-	✓	-		
			3	-	✓	✓		
			4	✓	-	-		
			5	✓	-	✓		
			6	✓	✓	-		
			7	✓	✓	✓		
F60	[Stall prevention level]	30 ~ 200 [%]	fund spe The	rent to a ction dur ed or De set valu	eter sets the am ctivate stall preving Acceleration eceleration. ue is the percend current].	vention n, Constant	150	X
F61	[When Stall prevention during deceleration, voltage limit select]	0~1	dec		vention run durir n, select 1if you ge.			
F63	[Save up/down frequency]	0 ~ 1	sav up/ Wh	e the sp down op en 1 is s	eter determines ecified frequence eration. selected, the up/ s saved in F64.	cy during	0	X
F64 ¹⁾	[Saved up/down frequency]	0 ~ 400 [Hz]	F63	, this par	lown frequency" i ameter shows the verter stops or de	e frequency	0	X
F65	[Up-down mode select]	0~2			ect the Up-dow e options:	n mode	0	X
			0	O Increases goal frequency as a standard of Max. frequency/Min. frequency.				
			1	fre	creases as man quencies accor out.			
			2	Av	ailable to comb	ine 1 and 2.		

^{11:} It is shown when F63 is set to 1.



F66	[Up-down step frequency]	0~400 [Hz]	means inc	choosing F65 as 1 or 2, it crease or decrease of according to up-down input.	0.00	X
F70 [Draw run 0~3 mode select]	0~3	0	Inverter does not run as in draw mode	0	X	
	select]	ect]	1	V1(0~10V) input		
			2	I(0~20mA) input		
			3	V1(-10~10V) input		
F71	[Draw rate]	0~100 [%]	Sets rate of draw		0.00	0



7.3 Function group 2

LED		Min/Max		Footon	۸ ۸:
display	Parameter name	range	Description	Factory defaults	Adj. during run
H0	[Jump code]	0~95	Sets the code number to jump.	1	0
H1	[Fault history 1]	-	Stores information on the types	nOn	-
H2	[Fault history 2]	-	of faults, the frequency, the	nOn	-
H3	[Fault history 3]	-	current and the Accel/Decel condition at the time of fault.	nOn	-
H4	[Fault history 4]	-	The latest fault is automatically	nOn	-
H5	[Fault history 5]	-	stored in the H1- [Fault history 1].	nOn	-
H6	[Reset fault history]	0~1	Clears the fault history saved in H1-5.	0	0
H7	[Dwell frequency]	0.1~400 [Hz]	When dwell frequency is issued, the motor restarts to accelerate after dwell frequency is applied to the motor during H8- [Dwell time]. [Dwell frequency] can be set within the range of F21- [Max frequency] and F23- [Start frequency].	5.00	X
H8	[Dwell time]	0~10sec	Sets the time for dwell operation.	0.0	X
H10	[Skip frequency select]	0 ~ 1	Sets the frequency range to skip to prevent undesirable resonance and vibration on the structure of the machine.	0	X
H11 ¹⁾	[Skip frequency low limit 1]	0.1~400 [Hz]	Run frequency cannot be set within the range from H11 to	10.00	Х
H12 ¹⁾	[Skip frequency high limit 1]		H16. The frequency values of the low numbered parameters	15.00	Х
H13 ¹⁾	[Skip frequency low limit 2]		cannot be set above those of the high numbered ones. Settable within the range of F21	20.00	Х
H14 ¹⁾	[Skip frequency high limit 2]		and F23.	25.00	X
H15 ¹⁾	[Skip frequency low limit 3]			30.00	Х
H16 ¹⁾	[Skip frequency high limit 3]			35.00	Х
H17	[S-Curve accel/decel start side]	1~100 [%]	Set the speed reference value to form a curve at the start during accel/decel. If it is set higher, linear zone gets smaller.	40	X
H18	[S-Curve accel/decel end side]	1~100 [%]	Set the speed reference value to form a curve at the end during accel/decel. If it is set higher, linear zone gets smaller.	40	X

^{1.} Only displayed when H10 is set to 1. # H17, H18 are used when F2, F3 are set to 1 (S-curve).



LED display	Parameter name	Min/Max range			Descrip	tion		Factory defaults	Adj. during run
H19	[Input/output phase loss protection	0 ~ 3		prote	phase ection	Output protect	tion	0	0
	select]			В	it 1	Bit	0		
			0		-	-			
			1		-	✓			
			2		√	-			
			3		√	✓ · · · · ·			
H20	[Power On Start select]	0 ~ 1	to 1 Mot	s parameto or 2 (Run or starts a lied while	nal). wer is	0	0		
H21	[Restart after fault reset selection]	0 ~1	to 1 Mot	This parameter is activated when drv is set to 1 or 2 (Run/Stop via Control terminal). Motor accelerates after the fault condition is reset while the FX or RX terminal is ON.					0
H22 ¹⁾	[Speed Search Select]	0 ~ 15	pos	sible fault	er is activat if is necess the motor i		0	0	
				1. H20- [Power On start]	2.Restart after instant power failure	3. Operation after fault	4. Normal accel		
				Bit 3	Bit 2	Bit 1	Bit 0		
			0	-	-	-	-		
			1	-	-	-	✓		
			2	-	-	✓	-		
			3	-	-	✓	✓		
			4	-	✓	-	-		
			5	-	✓	-	✓		
			6	-	√	√	-		
			7	-	✓	✓	√		
			8	√	-	-	-	_	
			9	√	-	-	√		
			10	✓	-	√	-		
			11	√	-	√	√		
			12	√	√	-	-		
			13	√	√	-	√		
			14	√	√	√	-		
			15	✓	✓	✓	✓		

P: Normal acceleration has first priority. Even though #4 is selected along with other bits, Inverter performs Speed search #4.



LED display	Parameter name	Min/Max range	Description	Factory defaults	Adj. during run
H23	[Current level during Speed search]	80~200 [%]	This parameter limits the amount of current during speed search. The set value is the percentage of the H33- [Motor rated current].	100	0
H24	[P gain during Speed search]	0~9999	It is the Proportional gain used for Speed Search PI controller.	100	0
H25	[I gain during speed search]	0~9999	It is the Integral gain used for Speed search PI controller.	200	0
H26	[Number of Auto Restart try]	0 ~10	This parameter sets the number of restart attempts after a fault occurs. Auto Restart is deactivated if the fault outnumbers the restart tries. This function is active when [drv] is set to 1 or 2 {Run/Stop via control terminal}. Deactivated during active protection function (OHT, LVT, EXT, HWT etc.).	0	0
H27	[Auto Restart time]	0~60 [sec]	This parameter sets the time between restart tries.	1.0	0
H30	[Motor type select]	0.2~22.0	0.2 0.2kW ~ ~ 22.0 22.0kW	7.5 ¹⁾	Х
H31	[Number of motor poles]	2 ~ 12	This setting is displayed via rPM in drive group.	4	Х
H32	[Rated slip frequency]	0 ~ 10 [Hz]	$f_s = f_r - \left(\frac{rpm \times P}{120}\right)$ Where, f_s = Rated slipx1 frequency $f_r = \text{Rated frequency}$ $rpm = \text{Motor nameplate RPM}$ $P = \text{Number of Motor poles}$	2.33 1)	Х
H33	[Motor rated current]	0.5~50 [A]	Enter motor rated current on the nameplate.	26.3 ¹⁾	Х
H34	[No load motor current]	0.1~ 20 [A]	Enter the current value detected when the motor is rotating in rated rpm after the load connected to the motor shaft is removed. Enter the 50% of the rated current value when it is difficult to measure H34 - [No Load Motor Current].	11 ¹⁾	Х
H36	[Motor efficiency]	50~100 [%]	Enter the motor efficiency (see motor nameplate).	87 ¹⁾	Х

P: H30 is preset based on the inverter ratings.



LED display	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run	
H37	[Load inertia rate]	0 ~ 2		Select one of the following according to motor inertia.			
			0	Less than 10 times			
			1	About 10 times			
			2	More than 10 times			
H39	[Carrier frequency select]	1 ~ 15 [kHz]	of the moto inverter, inv current. If the sound is qu	eter affects the audible sound r, noise emission from the verter temp, and leakage ne set value is higher, the motor lieter but the noise from the d leakage current will become	3	O	
H40	[Control	0 ~ 3	0	{Volts/frequency Control}	0	X	
	mode select]		1	{Slip compensation control}			
			2	-			
			3	{Sensorless vector control}			
H41	[Auto tuning]	0 ~ 1		meter is set to 1, it automatically parameters of the H42 and H44.	0	X	
H42	[Stator resistance (Rs)]	0 ~ 14 [Ω]	This is the resistance.	This is the value of the motor stator resistance.			
H44	[Leakage inductance (Lσ)]	0~ 300.0 [mH]		This is leakage inductance of the stator and rotor of the motor.			
H45 ¹⁾	[Sensorless P gain]	0~ 32767	P gain for S	Sensorless control	1000	0	
H46 ¹⁾	[Sensorless I gain]		I gain for Se	ensorless control	100	0	
H47 1)	[Sensorless torque limit]	100~220 [%]	Limits outpo	ut torque in Sensorless mode	180.0	Х	
H48 ¹⁾	[PWM mode select]	0~1	current, sel	to limit the inverter leakage ect 2 phase PWM mode. noise in comparison to Normal e.	0	X	
			0	Normal PWM mode			
			1 2 phase PWM mode				
H49 ¹⁾	[PID Control Select]	0~1	Selects whether using PID control or not		0	Х	
H50 ²⁾	[PID	0 ~ 2	0 Terminal I input (0 ~ 20 mA) 1 Terminal V1 input (0 ~ 10 V)		0	X	
	feedback				1		
	select]		2]			
H51 ²⁾	[P gain for PID controller]	0~ 999.9 [%]	This param controller.	eter sets the gains for the PID	300.0	0	



LED display	Parameter name	Min/Max range		Description	Factory defaults	Adj. during run
H52 ²⁾	[Integral time for PID controller (I gain)]	0.1~32.0 [sec]			1.0	0
H53 ²⁾	[Differential time for PID controller (D gain)]	0 ~ 30.0 [sec]			0.0	О
H54 ²⁾	[PID control	0 ~ 1	Selec	ets PID control mode	0	X
	mode select]]		0	Normal PID control		
	Selectjj		1	Process PID control		
H55 ²⁾	[PID output frequency high limit]	0.1~400[Hz]	outpu The v	parameter limits the amount of the at frequency through the PID control. value is settable within the range of	50.00	0
H56 ²⁾	[PID output frequency low limit]	0.1~400[Hz]	I	- [Max frequency] and F23 – [Start ency].	0.50	0
H57	[PID reference source	0~4	I	ets PID reference source. Tence is indicated in "rEF" of Drive O.	0	X
	select]		0	Keypad digital setting 1	_	
			1	Keypad digital setting 2	_	
			2	V1 terminal setting 2: 0~10V	_	
			3	I terminal setting: 0~20mA		
			4	Setting as RS-485 communication		
H59	Inverse PID	0 ~ 1	0	Normal	0	X
			1	Inverse		
H60	diagnostic		0	Self-diagnostic disabled	0	X
			1	IGBT fault/Ground fault		
select]			2	Output phase short & open/ Ground fault		
			3	Ground fault		

P: Set H40 to 3 (Sensorless vector control) to display this parameter.

^{2:} Set H40 to 2 (PID control) to display this parameter.



LED display	Parameter name	Min/Max range		Description	Factory defaults	Adj. durin g run
H61	Sleep delay time	0~999 (sec)	Sleep	Mode delay time	60 sec	Х
H62	Sleep frequency	0~400Hz	Sleep	Frequency	0.0Hz	0
H63	Wake-up level	0~50[%]	Wake	Up level	2[%]	0
H64	[KEB select]	0~1	Sets t	he KEB	0	X
H65	[KEB action start level]	110~140[%]	Sets k level.	KEB action start level according to	125.0	X
H66	[KEB action stop level]	110~145[%]	Sets h	KEB action stop level according to	130.0	X
H67	[KEB action gain]	1~20000	Sets k	KEB action gain.	1000	Х
H69	Accel/Decel Change Frequency	0 ~ 400Hz	Accel	decel change frequency	0Hz	х
H70	[Frequency	0 ~ 1	0	Based on Max freq (F21)	0	Х
	Ref. for Accel/Decel]		1	Based on Delta freq.	-	
H71	[Accel/Decel	0 ~ 2	0	Settable unit: 0.01 second.	1	0
	time scale]	0 2	1	Settable unit: 0.1 second.	-	
	_		2	Settable unit: 1 second.	_	
H72			This p	parameter selects the parameter to be yed on the keypad when the input is first applied.		
			0	Frequency command	-	
			1	Accel time	-	
			2	Decel time	-	
			3	Drive mode	-	
			4	Frequency mode	-	
			5			
	[Dower on		6	Multi-step frequency 2 (St2)	-	
	[Power on display]	0 ~ 17	7	Multi-step frequency 3 (St3)	0	0
	a,		8	Output current (Cur)		
			9	Motor rpm (rPM)		
			10	Inverter DC link voltage (dCL)		
			11 User display select (vOL)			
			12	Fault display 1(nOn)		
			13	Operating direction select (drC)		
			14 Output current 2			
			15 Motor rpm 2			
			16	Inverter DC link voltage 2]	
			17	User display select 2		



LED display	Parameter name	Min/Max range	Description	Factory defaults	Adj. durin g run
H73	[Monitoring item select]	0 ~ 2	One of the following can be monitored via vOL - [User display select]. O Output voltage [V] Output power [kW] Torque [kgf · m]	0	0
H74	[Gain for Motor rpm display]	1 ~ 1000 [%]	This parameter is used to change the motor rotating speed (r/min) to mechanica speed (m/mi) and display it.	100 I	0
H75	[DB resistor operating rate limit select]	0 ~ 1	UnlimitedUse DB resistor for the H76 set time.	1	0
H76	[DB resistor operating rate]	0 ~ 30[%]	Set the percent of DB resistor operating rate to be activated during one sequence of operation.	10	0
H77 ¹⁾	[Cooling fan control]	0 ~ 1	O Always ON Keeps ON when its temp is higher than inverter protection limit temp. Activated only during operation when its temp is below that of inverter protection limit.	0	0
H78	[Operating method select when cooling fan malfunctions]	0 ~ 1	 Continuous operation when cooling fan malfunctions. Operation stopped when cooling fa malfunctions. 		0
H79	[S/W version]	0 ~ 10.0	This parameter displays the inverter software version.	1.0	Х
H81	[2 nd motor Accel time]	0 ~ 6000 [sec]	This parameter actives when the selected terminal is ON after I17-I24 is set to 12 {2}		0
H82	[2 nd motor Decel time]		motor select}.	10.0	0
H83	[2 nd motor base frequency]	30 ~ 400 [Hz]		50.00	X
H84	[2 nd motor V/F pattern]	0 ~ 2		0	Х
H85	[2 nd motor forward torque boost]	0 ~ 15 [%]		5	X

^{2:} Exception: Since Sinus M-0001 2S/T - Sinus M 0001 4T is Natural convection type, this code is hidden.



LED display	Parameter name	Min/Max range	Description	Factory defaults	Adj. during run
H86	[2 nd motor reverse torque boost]	0 ~ 15 [%]	This parameter actives when the selected terminal is ON after I17-I24 is set to 12 {2 nd motor select}.	5	X
H87	[2 nd motor stall prevention level]	30~150 [%]		150	X
H88	[2 nd motor Electronic thermal level for 1 min]	50~200 [%]		150	0
H89	[2 nd motor Electronic thermal level for continuous]			100	0
H90	[2 nd motor rated current]	0.1~50 [A]		26.3	X
H91 ¹⁾	[Parameter read]	0 ~ 1	Copy the parameters from inverter and save them into remote keypad.	0	X
H92 ¹⁾	[Parameter write]	0 ~ 1	Copy the parameters from remote keypad and save them into inverter.	0	X
H93	[Parameter initialize]	0 ~ 5	This parameter is used to initialize parameters back to the factory default value.	0	Х
			0 -		
			1 All parameter groups are initialized to factory default value.		
			2 Only Drive group is initialized.		
			3 Only Function group 1 is initialized.		
			4 Only Function group 2 is initialized.		
			5 Only I/O group is initialized.		
H94	[Password register]	0 ~ FFFF	Password for H95-[Parameter lock]. Set as Hex value.	0	0
H95	[Parameter lock]	0 ~ FFFF	This parameter is able to lock or unlock parameters by typing password registered in H94.	0	0
			UL (Unlock) Parameter change enable		
			L (Lock) Parameter change disable		

P: H91,H92 parameters are displayed when the Remote option is installed.



7.4 I/O group 2

LED display	Parameter name	Min/Max range	Description	Factory defaults	Adj. during run
10	[Jump code]	0 ~ 81	Sets the code number to jump.	1	0
I1	[Filter time constant for NV input]	0 ~ 9999	Adjusts the responsiveness of NV input (-10V~0V).	10	0
12	[NV input Min voltage]	0 ~ -10 [V]	Sets the minimum negative input voltage of V1 (–10V~0V) input.	0.00	0
l3	[Frequency corresponding to I2]	0 ~ 400 [Hz]	Sets the inverter output minimum frequency at minimum negative voltage of I2.	0.00	О
14	[NV input Max voltage]	0 ~ -10 [V]	Sets the maximum negative input voltage of the V1 input (-10V~0V).	10.0	0
15	[Frequency corresponding to I4]	0 ~ 400 [Hz]	Sets the inverter output maximum frequency at maximum negative voltage of I4.	50.00	0
16	[Filter time constant for V1 input]	0 ~ 9999	Adjusts the responsiveness of V1 input (0 ~ +10V).	10	0
17	[V1 input Min voltage]	0 ~ 10 [V]	Sets the minimum positive voltage of the V1 input.	0	0
18	[Frequency corresponding to I7]	0 ~ 400 [Hz]	Sets the inverter output minimum frequency at minimum positive voltage of I7.	0.00	0
19	[V1 input Max voltage]	0 ~ 10 [V]	Sets the maximum positive voltage of the V1 input.	10	0
I10	[Frequency corresponding to 19]	0 ~ 400 [Hz]	Sets the inverter output maximum frequency at maximum positive voltage of I9.	50.00	0
I11	[Filter time constant for I input]	0 ~ 9999	Sets the input section's internal filter constant for I input.	10	0
l12	[I input Min current]	0 ~ 20 [mA]	Sets the minimum current of I input.	4.00	0
I13	[Frequency corresponding to I12]	0 ~ 400 [Hz]	Sets the inverter output minimum frequency at minimum current of I input.	0.00	0
l14	[I input Max current]	0 ~ 20 [mA]	Sets the Maximum current of I input.	20.00	0
I15	[Frequency corresponding to I14]	0 ~ 400 [Hz]	Sets the inverter output maximum frequency at maximum current of I input.	50.00	0
l16	[Criteria for Analog Input Signal loss]	0 ~ 2	Disabled 1: activated below half of set value. 2: activated below set value.	0	0



LED display	Parameter name	Min/Max range	Description		Factory defaults	Adj. during run	LED display
l17	[Multi-function		0	Forwa	rd run command	0	0
	input terminal P1 define]		1	Rever	se run command	-	
l18	[Multi-function	-	2	Emerg	ency Stop (Est)	1	0
	input terminal P2 define]		3	Reset	when a fault occurs {RST}		
l19	[Multi-function		4	Jog op	peration command	2	0
	input terminal P3 define]		5	Multi-S	Step freq – Low	-	
120	[Multi-function	-	6	Multi-S	Step freq – Mid	3	0
	input terminal P4 define]		7	Multi-S	Step freq – High		
I21	[Multi-function	-	8	Multi A	ccel/Decel – Low	4	0
	input terminal P5 define]		9	Multi A	ccel/Decel – Mid	-	
I22	[Multi-function	-	10	Multi A	ccel/Decel – High	5	0
	input terminal P6 define]		11	DC bra	ake during hold		
123	[Multi-function	-	12	2nd m	otor select	6	0
	input terminal P7 define]		13	-Reserved-			
124	[Multi-function	0 ~ 29	14	-Rese	rved-		
	input terminal P8 define]	J = 0	15	Up- down	Frequency increase (UP) command		
			16		Frequency decrease command (DOWN)		
			17	3-wire	operation		
			18	Extern	al trip: A Contact (EtA)		
			19	Extern	al trip: B Contact (EtB)	_	
			20		agnostic function	_	
			21		ge from PID operation mal operation	7	0
			22	2nd so	ource select	-	
			23	Analog	g Hold		
			24	Accel/	Decel hold	1	
			25	Up/Do Initializ	wn Save Freq. zation		
			26	JOG-F	X	1	
			27	JOG-F	RX	1	
			28	Open	Loop1	-	
			29	Fire M	ode		

^{*} See "Chapter 14 Troubleshooting and maintenance" for External trip A/B contact.

^{*} Each multi-function input terminal must be set differently.



LED display	Parameter name		Max nge		Description						Factory default	Adj. during run
125	[Input terminal status display]	BIT 7 P8	BIT 6 P7	BIT 5 P6	BI7 4 P5	3		BIT 2 P3	BIT 1 P2	BIT 0 P1	0	0
126	Output terminal	BIT1	F /	го		P F4 BIT0	-	гэ	FZ	ГІ	0	0
120	status display]	3AC				MO					-	
107	[Filtoring times			If the			- L	ا مامه	410.0		4	0
127	[Filtering time constant for Multi-function Input terminal]	1 ~ 1	5	resp	onsiv	ue is se veness slowe	of	_		minal	4	0
I30	[Multi- Stepfrequency4]	0 ~ 4 [Hz]	00			be set Juency		eater t	than F	21 –	30.00	0
I31	[Multi- Stepfrequency5]										25.00	0
132	[Multi- Stepfrequency6]	-									20.00	0
133	[Multi- Stepfrequency7]										15.00	0
134	[Multi-Accel time 1]	0~ 60	000								3.0	0
135	[Multi-Decel time 1]	[sec]									3.0	•
136	[Multi-Accel time 2]										4.0	
137	[Multi-Decel time 2]										4.0	
138	[Multi-Accel time 3]										5.0	
139	[Multi-Decel time 3]										5.0	
I40	[Multi-Accel time 4]										6.0	
I41	[Multi-Decel time 4]										6.0	
142	[Multi-Accel time 5]										7.0	
I43	[Multi-Decel time 5]										7.0	
144	[Multi-Accel time 6]										8.0	
I45	[Multi-Decel time 6]										8.0	
I46	[Multi-Accel time 7]										9.0	
147	[Multi-Decel time 7]										9.0	
150	[Analog output	0 ~ 3		Outp	out ite	em		•	o 10[V]	0	0
	item select]							00V S/T)	400V	(4T)		
				0	Outp freq.		Ma	ax fred	quency	,		
				1	Outp		15	50 %				
				2	Outp		AC 28	C 32V	AC 564V			
				3	Inve DC I volta	rter link	D0 40	C)0V	DC 800V			



LED display	Parameter name	Min/Max range		Description	Factory default	Adj. during run
l51	[Analog output level adjustment]	10~200 [%]	Bas	sed on 10V.	100	0
152	[Frequency detection level]	0 ~ 400 [Hz]		ed when I54 or I55 is set to 0-4. Innot be set higher than F21.	30.00	0
153	[Frequency detection bandwidth]				10.00	О
154	[Multi-function	0 ~ 19	0	FDT-1	12	0
	output terminal select]		1	FDT-2		
155	[Multi-function	-	2	FDT-3	17	-
	relay select]		3	FDT-4		
			4 FDT-5 5 Overload (OLt)			
			6	Inverter Overload (IOLt)		
			7	Motor stall (STALL)		
			8	Over voltage trip (Ovt)		
			9	Low voltage trip (Lvt)		
			10	Inverter Overheat (OHt)		
		11 Command loss				
			12	During Run		
			13	During Stop		
			14	During constant run		
			15 During speed searching16 Wait time for run signal input			
			17 Fault output			
			18	Warning for cooling fan trip		
			19	Brake signal selection		



LED display	Parameter name	Min/Max range		D	escriptio	n		Factory defaults	Adj. during run
156	[Fault relay output]	0 ~ 7	When setting the H26– [Number of auto restative]		When the trip other than low voltage trip occur	her low ow voltage trip ee occurs		2	0
				Bit 2	Bit 1		Bit 0		
			0	-	-		-		
			1	-	-		✓		
			2	-	✓		-		
			3	-	✓		✓		
			4	✓	-		-		
			5	√	-		✓		
			6	✓	✓		-		
			7	✓	✓		✓		_
157	[Output terminal select when	0 ~ 3		Multi-function relay			unction terminal	0	0
	communication	n		Bit 1		Bit 0			
	error occurs]		0 -			-			
			1	-		✓			
			2 🗸		-				
			3	√			✓		
159	[Communication	0 ~ 1	Se	et communicat	ion proto	col.		0	X
	protocol select]		0	Modbus RTL	J				
			1	ES BUS					
160	[Inverter number]	1 ~ 250	Se	et for RS485 c	ommunic	ation	n	1	0
I61	[Baud rate]	0 ~ 4	Se	elect the Baud	rate of th	ne R	S485.	3	0
			0	1200 [bps]					
			1	2400 [bps]					
I62 [Drive mode select after loss			2	4800 [bps]					
			3 9600 [bps]						
		0 0	4	19200 [bps]			at tall act		
		0 ~ 2	It is used when freq command is given via V1 /I terminal or RS485.					0	0
	of frequency		via V1 /I terminal or RS485. O Continuous operation at the						
	command]		frequency before its command is lost.						
			1	Free Run sto	p (Outpu	ıt cu	t-off)		
			2	Decel to stop)				




I63	[Wait time after loss of frequency command]	0.1 ~ 120 [sec]	This is the time inverter determines whether there is the input frequency command or not. If there is no frequency command input during this time, inverter starts operation via the mode selected at I62.	1.0	О
164	[Communication time setting]	2 ~ 100 [ms]	Frame communication time	5	0
165	[Parity/stop bit setting]	0~3	When the protocol is set, the communication format can be set. O Parity: None, Stop Bit: 1 Parity: None, Stop Bit: 2 Parity: Even, Stop Bit: 1 Parity: Odd, Stop Bit: 1	0	0
166	[Read address register 1]			5	0
167	[Read address register 2]			6	
168	[Read address register 3]			7	
169	[Read address register 4]	0 40000	The user can register up to 8	8	
170	[Read address register 5]	0~42239	discontinuous addresses and read them all with one Read command.	9	
l71	[Read address register 6]			10	
172	[Read address register 7]			11	
173	[Read address register 8]			12	
174	[Write address register 1]			5	0
175	[Write address register 2]			6	
176	[Write address register 3]			7	
177	[Write address register 4]	0. 40000	The user can register up to 8	8	
178	[Write address register 5]	0~42239	discontinuous addresses and write them all with one Write command	5	
179	[Write address register 6]			6	
180	[Write address register 7]			7	
I81	[Write address register 8]			8	



LED display	Parameter name	Min/Max range	Description	Factory defaults	Adj. during run
I82	[Brake open current]	0~180 [%]	Sets current level to open the brake. It is set according to H33's (motor rated current) size	50.0	0
l83	[Brake open delay time]	0~10 [s]	Sets Brake open delay time.	1.00	X
I84	[Brake open FX frequency]	0~400 [Hz]	Sets FX frequency to open the brake	1.00	X
I85	[Brake open RX frequency]	0~400 [Hz]	Sets RX frequency to open the brake	1.00	X
186	[Brake close delay time]	0~19 [s]	Sets delay time to close the brake	1.00	Х
187	[Brake close frequency]	0~400 [Hz]	Sets frequency to close the brake	2.00	X
188	Fire Mode Frequency	0.0 ~ 400.0 Hz	Command frequency when in Fire Mode	50.0Hz	0
189	PID F/B minimum scaling factor	0.0 ~ 100.0	PID F/B minimum scaling factor	0.0	0
190	PID F/B maximum scaling factor	0.0 ~ 100.0	PID F/B maximum scaling factor	100.0	О
I91	A, B Contact type	0	A Contact (Normal open)	0	0
191	selection	1	B Contact (Normal Close)		
192	MO On delay	0.0~10.0 sec	MO Contact On delay time	0.0 sec	X
193	MO Off delay	0.0~10.0 sec	MO Contact Off delay time	0.0 sec	X
194	30A,B,C On delay	0.0~10.0 sec	30 A,B,C Contact On delay time	0.0 sec	Х
195	30A,B,C Off delay	0.0~10.0 sec	30 A,B,C Contact Off delay time	0.0 sec	Х
196	Fire Mode	0 ~ 1	0 : No trip during fire mode	-	-
. • •	Evidence		1 : Trip during fire mode		




CHAPTER 8 - CONTROL BLOCK DIAGRAM

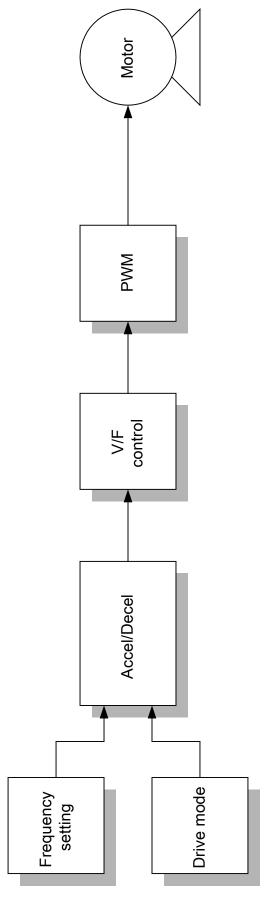




8.1 Frequency and Drive mode setting

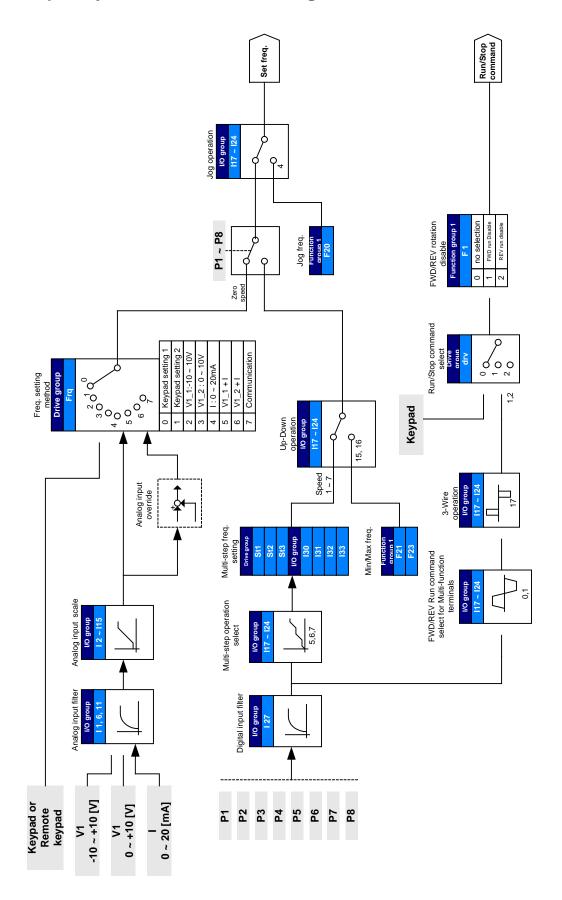



8.2 Accel/Decel setting and V/F control

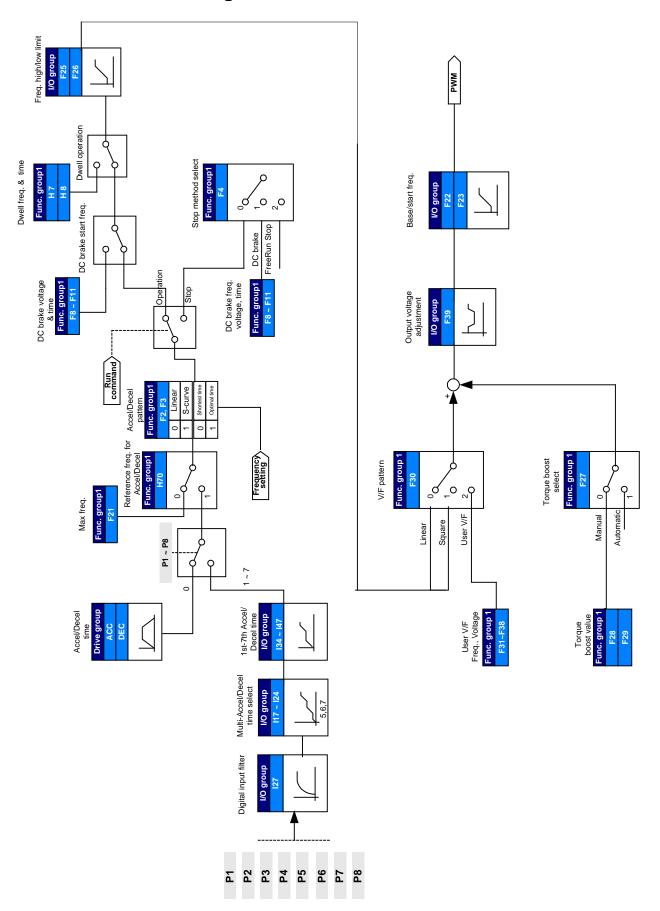



Notes:



CHAPTER 9 - BASIC FUNCTIONS

9.1 Frequency mode

Keypad Frequency setting 1

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~ 400	0.00	Hz
	Frq	[Frequency mode]	0	0 ~ 7	0	

- Set Frq [Frequency mode] to 0 (Frequency setting via Keypad 1).
- Set the desired frequency in 0.00 and press the Prog/Ent (●) key to enter the value into memory.
- The value is settable less than **F21** [Max frequency].
- ▶ When remote keypad is connected, keypad keys on the body are deactivated.
- Keypad Frequency setting 2

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~ 400	0.00	Hz
	Frq	[Frequency mode]	1	0 ~ 7	0	


- Set Frq [Frequency mode] to 1{Frequency setting via Keypad 2}.
- In 0.00, frequency is changed upon pressing the Up (▲)/Down (▼) key. In this case, UP/Down keys serve as a potentiometer.
- The value is settable less than **F21** [Max frequency].
- ▶ When remote keypad is connected, keypad keys on the body are deactivated.




Frequency setting via −10 ~ +10[V] input

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	2	0 ~ 8	0	
I/O group	I1	[Filter time constant for negative input V1]	10	0 ~ 9999	10	
	12	[V1 input minimum negative voltage]	-	0 ~ -10	0.0	V
	13	[Frequency corresponding to I2]	-	0 ~ 400	0.00	Hz
	14	[V1 input max. negative voltage]	-	0 ~ 10	10.00	V
	15	[Frequency corresponding to I4]	-	0 ~ 400	50.00	Hz
	I6 ~ I10	[V1 input positive]				

 - Set Frq [Frequency Mode] to 2.
- The set frequency can be monitored in **0.00** [Frequency Command].
 - ▶ Apply -10V ~ +10V signal between V1 and CM terminal.




▶ Output frequency corresponding to -10V ~ +10V input voltage to V1 terminal

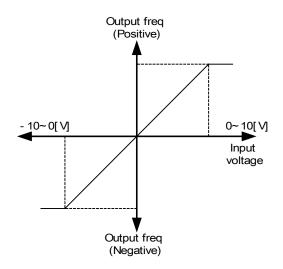




▶ I1 (Filter time constant for NV input): Effective for eliminating noise in the frequency setting circuit. Increase the filter time constant if steady operation cannot be performed due to noise. A larger setting results in slower response (t gets longer).

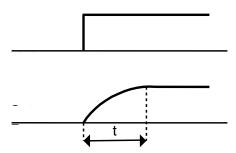


▶ I2 ~ I5: Setting input range and corresponding frequency to -10V ~ 0V V1 input voltage Ex) when minimum (-) input voltage is -2V with corresponding frequency 10Hz and Max voltage is -8V with run freq. 50Hz.

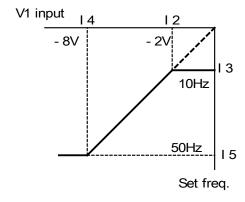

▶ 16 ~ 110: Setting input range and corresponding frequency to 0 ~ +10V V1 input voltage

Ex) when minimum (+) input voltage is 2V (I7) with corresponding frequency 10Hz (I8) and Max voltage is +8V (I9) with run freq. 50Hz (I10).

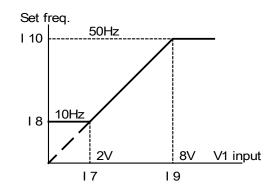





Frequency setting via 0 ~ 10 [V] input or Terminal Potentiometer

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	3	0 ~ 8	0	
I/O group	16	[Filter time constant for V1 input]	10	0 ~ 9999	10	
	17	[V1 input Min voltage]	-	0 ~ 10	0	V
	18	[Frequency corresponding to I7]	-	0 ~ 400	0.00	Hz
	19	[V1 input max voltage]	-	0 ~ 10	10	V
	I10	[Frequency corresponding to I9]	-	0 ~ 400	50.00	Hz

 - Select 3 in Frq code of Drive group.
- 0-10V can be directly applied from an external controller or a potentiometer connected on terminals VR, V1 and CM.
- ▶ Wire the terminals as shown below and refer to page 9-3 for I6 ~ I10.



Wiring of potentiometer

 

0 ~ 10V input via external controller

Frequency setting via 0 ~ 20 [mA] input

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	4	0 ~ 8	0	
I/O group	I11	[Filter time constant for I input]	10	0 ~ 9999	10	
	l12	[I input minimum current]	-	0 ~ 20	4	mA
	I13	[Frequency corresponding to I12]	-	0 ~ 400	0.00	Hz
	l14	[I input max current]	-	0 ~ 20	20	mA
	l15	[Frequency corresponding to I14]	-	0 ~ 400	50.00	Hz

- Select 4 in Frq code of Drive group.
- Frequency is set via 0~20mA input between I and CM terminal.



Frequency setting via −10 ~ +10[V] voltage input + 0 ~ 20[mA] input

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	5	0 ~ 8	0	

- Select 5 in Frq code of Drive group.
- This setting mode is available using I/V1 frequency adjustment via V1 and I terminal.
- Related codes: I2 ~ I5, I6 ~ I10, I11 ~ I15
- ▶ This setting mode is used to gain precise control and fast response by combining I and V1 speed inputs. For example a fast response can be achieved by 0 ~ 20mA (I) speed and precise control can be accomplished by -10 ~ +10[V1] speed if the are set them differently

Example:

Group	Code	Parameter Name	Setting	Unit
I/O group	12	[V1 input Min negative voltage]	0	V
	[Frequency corresponding to I2]			Hz
	14	[V1 input Max negative voltage]	10.00	V
	15	[Frequency corresponding to I4]	5.00	Hz
	[V1 input Min negative voltage]			V
	18	[Frequency corresponding to I7]	0.00	Hz
	19	[V1 input max positive voltage]	10	V
	I10	[Frequency corresponding to I9]	5.00	Hz
	l12	[Input minimum current]	4	mA
	I13	[Frequency corresponding to I12]	0.00	Hz
	I14	[Input max current]	20	mA
	I15	[Frequency corresponding to I14]	50.00	Hz

- ▶ After the above setting is made, if 5V is applied to V1 with 12mA given to terminal I, output frequency would be 27.5Hz. If -5V is applied to V1 terminal with 12mA given to terminal I, output frequency would be 22.5Hz.
- Frequency setting via 0 ~ 10[V] + 0 ~ 20[mA] input

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.00	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	6	0 ~ 8	0	

- Select 6 in Frq code of Drive group.
- Related code: 16 ~ 110, 111 ~ 115
- Refer to Frequency setting via -10 ~ +10V voltage input + 0 ~ 20mA input.



Frequency setting via RS 485 communication

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.0	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	7	0 ~ 8	0	

- Select 7 in Frq code of Drive group.
- Related codes: I59, I60, I61
- Refer to Chapter 13. RS485 communication.

Frequency setting via Digital Volume (up-down)

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.0	[Frequency Command]	-	0 ~400	0.00	Hz
	Frq	[Frequency Mode]	8	0 ~ 8	0	


- Select 8 in Frq code of Drive group.
- Related codes: I17 ~ 24.
- Among the multifunction inputs (P1 ~ P8), select two terminals to be used for up-down.
- Refer to Chapter 7, I/O 2 Group.

Analog Hold

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	Frq	[Frequency Mode]	2 ~ 7	0 ~ 7	0	
I/O group	l17	[Multi-function input terminal P1 define]	-		0	
	~	~		0 ~ 29		
	124	[Multi-function input terminal P8 define]	23		7	=

- It is available when Frq code setting is 2 ~ 7.
- Select one terminal to be used for Analog Hold command among Multi-function input terminal (P1 ~ P8).

When P8 terminal is selected,

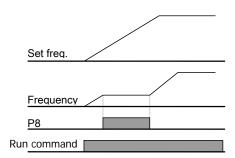




9.2 Multi-Step Frequency setting

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	0.0	[Frequency Command]	5.0	0 ~ 400	0.00	Hz
	Frq	[Frequency Mode]	0	0 ~ 7	0	-
	St1	[Multi-Step frequency 1]	-	0 ~ 400	10.00	Hz
	St2	[Multi-Step frequency 2]	-		20.00	=
	St3	[Multi-Step frequency 3]	-		30.00	=
I/O group	122	[Multi-function input terminal P6 define]	5	0 ~ 29	5	-
	I23	[Multi-function input terminal P7 define]	6		6	-
	124	[Multi-function input terminal P8 define]	7		7	-
	130	[Multi-Step frequency 4]	-	0 ~ 400	30.00	Hz
	I31	[Multi-Step frequency 5]	-		25.00	=
	132	[Multi-Step frequency 6]	-		20.00	1
	133	[Multi-Step frequency 7]	-		15.00	1

- Select a terminal to give Multi-step frequency command among P1-P8 terminals.
- If terminals P6-P8 are selected, set I22-I24 to 5-7 to give Multi-step frequency command.
- Multi-step frequency 0 is settable in Frq [Frequency mode] and 0.00 [Frequency command].
- Multi-step frequency 1-3 are set at St1-St3 in Drive group, while Step frequency 4-7 are set at I30-I33 in I/O group.

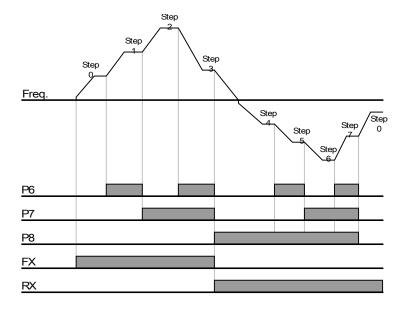

Step freq.	FX or RX	P8	P7	P6
0	✓	-	-	-
1	✓	-	-	✓
2	✓	-	✓	-
3	✓	-	✓	✓
4	✓	✓	-	-
5	✓	✓	-	✓
6	✓	√	✓	-
7	✓	✓	✓	✓



9.3 Operating command setting method


Operation via keypad RUN key and STOP/RST key (Modality 0)

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	0	0 ~ 3	1	
	drC	[Direction of motor rotation select]	-	F, r	F	

- Set **drv** [Drive mode] to 0.
- Acceleration is started upon pressing the Run key if operating frequency is set. Motor decelerates to stop by pressing the STOP/RST key.
- Selecting rotation direction is available at drC [Direction of motor rotation select] when operating command is issued via keypad.

	[Direction of	F	Forward
drC	motor rotation select]	r	Reverse

When remote keypad is connected, body-embedded keypad is deactivated.

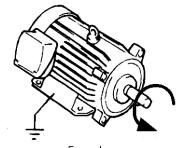


Forward : Counter- clockwise

Operating command via FX, RX terminal (Modality 1)

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	1	0 ~ 3	1	
I/O group	l17	[Multi-function input terminal P1 define]	0	0 ~ 29	0	
	I18	[Multi-function input terminal P2 define]	1	0 ~ 29	1	

- Set drv [Drive mode] to 1.
- Set I17 and I18 to 0 and 1 to use P1 and P2 as FX and RX terminals.
- "FX" is Forward run command and "RX" Reverse run.

Motor is stopped when FX/RX terminal is ON/OFF at the same time.

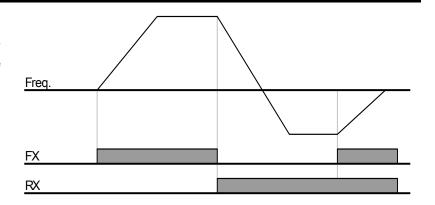




Operating command via FX, RX terminal (Modality 2)

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	2	0 ~ 3	1	
I/O group	l17	[Multi-function input terminal P1 define]	0	0 ~ 29	0	
	l18	[Multi-function input terminal P2 define]	1	0 ~ 29	1	

- Set the drv to 2.
- Set I17 and I18 to 0 and 1 to use P1 and P2 as FX and RX terminals.
- FX: Operating command setting. Motor runs in forward direction when RX terminal (P2) is OFF.
- RX: Direction of motor rotation select. Motor runs in reverse direction when RX terminal (P2) is ON.

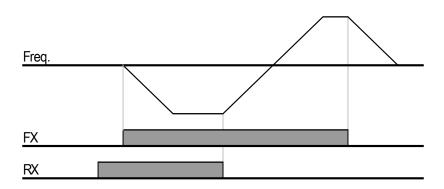

Operating command via RS485 communication (Modality 3)

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	3	0 ~ 3	1	
I/O group	159	[Communication protocol select]	-	0 ~ 1	0	
	160	[Inverter number]	-	1 ~ 250	1	
	l61	[Baud rate]	-	0 ~ 4	3	

- Set the drv to 3.
- Set I59, I60 and I61correctly.
- Inverter operation is performed via RS485 communication.
- Refer to Chapter. 13, RS485 communication.



■ Rotating direction selection via -10 ~ +10[V] input of V1 terminal

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	frq	[Frequency setting]	2	0 ~ 7	0	
	drv	[Drive mode]	-	0 ~ 3	1	

- Set frq to 2.
- Inverter is operating as the table below regardless of Drive mode setting.

	FWD RUN Command	REV RUN Command
0 ~ +10 [V]	FWD RUN	REV RUN
-10 ~ 0 [V]	REV RUN	FWD RUN

- ▶ Motor runs in Forward direction when input voltage to V1-CM is 0~10[V] and FWD RUN command is active. When input voltage polarity is reversed to −10~0[V] during FWD RUN, motor decelerates to stop and runs in reverse direction.
- ▶ When input voltage to V1-CM is 0~10[V] and REV RUN command is active, motor runs in Reverse direction and if −10~0[V] is entered, the motor rotating direction is reverse.

FX/RX Run Disable

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drC	[Direction of motor rotation select]	-	F, r	F	
Function group 1	F1	[Forward/Reverse run disable]	-	0 ~ 2	0	

- Select the direction of motor rotation.
- 0: Forward and Reverse run enable
- 1: Forward run disable
- 2: Reverse run disable




Power On Start select

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	1, 2	0 ~ 3	1	
Function group 2	H20	[Power On Start select]	1	0 ~ 1	0	

- Set H20 to 1.
- When AC input power is applied to the inverter with drv set to 1 or 2 {Run via control terminal and one of them ON), motor starts acceleration.
- This parameter is inactive when drv is set to 0 {Run via keypad} or 3 {RS485 communication}.



Particular attention must be directed to this function due to potential hazard as motor starts to run suddenly upon applying AC input power.

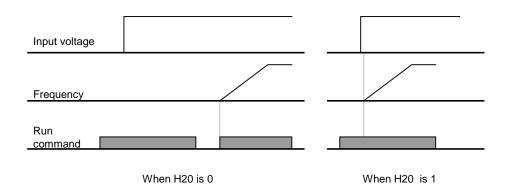

Restart after fault reset


Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	drv	[Drive mode]	1, 2	0 ~ 3	1	
Function group 2	H21	[Restart after fault reset selection]	1	0 ~ 1	0	

- Set H21 to 1.
- Motor starts acceleration if drv is set to 1 or 2 and the selected terminal is ON when a fault is cleared.
- This parameter is inactive when drv is set to 0 {Run via keypad} or 3 {RS485 communication}.



Particular attention must be directed to this function due to potential hazard as motor starts to run suddenly after the fault is cleared.



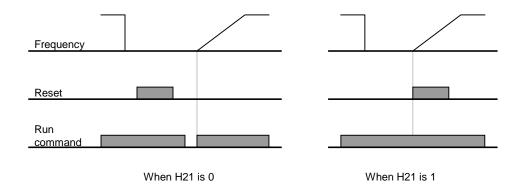


9.4 Accel/Decel time and pattern setting

Accel/Decel time setting based on Max frequency

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	ACC	[Accel time]	-	0 ~ 6000	5.0	Sec
	dEC	[Decel time]	-	0 ~ 6000	10.0	Sec
Function group1	F21	[Max Frequency]	-	40 ~ 400	50.00	Hz
Function group2	H70	[Frequency Reference for Accel/Decel]	0	0 ~ 1	0	
	H71	[Accel/Decel time scale]	-	0 ~ 2	1	

- Set the desired Accel/Decel time at ACC/dEC in Drive group.
- If H70 is set to 0 {Max frequency}, Accel/Decel time is the time that takes to reach the max freq from 0 Hz.
- Desired Accel/Decel time unit is settable at the H71.
- ▶ Accel/Decel time is set based on **F21** [Max frequency]. For instance, if **F21** is set to 60Hz, Accel/Decel time 5 sec, and run frequency 30Hz, time to reach 30Hz would be 2.5 sec.

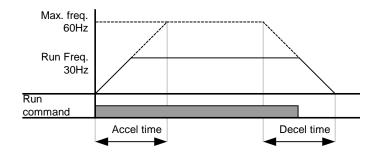




- More precise time unit can be set corresponding to load characteristics as shown below.
- ▶ In Sinus M, number display is available up to 5. Therefore, if time unit is set to 0.01 sec, Max Accel/Decel time would be 600.00 sec.

Code	Name	Set value	Setting range	Description
H71	[Accel/Decel	0	0.01~600.00	Setting Unit: 0.01 sec
	time scale] 1 0.1~6000	0.1~6000.0	Setting Unit: 0.1 sec	
		2	1~60000	Setting Unit: 1 sec

Accel/Decel time setting based on Operating Frequency

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Drive group	ACC	[Accel time]	-	0 ~ 6000	5.0	Sec
	dEC	[Decel time]	-	0 ~ 6000	10.0	Sec
Function group 2	H70	[Frequency Reference for Accel/Decel]	1	0 ~ 1	0	

- Accel/Decel time is set at the ACC/dEC.
- If you set H70 to 1 {Delta frequency}, Accel/Decel time is the time that takes to reach a target freq from constant run freq (Current operating freq.).
- ▶ When H70 and Accel time are set to 1 {Delta frequency} and 5 sec, respectively,
- ▶ The below graph in Section A shows the change in operating frequency when target frequency is set to 10Hz at first and then changed to 30Hz.

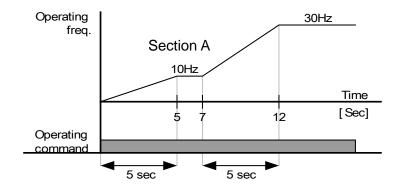




Multi-Accel/Decel time setting via Multi-function terminals

Group	Code	Parameter Name	Set	Range	Initial	Unit
Drive group	ACC	[Accel time]	-	0 ~ 6000	5.0	Sec
	dEC	[Decel time]	-	0 ~ 6000	10.0	Sec
I/O group	l17	[Multi-function input terminal P1 define]	0	0 ~ 29	0	
	I18	[Multi-function input terminal P12 define]	1		1	
	l19	[Multi-function input terminal P3 define]	8		2	
	120	[Multi-function input terminal P4 define]	9		3	
	I21	[Multi-function input terminal P5 define]	10		4	
	134	[Multi-Accel time 1]	-	0 ~ 6000	3.0	Sec
	~	~		0000		
	147	[Multi-Decel time 7]	-		9.0	

- Set I19, I20, I21 to 8, 9, 10 if you want to set Multi Accel/Decel time via P3-P5 terminals.
- Multi-Accel/Decel time 0 is settable at ACC and dEC.
- Multi-Accel/Decel time 1-7 is settable at I34-I47.

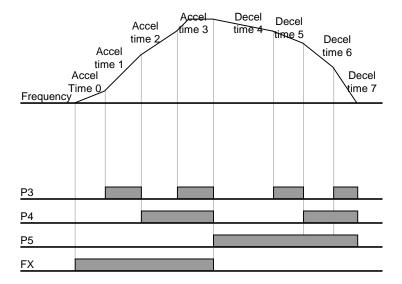

Accel/Decel time	P5	P4	P3
0	-	-	-
1	-	ı	✓
2	-	✓	-
3	-	✓	✓
4	✓	-	-
5	✓	-	✓
6	✓	✓	-
7	√	√	√




Accel/Decel pattern setting

Group	Code	Parameter Name	Settin	g range	Initial	Unit
Function group 1	F2	[Accel pattern]	0	Linear	0	
	F3	[Decel pattern]	1	S-curve		
Function group 2	H17	[S-Curve Accel/Decel start side]	0~		40	%
	H18	[S-Curve Accel/Decel end side]	100		40	%


- Accel/Decel pattern is settable at F2 and F3.
- Linear: This is a general pattern for constant torque applications.
- S-curve: This curve allows the motor to accelerate and decelerate smoothly.



For S-curve, the actual Accel/Decel time takes longer than the time set by user.

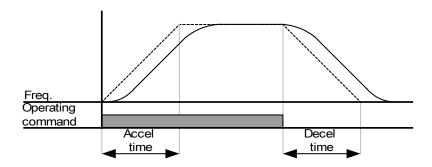

- ▶ H17 sets the starting ratio between S-curve and Linear in 1/2 of Accel/Decel Ref. Frequency. For smooth Accel/Decel starting, increase H17 to extend S-curve ratio.
- ▶ H18 sets the ending ratio between S-curve and Linear in 1/2 of Accel/Decel Ref. Frequency. For smooth and accurate speed arrival and stopping, increase H18 to extend S-curve ratio.

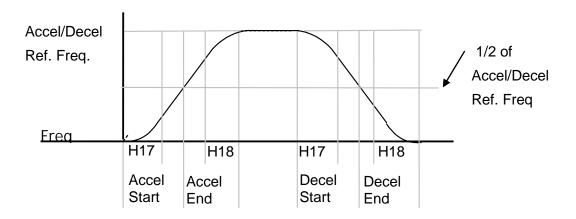



Note that setting Frequency Ref. for Accel/decel (H70) is set to Max Freq and target freq is set below Max freq. the shape of S-curve may be distorted.



Frequency is below Max Frequency, the waveform will be shown with the top portion cut out.

▶ Accel time for S-curve setting

$$= ACC + ACC \times \frac{H17}{2} + ACC \times \frac{H18}{2}$$

Decel time for S-curve setting


$$= dEC + dEC \times \frac{H17}{2} + dEC \times \frac{H18}{2}$$

▶ ACC, dEC indicate the set time in Drive group.

Accel/Decel Disable

Group	Code	Parameter Name	Setting	Range	Initial	Unit
I/O group	l17	[Multi-function input terminal P1 define]	-	0 ~29	0	
	~	~				
	124	[Multi-function input terminal P8 define]	24		7	

- Select one terminal among Multi-function input terminals 1-8 to define Accel/Decel disable.
- If P8 is selected, set I24 to 24 to activate this function.

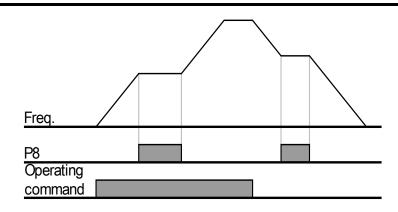




9.5 V/F control

Linear V/F pattern operation

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F22	[Base frequency]	-	30 ~ 400	50.00	Hz
	F23	[Start frequency]	-	0.1 ~ 10.0	0.50	Hz
	F30	[V/F pattern]	0	0 ~ 2	0	
Function group 2	H40	[Control mode select]	-	0 ~ 3	0	


- Set F30 to 0 {Linear}.
- This pattern maintains a linear Volts/frequency ratio from F23 [Start frequency] to F22-[Base frequency]. This is appropriate for constant torque applications.
- ▶ Base Frequency: Inverter outputs its rated voltage at this level. Enter the motor nameplate frequency.
- ▶ Start Frequency: Inverter starts to output its voltage at this level.

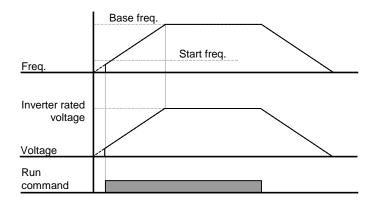

Square V/F pattern

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F30	[V/F pattern]	1	0 ~ 2	0	

- Set F30 to 1{Square}.
- This pattern maintains squared volts/hertz ratio. Appropriate applications are fans, pumps, etc.

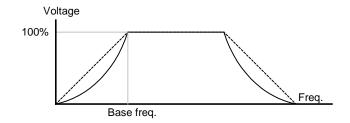



User V/F pattern operation


Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F30	[V/F pattern]	2	0 ~ 2	0	
	F31	[User V/F frequency 1]	-	0 ~ 400	12.50	Hz
	~	~				
	F38	[User V/F voltage 4]	-	0 ~ 100	100	%

- Select F30 to 2 {User V/F}.
- User can adjust the Volt/Frequency ratio according to V/F pattern of special motors and load characteristics.

riangle CAUTION

In case of using a standard induction motor, setting V/F values much higher than linear V/F pattern, it could result a torque shortage or motor overheating due to windings overenergizing.


When User V/F pattern is active, F28 - [Torque Boost in forward direction] and F29 - [Torque Boost in reverse direction] are deactivated.

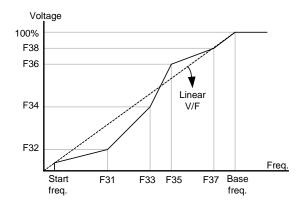

Output voltage adjustment

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F39	[Output voltage adjustment]	-	40 ~ 110	100	%

This function is used to adjust the output voltage of the inverter. This is useful when you use a motor that has a rated voltage lower than the input voltage.

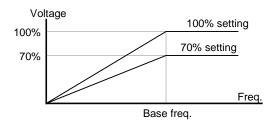




Manual torque boost

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F27	[Torque Boost select]	0	0 ~ 1	0	
	F28	[Torque boost in forward direction]	-	0 ~ 15	2	%
	F29	[Torque boost in reverse direction]				

- Set F27 to 0 (Manual torque boost).
- The values of [Torque boost in forward/reverse direction] are set separately in F28 and F29.

⚠ CAUTION

• If the boost value is set much higher than required, it may cause motor overheating or inverter trips, due to over-energizing.

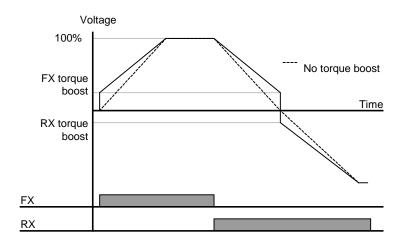

Auto torque boost

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F27	[Torque Boost select]	1	0 ~ 1	0	
Function group 2	H34	[No load motor Current]	-	0.1 ~ 20	-	А
	H41	[Auto tuning]	0	0 ~ 1	0	
	H42	[Stator resistance (Rs)]	-	0 ~ 14	-	Ω

- Before set Auto Torque Boost, H34 and H42 should be set correctly.
- Select 1{Auto torque boost} in F27.
- Inverter automatically calculates torque boost value using motor parameters and outputs the corresponding voltage.




9.6 Stop method select

Decel to stop

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F4	[Stop mode select]	0	0 ~ 3	0	

- Select 0 (Decel to stop) in F4 code.
- Motor decelerates to 0 Hz and stops during the time set.

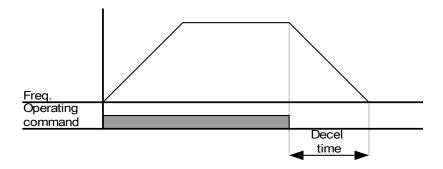

DC braking to stop


Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F4	[Stop mode select]	1	0 ~ 3	0	

- Select 1 (DC brake to stop) in F4 code.
- Refer to page 10-1.

Coast to stop

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F4	[Stop mode select]	2	0 ~ 3	0	

- Select 2 { Coast to stop } in F4 code.
- When RUN command is OFF, Output Frequency and voltage are shut down.

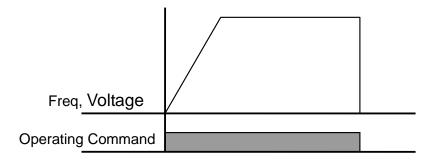



9.7 Frequency limit


Frequency limit using Max Frequency and Start Frequency

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F21	[Max frequency]	-	0 ~ 400	50.00	Hz
	F23	[Start frequency]	-	0.1 ~ 10	0.50	Hz

- Max Frequency: Frequency highest limit. Any frequency cannot be set above [Max frequency] except for F22 [Base frequency].
- Start Frequency: Frequency lowest limit. Until a frequency reference is set lower than this, 0.00 output frequency is automatically set.
- Frequency command limit using High/Low limit

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 1	F24	[Frequency high/low limit select]	1	0 ~ 1	0	
	F25	[Frequency high limit]	-	0 ~ 400	50.00	Hz
	F26	[Frequency low limit]	-	0 ~ 400	0.50	Hz

- Set F24 to 1.
- Active run frequency can be set within the range of F25 and F26.
- ▶ When frequency setting is done via Analog input (voltage or current input), the inverter operates within the range of high and low limit frequency as shown below.
- ▶ This setting is also valid when frequency setting is done via keypad.

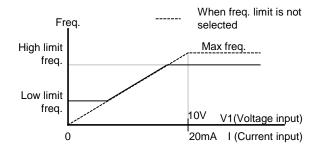




Skip frequency

Group	Code	Parameter Name	Setting	Range	Initial	Unit
Function group 2	H10	[Skip frequency select]	1	0 ~ 1	0	
	H11	[Skip frequency low limit 1]	-	0.1 ~ 400	10.00	Hz
	~	~				
	H16	[Skip frequency low limit 3]	-	0.1 ~ 400	35.00	Hz

- Set H10 to 1.
- Run frequency setting is not available within the skip frequency range of H11-H16.
- Skip frequency is settable within the range of F21 [Max frequency] and F23 [Start frequency].

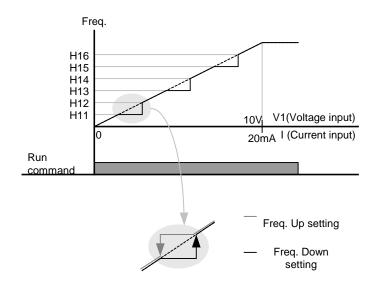

- When it is desired to avoid resonance, attributable to the natural frequency of a mechanical system, these parameters allow resonant frequencies to be skipped. Three different areas of Skip frequency can be set with the skip frequencies set to either the top or bottom point of each area. However, during acceleration or deceleration, the run frequency within the set area is valid.
- In case of increasing frequency setting as shown above, if frequency set value (Analog setting via voltage, current, RS485 communication or digital setting via keypad) is within the range of Skip frequency, it maintains skip frequency low limit value. If the set value is outside the range, it increases the frequency following the set acceleration ramp.
- In case of decreasing frequency setting, if frequency set value (Analog setting via voltage, current, RS485 communication, or digital setting via keypad) is within the range of Skip frequency, it maintains Skip frequency high limit value. If the set value is outside the range, it decreases the frequency following the set deceleration ramp.



CHAPTER 10 - ADVANCED FUNCTIONS

10.1 DC brake

DC brake at stop

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F4	[Stop mode select]	1	0 ~ 2	0	
	F8	[DC Brake start frequency]	-	0.1 ~ 60	5.00	Hz
	F9	[DC Brake wait time]	-	0 ~ 60	0.1	sec
	F10	[DC Brake current]	-	0 ~ 200	50	%
	F11	[DC Brake time]	-	0 ~ 60	1.0	sec


- Set F4 [Stop mode select] to 1.
- F8: The frequency at which the DC brake will become active.
- F9: Inverter output will wait for this time set in F8 [DC Brake start frequency] before applying F10 [DC Brake current].
- F10: Set this value as a percent of H33 [Motor rated current].
- F11: It sets the time for F10 [DC Brake current] to be applied to the motor.



Caution:

If excessive DC Brake current is set or DC Brake time is set too long, this may cause motor overheating and the motor may be damaged.

- ▶ Setting F10 or F11 to 0 will disable DC brake.
- ▶ F9 [DC Brake Wait time]: When load inertia is large or F8 [DC Brake Start Frequency] is too high, over current trip may occur. It can be prevented increasing the value of F9.

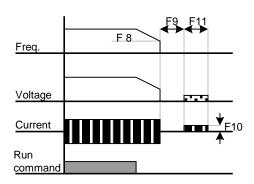

▶ In case of DC brake at high load inertia and frequency, change the DC brake controller gain according to H37 set value.

H37	Load inertia ratio	0	Less than 10 times motor inertia
		1	10 times motor inertia
		2	Greater than 10 times motor inertia



DC brake at start


Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F12	[DC Brake start current]	-	0 ~ 200	50	%
	F13	[DC Brake start time]	-	0 ~ 60	0	sec

- F12: It sets the level as a percent of H33 [Motor rated current].
- F13: Motor accelerates after DC current, set in F12, is applied for this time.



Caution:

If excessive DC Brake voltage is set or DC Brake time is set too long, it may cause motor overheating and damage the motor.

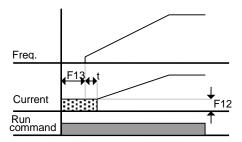

- ▶ Setting F12 or F13 to 0 will disable Starting DC brake.
- t: = when DC brake at start is applied, the output frequency increases after t time, or rather when the inverter output voltage reaches the residual voltage due to DC brake

DC brake hold


Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F12	[DC Brake start current]	-	0 ~ 200	50	%
I/O group	I19	[Multi-function Input terminal P3 Function select]	11	0 ~ 29	2	

- F12: It sets the level as a percent of H33 [Motor rated current].
- Select a terminal to issue a command of DC brake at a stop among P1 to P8.
- If P3 terminal is set for this function, set I19 to 11 (DC brake hold).



Caution:

 If excessive DC Brake current is set or DC Brake hold time is set too long, it may cause motor overheating and damage the motor.






10.2 Jog operation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F20	[Jog frequency]	-	0 ~ 400	10.00	Hz
I/O group	I21	[Multi-function input terminal P5 define]	4	0 ~ 29	4	

- Set the desired jog frequency in F20.
- Select a terminal from P1 P8 to use for this setting.
- If P5 is set for Jog operation, set I21 to 4 (Jog).
- Jog frequency can be set within the range of F21 [Max frequency] and F23 [Start frequency].

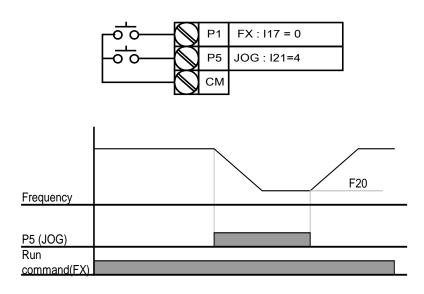


- ▶ Jog operation overrides all other operations except Dwell operation. Therefore, if Jog frequency command is entered in the middle of Multi-Step, Up-Down or 3-wire operation, operation is executed at Jog frequency.
- ▶ The above diagram is an example of when Multi-function input is set to NPN mode.
- ▶ Terminal jog operation.



Terminal JOG FX/RX operation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F20	[Jog frequency]	-	0 ~ 400	10.00	Hz
I/O group	I23	[Multi-function input terminal P7 define]	26	0 ~ 29	6	
	124	[Multi-function input terminal P8 define]	27	0 ~ 29	7	

- Set the desired jog frequency in F20.
- Select multifunction input terminal P7 or P8 for this setting.
- If P7 is set for Jog operation, set I23 to 26 {Jog}.
- ▶ Jog frequency's setting range can be set between Max. frequency (F21) and start frequency (F23).
- ▶ The following diagram is an example of when the reference frequency is 30Hz and the Jog frequency is 10 Hz.

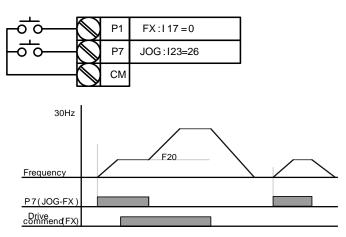



10.3 UP-DOWN

Up-down storage function

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	Frq	[Frequency setting method]	8	0~8	0	
	l17	[Multi-function input terminal P1 define]	0		0	
I/O group	122	[Multi-function input terminal P6 define]	25	0 ~ 29	5	
	123	[Multi-function input terminal P7 define]	15		6	
	124	[Multi-function input terminal P8 define]	16		7	
Function group 1	F63	[Up-down frequency Save select]	-	0~1	0	
	F64	[Up-down frequency storage]	-		0.00	

- Select 8 in Frq code of drive group
- Select the terminal which is used as a up-down drive among multi-function inputs (P1~P8)
- If you select P7 and P8 as an up-down drive terminal, select each 15 (frequency increase command) and 16 (frequency decrease command) in the I23 and I24 of I/O group.
- If you select P6 terminal as an up-down save initial terminal, select 25 (up-down save initialization) as above.
- Up/down Save function: If F63, 'Save up/down frequency', is set to 1, the frequency before the inverter was stopped or decelerated is saved in F64.
- ▶ While up-down save operates, the user can initialize the saved up-down frequency by setting multifunction input terminal as a up-down frequency save initialization.

F63	Save up/down frequency select		Remove 'save up/down frequency'
		1	Set 'save up/down frequency'
F64	Save up/down frequency		Up/down frequency saved

▶ If 'Up/Down Save Frequency Initialization' signal is sent while the multi-function input 'Up' or 'Down' function is applied, this signal is ignored.



Up-down mode select


Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	Frq	[Frequency setting method]	8	0~8	0	
	I17	[Multi-function input terminal P1 define]	0		0	
I/O group	123	[Multi-function input terminal P7 define]	15	0 ~ 29	6	
	124	[Multi-function input terminal P8 define]	16		7	
Function	F65	[Up-down mode select]	 -	0~2	0	
group 1	F66	[Up-down step frequency]	-	0~400	0.00	Hz

- Select 8 in Frq code of drive group
- Select the terminal which is used as up-down drive among multi-function inputs (P1~P8)
- Operates in selected mode as a step frequency set in F66.

▶ The up-down mode is selected as follows:


F65	Up/down select	0	The reference frequency is increased according to Max./Min. frequency (Initial value)	
		1	Increased as much as step frequency (F66) according to edge input	
		2	Combination of 0 and 1	
F66	Step frequency	Frequency increased according to edge input		

▶ When F65 is 0: If you press UP, it is increased up to Max. frequency as a speed value set in the above. (If a frequency limit exists, speed is increased up to upper limit.) If you press DOWN, it is decreased as the speed value set in the above regardless of the stop method. (If a frequency limit exists, speed is decreased up to lower limit.)

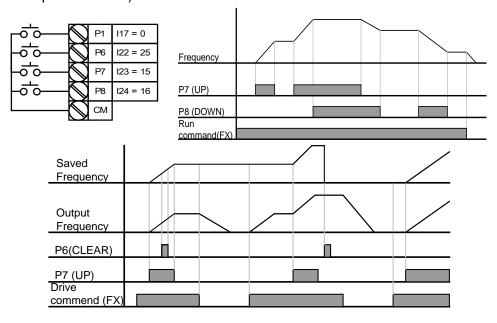




When F65 is 1: It is increased as much as the step frequency set as F66 at the rising edge of multifunction input set as UP and when up-down is defined, it saves frequency at the falling edge. It is decreased as much as the step frequency set as F66 at the falling edge of rising edge of multi-function input set as DOWN and when up-down is defined, it saves frequency as the falling edge. In this case, while multi-function input set as UP or DOWN is defined, if a stop command is given, the previous falling edge value is saved and if multi-function input is not defined, the present frequency is not saved. The accel/decel time is the same as when set as "0".

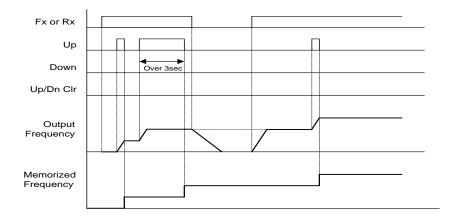

▶ When F65 is 2: It is increased as much as step frequency set as F66 at the rising edge of multi-function input set as UP and if it is activated for 3 seconds, it operates as it was set as "0". It is decreased as much as the step frequency set as F66 at the rising edge of multi-function input set as DOWN. If it is activated for 3 seconds, it operates as it was set as "0" and the accel/decel time is the same as when set as "0".

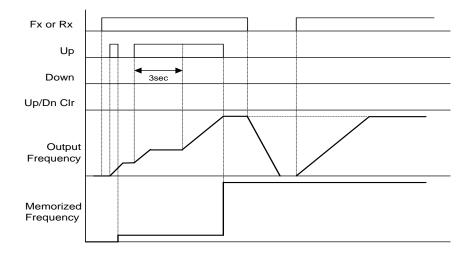

ACAUTION


Because of UP or DOWN, when the input is entered again before it is increased as much as 1 step frequency, the input is ignored and the saved frequency is also the frequency of the inactive moment.



10.4 3-Wire operation (Start – Stop via push buttons)

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	l17	[Multi-function Input terminal P1 select]	0	0 ~ 29	0	
	~	~				
	I24	[Multi-function Input terminal P8 select]	17		7	

- Select a terminal from P1-P8 for use as 3-Wire operation.
- If P8 is selected as stop, set I24 to 17 {3-Wire operation}.

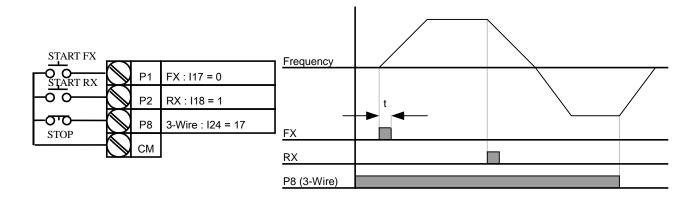

- ▶ Input signal is latched (saved) in 3-Wire operation.
- ▶ Inverter operates by Push-buttons supplying the motor when Start push button is ON. The inverter stops the motor when the Stop push button is OFF
- ▶ The bandwidth of pulse (t) should not be less than 50msec.



10.5 Dwell operation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	Н7	[Dwell frequency]	-	0.1 ~ 400	5.00	Hz
	Н8	[Dwell time]	-	0 ~ 10	0.0	sec

- In this setting, motor begins to accelerate after dwell operation is executed for dwell time at the dwell frequency.
- It is mainly used to release mechanical brakes in elevators and cranes.
- ▶ Dwell frequency: This function is used to generate an output torque in an intended direction. It is useful in hoisting applications to get enough torque before releasing a mechanical brake.
- ▶ Dwell frequency shall be set greater than Rated Slip frequency of the motor. Rated slip frequency is calculated by the formula shown below.

$$f_s = f_r - \left(\frac{rpm \times P}{120}\right)$$

Where, f_s = Rated slip frequency

 f_r = Rated frequency


rpm = Motor nameplate RPM

P =Number of Motor poles

Example

Rated frequency = 60Hz Rated RPM = 1740rpm Number of motor poles= 4

$$f_s = 60 - \left(\frac{1740 \times 4}{120}\right) = 2Hz$$

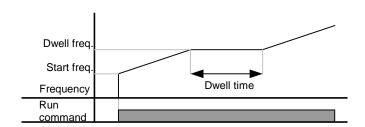



10.6 Slip compensation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H30	[Motor type select]	-	0.2 ~ 7.5	7.5	
	H31	[Number of motor poles]	-	2 ~ 12	4	
	H32	[Rated slip frequency]	-	0 ~ 10	2.33	Hz
	H33	[Motor rated current]	-	0.5 ~ 50	26.3	Α
	H34	[Motor No Load Current]	-	0.1 ~ 20	11.0	Α
	H36	[Motor efficiency]	-	50 ~ 100	87	%
	H37	[Load inertia rate]	-	0 ~ 2	0	
	H40	[Control mode select]	1	0 ~ 3	0	

- Set H40 [Control mode select] to 1 (Slip compensation).
- This function allows the motor to run in constant speed by compensating slip in an induction motor.
- ▶ H30: Set the motor type connected to the inverter output side.

H30	[Motor type select]	0.2	0.2kW
		~	
		5.5	5.5kW
		7.5	7.5kW

- ▶ H31: Enter the pole number as shown on the Motor nameplate.
- ▶ H32: Enter the slip frequency in accordance with the following formula and motor nameplate.

$$f_s = f_r - \left(\frac{rpm \times P}{120}\right)$$

Where, f_s = Rated slip frequency

 f_r = Rated frequency

rpm = Motor rated RPM

P = Motor pole number

Ex) Rated freq.: 60Hz, Rated RPM: 1740rpm, Poles: 4,


$$f_s = 60 - \left(\frac{1740 \times 4}{120}\right) = 2Hz$$



- ▶ H33: Enter the motor nameplate rated current.
- ▶ H34: Enter the measured current when the motor is running at rated frequency without load. Enter 50% of the rated motor current when it is difficult to measure the motor no load current.
- ▶ H36: Enter motor efficiency as shown on the nameplate.
- ▶ H37: Select load inertia related to the motor inertia as shown below.

H37	[Load inertia rate]	0	Less than 10 times motor inertia
		1	About 10 times motor inertia
		2	Greater than 10 times motor inertia

As the loads are heavier, the speed gap between rated RPM and synchronous speed is greater (see the figure below). This function compensates the speed gap due to the slip.

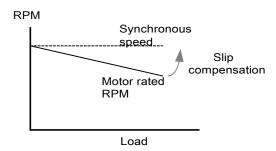



10.7 PID control

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H49	[PID Operation select]	1	0 ~ 1	0	-
	H50	[PID Feedback select]	-	0 ~ 1	0	-
	H51	[Proportional gain for PID control]	-	0 ~ 999.9	300.0	%
	H52	[Integral time for PID control]	-	0.1~ 32.0	1.0	sec
	H53	[Derivative time for PID control]	-	0.0~30.0	0	sec
	H54	[PID control mode select]	-	0 ~ 1	0	-
	H55	[PID output frequency high limit]	-	0.1 ~ 400	60.0	Hz
	H56	[PID output frequency low limit]	-	0.1 ~ 400	0.50	Hz
	H57	[PID reference source select]	-	0~4	0	Hz
	H59	[Inverse PID]	-	0~1	0	-
	H61	[Sleep delay time]	-	0.0~2000.0	60.0	-
	H62	[Sleep frequency]	-	0.00~400	0.00	Hz
	H63	[Wake-up level]	-	0.0~100.0	35.0	%
I/O group	117~ 124	[Multi-function input terminal P1-P8 define]	21	0 ~ 29	-	-
Drive group	rEF	[PID reference]	-	0~400 /0~100	0.00 /0.0	Hz /%
	Fbk	[PID feedback]	-	0~400 /0~100	0.00 /0.0	Hz /%

- In order to control the amount of following water, pressure and temperature, do PID control to inverter output frequency.
- Select H49 of function group 2 as a 1 (PID drive select). Then REF and FBK category show. Set PID reference value in REF and real PID feedback amount is monitored at the FBK
- PID drive is classified as Normal PID mode and Process PID mode. It can be set in H54 (PID mode select)
- ▶ H50: Select the feedback type of PID controller.

[PID Feedback	0	Terminal I input (0 ~ 20[mA])
select]	1	Terminal V1 input (0 ~ 10[V])

- ▶ H51: proportional term (P), multiplying the difference between the reference (value to be obtained from the physical quantity to adjust) and the feedback (value measured by the physical quantity). That difference is called "error" and is multiplied by a constant (H51), "Prop. Gain"). When H51 increases, the incidence of the proportional term in the regulator output signal also increases (regulator becomes more "sensitive") if the error is the same. Instability occurs if H51 value is set too high.
- ▶ H52: Integral time is important because allows to reduce to 0 the error at running operation in order to keep the same value for both reference and feedback. Integral gain set the needed time to correct the accumulated error. For example if H52 is set to 1 sec and the error




becomes 100%, a 100% correction will be issued in 1 sec. Decreasing H52 value, the correction will be quickly, but a too low value could create a system instability.

- ▶ H53: Derivative time is calculated by multiplying the difference between the feedback variable instant value and the feedback variable value Derivative function operates only on the error variation (i.e. if the error is constant this function does not operate) The error is detected by 0.01 sec in Sinus M. If differential time is set to 0.01 sec and the percentage variation of error per 1 sec is 100%, 1% per 10msec is output.
- ▶ 117 ~ 124: To exchange PID to normal operation, set one of P1-P8 terminal to 21 and turn ON.
- rPM: Calculates the feedback from H50 into Motor frequency and displays it.
- ▶ rEF: Indicates PID controller's command value.
- ▶ Fbk: Converts feedback amount set in H50 to motor frequency.




Normal PID block diagram (H54=0)

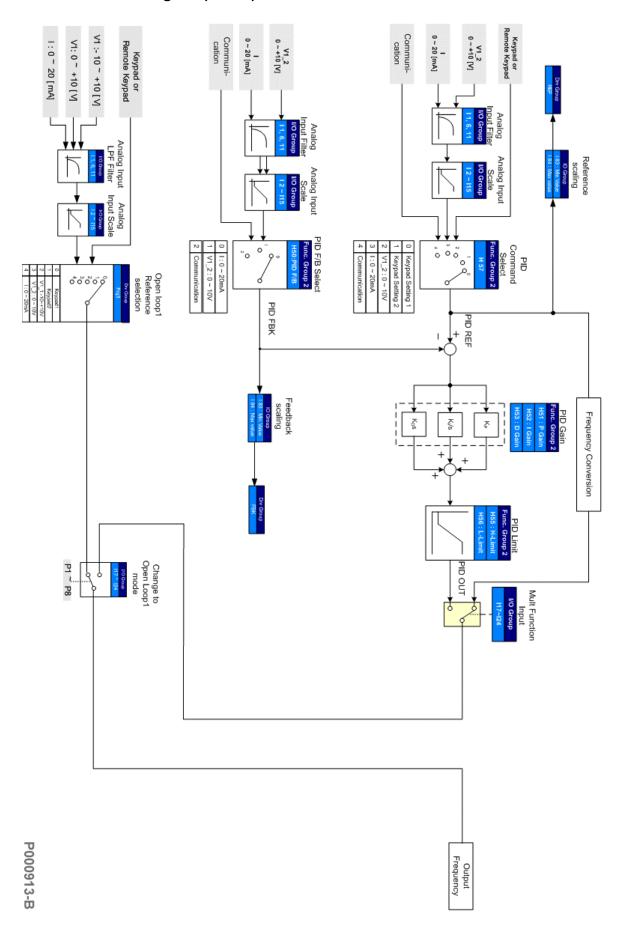



Process PID block diagram (H54=1)

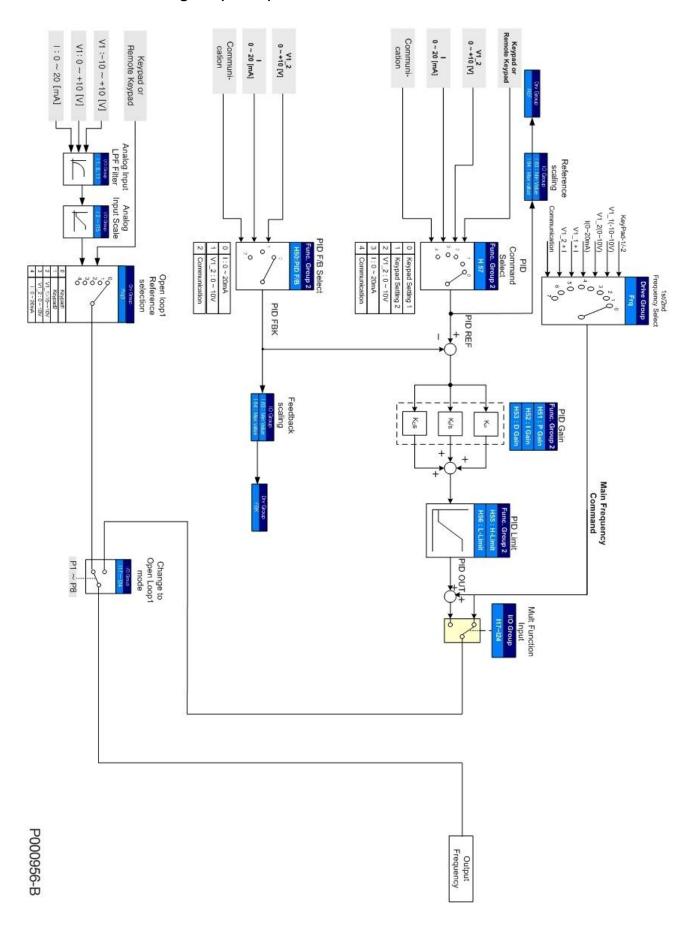



10.7.1 PID reference

LED display	Parameter name	Setting Range	Description	Factory defaults	Adj. during Run
H49	PID control select	0~1	Selects whether using PID control or not	0	Х

- User can select the PID control mode in H49. For PID control, the setting value should be set to "1".
- Then REF and FBK category show.

LED display	Parameter name	Setting Range	Description	Factory defaults	Adj. during Run
H57	[PID reference source select]	0~4	Selects the PID reference source. The reference is indicated in "rEF" of Drive group. O Keypad digital setting 1 1 Keypad digital setting 2 2 V1 terminal setting 2: 0~10V 3 I terminal setting: 0~20mA 4 Setting as RS-485 communication	0	X

- One among Multistep frequency values 1-3 and 4-7 can also be used as a PID Reference. Multistep frequency values 1-3 are set in St1-St3 in the Drive Group; Multistep frequency values 4-7 are set in I30-I33 in the I/O Group.



LED display	Parameter name	Setting Range			Description	Factory defaults	Adj. During run
			0	Digital	Keypad setting 1		
			1	Digital	Keypad setting 2		
			2		V1 1: –10 ~ +10 [V]		
			3		V1 2: 0 ~ +10 [V]		
	Frequency		4	Analog	Terminal I: 0 ~ 20 [mA]	0	
Frq	setting	0 ~ 7	5		Terminal V1 setting 1+		X
	method		5		Terminal I		
			6		Terminal V1 setting 2+		
		6	0	Terminal I			
			7	Comm.	RS485		
			8		Digital Volume		

- The PID reference source can be selected in H57 code of function group2.
- The PID REF value can be changed and checked in the "rEF" of DRV group.
- PID value is basically created in 'Hz'. 'Hz' is not a physical unit, so the internal PID reference is calculated as a '%' of Maximum frequency (F21).

LED display	Parameter name	Setting Range	Description	Factory defaults	Adj. During run
rEF	PID Reference	-	PID control standard value setting	-	-
189	Minimum Feedback value	0.0~100.0	Minimum Feedback Scaling factor	0.0	О
190	Maximum Feedback value	0.0~100.0	Maximum Feedback Scaling factor	100.0	0

- "REF" code of drive group is the additional function code of this version for real unit and the display only code. Refer to the equation below.

Real physical reference =
$$\frac{I90(Unit \text{ max}) - I89(Unit \text{ min})}{Max \ Frequency} \times PIDreference(Hz) + I89(Unit \text{ min})$$

- If you want to display the real physical reference with %, set each I89 and I90 to 0.0 and 100.0 (Factory default). If the set value of F21 and the PID command are each 50Hz and 20Hz respectively, then the PID reference should be like this: $\frac{100.0-0.0}{50.0} \times 20.0 + 0.0 = 40.0$.
- You can display the physical value with Bar. For example, the pressure sensor has minimum output 0V when 1.0 Bar and 10V when 20.0 bars. In this case, I89 and I90 should be set to 1.0 and 20.0 respectively.
- If the max frequency and the PID command are 50Hz and 20Hz each, then the PID reference should be like this. $\frac{20.0-1.0}{50.0}\times20.0+1.0=8.6$



10.7.2 PID feedback

- PID feedback source is selected in H50 code. PID feedback means a kind of physical value like pressure, so it should be one of analog inputs.
- For PID feedback, several codes are used. Analog gain, bias, filters are first. Scaling for real value display is second. And there is additional code in drive group only for display.


LED display	Parameter	Setting range	Description	Factory defaults	Adj. During run
FBK	PID Feedback	-	Displays PID value with real unit	-	-
16	Filter time constant for V1 input	0 ~ 9999	Adjust the responsiveness of the V1 input (0~+10V)	10	О
17	V1 input Minimum voltage	0 ~ 10[V]	Set the minimum voltage of the V1 input.	0	0
18	Frequency corresponding to I7	0 ~ 400[Hz]	Set the inverter output minimum output frequency at minimum voltage of the V1 input.	0.00	О
19	V1 input Maximum voltage	0 ~ 10[V]	Set the maximum voltage of the V1 input.	10	0
l10	Frequency corresponding to 19	0 ~ 400[Hz]	Set the inverter output maximum frequency at maximum voltage of the V1 input.	50.00	0
I11	Filter time constant for I input	0 ~ 9999	Set the input section's internal filter constant for I input.	10	О
l12	I input minimum current	0 ~ 20[mA]	Set the minimum current of I input.	4.00	0
l13	Frequency corresponding to I12	0 ~ 400[Hz]	Set the inverter output minimum frequency at minimum current of I input.	0.00	О
l14	I input Max current	0 ~ 20[mA]	Set the maximum current of I input.	20.00	О
l15	Frequency corresponding to I14	0 ~ 400[Hz]	Set the inverter output maximum frequency at maximum current of I input.	50.00	0
H50	PID Feedback selection	0 ~ 1	Terminal I input (0 ~ 20 [mA]) Terminal V1 input (0 ~ 10 [V])	0	X



- There is additional code only for display in drive group. This code shows feedback value with real unit when the ENT key is pressed. Feedback is calculated as follows:
 - 1st: Minimum analog value (I7, I12) and maximum analog value(I9,I14) (Normally, these are limited by sensor). If feedback signal is lower than low limit, feedback is limited to lower value. For example, minimum analog setting value is 2V and real feedback is 1.8V. In this case, internal feedback value is 2V.
 - 2nd: Minimum (I8, I13) and maximum frequency (I10, I15) when each minimum and maximum input value. These values are used for internal % of feedback values based on F21 Max frequency.

For example, I7 setting value is 2V, I8 setting value is 10Hz, I9 is 8V, I10 setting value is 40Hz, F21 Max frequency is 50Hz. Under this condition, internal minimum % is $10/50 \times 100 = 20 \%$ when input is less than 2V and internal maximum % is $40/50 \times 100 = 80\%$ when input is higher than 8V.

3rd: Only for display, Sinus M adopts one more scaling factor by internal %. I83 code is used for minimum display scaling factor and I84 is for maximum. With same condition above, I83 value is 1.0 and I84 value is 20.0. (Sinus M has limited LED to show, real unit is meaningless. So, display value can be any kind of unit like BAR, Ps). So FBK display code show 1.0 when input value is less than 2V and 20.0 when higher than 8V. The detailed equation is given below.

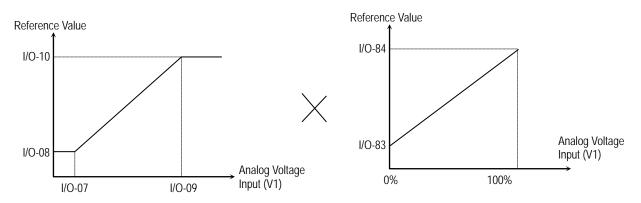

$$FBK \ display = \left(\left(\frac{I10 - I8}{I9 - I7} \right) \times \left(Input \ Voltage - I7 \right) + I8 \right) \times \frac{(I90 - I89)}{MaxFreq} + I89 \quad when \ feedback \ is \ from \ V1 = I8 + I89 = I89$$

For example, I7 setting value is 2V, I8 setting value is 10Hz, I9 setting value is 8V, I10 setting value is 40Hz, I89 setting value is 1.0, I90 setting value is 20.0, F21 max frequency is 50Hz. In this condition, when the real feedback value is 5V, FBK display code shows 10.5.

If I89 setting value is 0.0 and I90 setting value is 100.0, unit is "%".



10.7.3 PID Limit

LED display	Parameter name	Setting range	Description	Factory defaults	Adj. during Run
H55	PID output frequency low limit	0 to 400Hz	This parameter limits the low amount of the output frequency through the PID control.	50.00Hz	0
H56	PID output frequency high limit	0 to 400Hz	This parameter limits the high amount of the output frequency through the PID control.	0.5Hz	0

- PID low limit is the additional function code of Sinus M. H55 and H56 are related to each low limit and high limit. When the drive runs, the output frequency should be reached to low limit even if the feedback is higher than the reference. So, except during acceleration time from 0Hz to low limit, the output frequency is between low limit and high limit at any time.

10.7.4 Inverse PID

LED display	Parameter name	Setting range	Description		Factory defaults	Adj. during Run
H59	Inverse PID	0 ~ 1	0	Normal	0	V
1109	IIIVEISE FID	0~1	1 Inverse		7 0	^

- To stabilize the system (negative feedback system), the sensor output is high when the real physical value is high. Sometimes, however, the sensor output is inverse, or the system needs higher output when the signal is low. In that case, the inverse PID is used.
- For this functionality, H59 code is used. PID output is increased when PID reference is higher than feedback setting value "0". PID output is decreased when PID reference is higher than feedback setting value "1".
- When H59 is set to 1, the FBK display is the same. That is to say, the feedback is the same, but the error is inverse.
- This functionality affects Sleep and Wake Up operation. (Refer to Sleep & Wake up functionality below).

10.7.5 Sleep & Wake up functionality

LED display	Parameter name	Setting range	Description	Factory defaults	Adj. during Run
H61	Sleep delay time	0 ~ 999 (sec)	Delay time in Sleep mode	60 sec	Х
H62	Sleep frequency	0 ~ 400Hz	Frequency in Sleep mode	0.0Hz	0
H63	Wake-up level	0 ~ 50[%]	Wake Up level	2[%]	0



- In case output frequency of PID is under the Sleep frequency longer than the Sleep delay time, Inverter turns to the Sleep mode as exactly same the state of Stop. In order to return to normal state, Wake-up or restart after stop should be needed.
- If you don't want to use the Sleep mode, the Sleep frequency should be set under the low limit of PID, or the Sleep delay time should be set to "**0.0sec**".
- In case the feedback value drops below the specific value (PID Reference Wake-up level), the Inverter restarts automatically. For example, if Reference=50%, Wake-up level=5%, and Feedback >45%, then Inverter restarts automatically, and Wake-up should be valid for Sleep mode only.
- When the drive is in sleep mode, the Sinus M never runs again automatically by wake-up operation after "STOP" command. In this case, the Sinus M operates after the Run command again.



10.7.6 Open Loop1 (Addtional)

LED display	Parameter	Min/Max range	Des	cription		Factory defaults	Adj. During run
l17	Multi-function input terminal P1 define		0		run command (FX) run command (RX)	0	0
I18	Multi-function input terminal P2 define		3	Emergency Stop Trip Reset when a fault occurs		1	0
l19	Multi-function input terminal P3 define		5		ation command p freq- Low	2	0
120	Multi-function input terminal P4 define		6 7		p freq- Middle p freq- High	3	0
I21	Multi-function input terminal P5 define		9		cel/Decel-Low cel/Decel-Middle	4	О
122	Multi-function input terminal P6 define		10	Multi Accel/Decel-High DC brake during hold		5	О
123	Multi-function input terminal P7 define		12 13	2nd motor select -Reserved-		6	0
124	Multi-function input terminal P8 define	0 ~ 29	14 15 16	-Reserve Up- down	Frequency increase command Frequency decrease command	7	
			17 18 19 20 21 22 23 24 25 26 27 28 29	External Self-diag Change normal	trip: A contact (EtA) trip: B contact (EtB) nostic function PID operation to operation ce select hold ecel hold n Save alization		Ο



10.7.7 Open Loop1 Source

LED display	Parameter name	Setting range	Des	cription		Factory defaults	Adj. During run
			0	Digital	Keypad setting 1		
			1		Keypad setting 2		
	Open		2		V1 1: –10 ~ +10 [V]		
	Loop1		3		V1 2: 0 ~ +10 [V]		
FRQ3	Frequency	0 ~ 7	4		Terminal I: 0 ~ 20 [mA]	0	X
TINGS	setting	0~1	5	Analog	Terminal V1 setting 1+		^
	method		5		Terminal I		
	metriou		6		Terminal V1 setting 2+		
			6		Terminal I		
			7	Comm.	RS485		


- Multi-functional digital input terminal that is defined to Open Loop1 (28) is activated during "RUN", the Sinus M should operate with the frequency in FRQ3 of V/F control regardless of the frequency in H40.
- In case the value set in H40 already belongs to V/F control, only the frequency setting method should be changed. If the value of Frq is identical to the value set for FRQ3, then the Inverter operates exactly as before.



10.7.8 Accel/Decel Change frequency

LED display	Parameter name	Setting range	Description	Factory defaults	Adj. During run
H69	Accel/Decel Change Frequency	0 ~ 400Hz	Accel/Decel change frequency setting	0Hz	Х
134	Multi time Accel 1	0~ 6000	-	3.0	0
135	Multi time Decel 1	[sec]	-	3.0	
ACC	Accel time	0 ~ 6000	During Multi-Accel/Decel operation,	5.0	0
dEC	Decel time	[sec]	this parameter serves as Accel/Decel time 0.	10.0	0

- The output frequency is less than this set value; the Sinus M changes the speed based on the 1st Acc/Dec time values. If higher than this value, it takes the Acc/Dec time in Drv Group.
- If even one of the Multifunctional digital input is set to XCEL,M,H, then this function should be invalid.

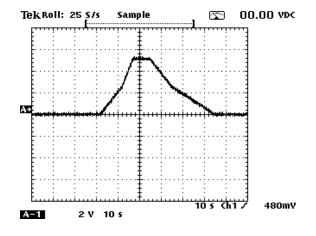

Parameter settings

Ref	Keypad	Control	V/F	
source	Reypau	mode		
Ref value	50Hz	H69	25Hz	
Acc time	10.0 sec	134	20.0 sec	
Dec time	20.0 sec	l35	40.0 sec	



10.8 Auto-tuning

Group	Group Display Parameter Name		Setting	Range	Default	Unit
Function group 2	H41	[Auto tuning]	1	0 ~ 1	0	-
	H42	[Stator resistance (Rs)]	-	0 ~ 14	-	Ω
	H44	[Leakage inductance (Lσ)]	-	0 ~ 300.00	-	mH

- Setting H41 as 1, the inverter measures the motor parameter.
- The measured motor parameters are used in Auto Torque Boost and Sensorless Vector Control.



CAUTION:

Auto tuning should be executed after stopping the motor. Motor shaft must not run during Auto tuning.

- ► H41: When H41 is set to 1 and press the Enter (●) key, Auto tuning is activated and "TUn" will appear on the display. When finished, "H41" will be displayed.
- ▶ H42, H44: The values of motor stator resistance and leakage inductance detected are displayed, respectively. When Auto tuning is skipped or H93 [Parameter initialize] is done, the default value corresponding to motor type (H30) will be displayed.
- Press the STOP/RST key on the keypad or set on the EST terminal to stop the Auto Tuning.
- ▶ If Auto tuning of H42 and H44 is interrupted, the default value will be set. If H42 is correctly calculated and auto-tuning of leakage inductance (H44) is interrupted, the measured value of H42 is used and the default of leakage inductance (H44) is set.
- See following pages for the motor parameter default values.



CAUTION:

Do not enter any incorrect value as stator resistance and leakage inductance. Otherwise, the function of Sensorless vector control and Auto torque boost could be deteriorated.



10.9 Sensorless Vector Control

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H40 ICONTROL MODE SELECTI		3	0 ~ 3	0	-
	H30	[Motor type select]	-	0.2 ~ 7.5	-	kW
	H32 [Rated slip frequency]		-	0 ~ 10	-	Hz
	H33 [Motor rated current]		-	0.5 ~ 50	-	Α
	H34	[Motor No Load Current]	-	0.1 ~ 20	-	Α
	H42	[Stator resistance (Rs)]	-	0 ~ 14	-	Ω
	H44	[Leakage inductance (Lσ)]	-	0~300.00	-	mH
Function group 1	F14	[Time for energizing a motor]	-	0.0~60.0	1.0	sec

■ If H40 – [Control mode select] is set to 3, Sensorless vector control will become active.



CAUTION:

Motor parameters should be measured for high performance. It is highly recommended H41 – [Auto tuning] be done prior to proceeding operation via Sensorless vector control.

- ▶ Ensure that the following parameters are entered correctly for high performance in Sensorless vector control.
- ▶ H30: Select motor type connected to inverter output.
- ▶ H32: Enter rated slip frequency, (See chapter 10-6).
- ▶ H33: Enter motor nameplate rated current.
- ▶ H34: After removing the load, select H40 [Control mode select] to 0 {V/F control} and run the motor at 50Hz. Enter the current displayed in Cur-[Output current] as motor no load current. If it is difficult to remove the load from the motor shaft, enter the value either 40 to 50% of the H33 [Motor rated current] or the factory default.
- ▶ In case that torque ripple occurs at high speed, lower H34 [No load current] to 30%.
- ▶ H42, H44: Enter the value of the parameter measured during H41 [Auto tuning] or the factory default.
- ▶ F14: Is the set time needed to magnetize which will run after this time. A low value set in F14 reduce the output available torque. The amount of the pre-exciting current is set in H34- [Motor no load current].
- Directly enter the motor nameplate values except when 0.2kW motor is used.




Factory default by motor ratings

Input voltage	Motor rating [kW]	Current rating [A]	No-load current [A]	Rated slip freq [Hz]	Stator resistance $[\Omega]$	Leakage inductance [mH]
	0.2	1.1	0.6	2.33	14.0	122.00
	0.4	1.8	1.2	3.00	6.70	61.00
	0.75	3.5	2.1	2.33	2.46	28.14
	1.5	6.5	3.0	2.33	1.13	14.75
	2.2	8.8	4.4	2.00	0.869	11.31
200	3.7	12.9	4.9	2.33	0.500	5.41
200	5.5	19.7	6.6	2.33	0.314	3.60
	7.5	26.3	11.0	2.33	0.196	2.89
	11.0	37.0	12.5	1.33	0.120	2.47
	15.0	50.0	17.5	1.67	0.084	1.12
	18.5	62.0	19.4	1.33	0.068	0.82
	22.0	76.0	25.3	1.33	0.056	0.95
	0.2	0.7	0.4	2.33	28.00	300.00
	0.4	1.1	0.7	3.0	14.0	177.86
	0.75	2.0	1.3	2.33	7.38	88.44
	1.5	3.7	2.1	2.33	3.39	44.31
	2.2	5.1	2.6	2.00	2.607	34.21
400	3.7	6.5	3.3	2.33	1.500	16.23
400	5.5	11.3	3.9	2.33	0.940	10.74
	7.5	15.2	5.7	2.33	0.520	8.80
	11.0	22.6	7.5	1.33	0.360	7.67
	15.0	25.2	10.1	1.67	0.250	3.38
	18.5	33.0	11.6	1.33	0.168	2.46
	22.0	41.0	13.6	1.33	0.168	2.84

10.10 Energy-saving operation

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 1	F40	[Energy-saving operation]	-	0 ~ 30	0	%

- Set the amount of output voltage to be reduced in F40.
- Set as the percent of Max output voltage.
- For fan or pump applications, energy consumption can be dramatically reduced by decreasing the output voltage when light or no load is connected.

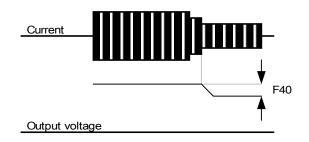



10.11 Speed search

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H22	[Speed search select]	-	0 ~ 15	0	
group Z	H23	[Current level]	-	80 ~ 200	100	%
	H24	[Speed search P gain]	-	0 0000	100	
	H25	[Speed search I gain]	-	0 ~ 9999	200	
I/O group	I54	[Multi-function output terminal select]	15	0 ~ 18	12	
	155	[Multi-function relay select]	15		17	

- This is used to prevent possible fault occurring if the inverter supplies a load in movement (For example if the inverter is disabled, the motor idles; if the inverter is enabled when the motor is idling, it will search the motor speed).
- The inverter estimates the motor rpm based on output current when speed search is active.


The following table shows 4 types of Speed search selection.

		The following table	ca scaron scicotion.		
H22		Speed search H20 is set 1 [Power ON start]	Speed search after Instant Power Failure restart	Speed search if H21 is set 1 [Restart after fault reset]	Speed search during Acceleration
		Bit 3	Bit 2	Bit 1	Bit 0
	0	-	-	-	-
	1	-	-	-	✓
	2	-	-	✓	-
	3	-	-	✓	✓
	4	-	✓	-	-
	5	-	✓	-	✓
	6	-	✓	✓	-
	7	-	✓	✓	✓
	8	✓	-	-	-
	9	✓	-	-	✓
	10	✓	-	✓	-
	11	✓	-	✓	✓
	12	✓	✓	-	-
	13	✓	✓	-	✓
	14	✓	✓	✓	-
	15	✓	✓	✓	✓

- ▶ H23: Limits current during Speed search. Set as the percent of H33.
- ▶ H24, H25: Speed search is managed by a PI control. Adjust P gain and I gain corresponding to the load characteristics.
- ▶ 154, 155: Signal of active Speed search is given to Multi-function output terminal (MO) and Multi-function relay output (3ABC).



▶ EX) Speed search during Instant Power Failure restart

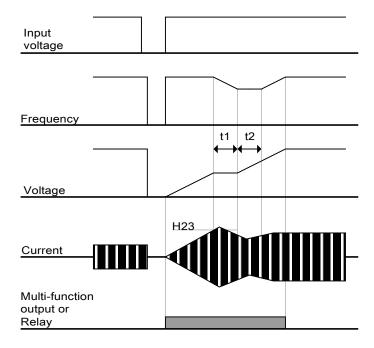


- When the input power is cut off due to instant power failure, the inverter trips (LV).
- When the power is restored, the inverter supplies the motor with the frequency stored before the low voltage trip and the voltage is increased due to speed search PI control.
- t1: If current is increasing over the preset level in H23, the voltage increasing will stop and the frequency is decreased.
- t2: If the opposite of t1 occurs, the voltage increasing starts again and the output frequency stops to decrease.
- When the frequency and voltage will reach their nominal level, the inverter will follow the acceleration ramp until the stored frequency before low voltage (LV) trip is reached.
- Speed search operation is suitable for loads with high inertia.
- ▶ Sinus M keeps normal operation when instant power failure occurs and power is restored in 15msec.



10.12 Auto restart try

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H26	[Number of Auto Restart try]	-	0 ~ 10	0	
	H27	[Auto Restart time]	-	0 ~ 60	1.0	sec

- This parameter sets the number of times auto restart is activated in H26.
- It is used to restart automatically after an alarm.
- ▶ H26: Auto restart will become active after the H27. H26 [Number of Auto restart try] is reduced to 1 when a trip occurs. If the trip outnumbers exceeds the preset restart try, auto restart function is deactivated. If the setting is reset via the control terminal or the STOP/RST key on the keypad, the number of auto restart try (set by user) is automatically restored.
- ▶ If there is no more trip occurring for 30 sec after Auto restart operation, the H26 is restored to the preset value.
- ▶ When operation is stopped due to Low voltage {Lvt}, Inverter Overheat {Oht}, and Hardware Trip {HWt}, Auto restart will be deactivated.
- ▶ After the H27- [Auto Restart time], the motor starts acceleration automatically via speed search (H22-25).
- ▶ The following pattern is shown when H26 [Number of auto restart try] is set to 2.

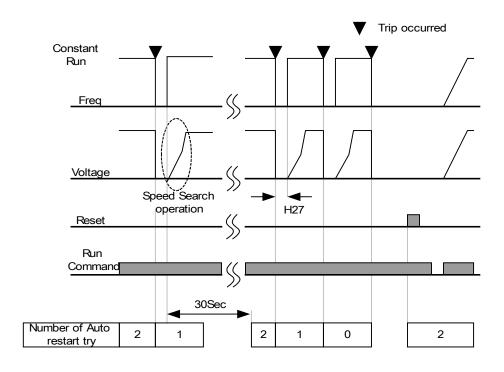



10.13 Operating sound select (Carrier frequency change)

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H39	[Carrier frequency]	-	1 ~ 15	3	kHz

[•] This parameter affects the sound of the inverter during operation.

H39	When setting carrier frequency high	Motor sound reduced
	nign	Inverter heat loss increased
		Inverter noise increased
		Inverter leakage current
		increased

10.14 2nd motor operation


Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H81	[2nd motor accel time]	-	0 ~ 6000	5.0	sec
	H82	[2nd motor decel time]	-	0 ~ 6000	10.0	sec
	H83	[2nd motor base freq.]	-	30 ~ 400	60.00	Hz
	H84	[2nd motor V/F pattern]	-	0 ~ 2	0	
	H85	[2nd motor Positive torque boost]	-	0 ~ 15	5	%
	H86	[2nd motor Negative torque boost]	-	0 ~ 15	5	%
	H87	[2nd motor stall prevention level]	-	30 ~ 150	150	%
	H88	[2nd motor electronic thermal level for 1 min]	-	50 ~ 200	150	%
	H89	[2nd motor electronic thermal level for continuous operation]	-	50 ~ 200	100	%
	H90	[2nd motor rated current]	-	1 ~ 50	26.3	Α
I/O group	l17	[Multi-function Input terminal P1Function select]	-	0 ~ 29	0	
	~	~				
	124	[Multi-function Input terminal P8 Function select]	12		7	

Set the terminal among Multi-function input P1 through P5 for second motor operation.

To define the terminal P5 as second motor operation, set I24 to 12.



- ▶ Used when an inverter operates 2 motors connected to two different types of the loads.
- ▶ 2nd motor operation does not drive 2 motors at the same time.
- ▶ As the figure below, when using two motors with an inverter by exchanging them, select one motor from 2 motors connected. When 1st selected motor operation is stopped, select a terminal for 2nd motor and define H81-H90 parameters to drive the 2nd motor.
- ▶ Define the 2nd motor select when a motor is stopped.
- ▶ H81 ~ H90 parameters function the same as 1st motor.

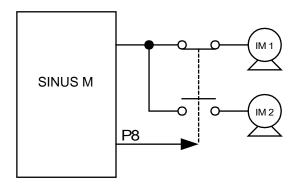



10.15 Self-Diagnostics function

How to use Self-Diagnostics function

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H60	Self-Diagnostic Selection	-	0 ~ 3	0	-
I/O group	l17	Multi-function input terminal P1 selection	-	0 ~ 29	0	-
	~	~				
	124	Multi-function input terminal P8 selection	20		7	-

- Select Self-Diagnostic function in H60, Function group 2.
- Define one terminal among P1~P8 terminals for this function.
- To define P8 for this function, set 124 to "20".



CAUTION:

Take caution not to touch the inverter by hand or other objects while performing this function because current is flowing to the inverter output.

- ▶ Perform Self-diagnostic function after input/output wiring of the inverter is finished.
- ▶ This function enables the user to safely check for the IGBT fault, output phase open and short, and Ground fault without disconnecting the inverter wiring.
- ▶ There are 4 ways to select.

H60 ¹⁾	Self-	0	Self-Diagnostic disabled
	Diagnostic function	1	IGBT fault and Ground fault 2)
		2	Output phase short & open circuit and Ground fault
		3	Ground fault (IGBT fault, Output phase short and open circuit)

- 1) Selecting the higher number performs the lower number's function.
- 2) Ground fault of U phase in $2.2 \text{KW} \sim 4.0 \text{KW}$ inverters and ground fault of V phase in other rating inverters may not be detected when selecting "1". Select 3 to make sure to detect all phase of U, V, W.
- ▶ When setting H60 to a specific value from 1 to 3 and turn the terminal defined for this function among P1 ~ P8 terminals ON, the corresponding function is conducted, displaying "dIAG" and the previous menu will be displayed when this function is completed.
- ▶ To stop this function, press STOP/RESET key on the keypad, turn the defined terminal OFF or turn the EST terminal ON.
- ▶ When an error occurs during this function, "FLtL" will be displayed. While this message is displayed, press Enter key (■), the fault type is displayed and pressing the UP(▲) or



 $Down(\ ullet\)$ key shows When the fault occurs while this function is being performed, press Stop/Reset key or turn the RESET-defined terminal ON to reset the fault.

▶ The following table shows the fault type while this function is active.

No.	Display	Fault type	Diagnosis
1	UPHF	Switch above IGBT's U phase fault	Contact your sales representative.
2	UPLF	Switch below IGBT's U phase fault	
3	vPHF	Switch above IGBT's V phase fault	
4	vPLF	Switch below IGBT's V phase fault	
5	WPHF	Switch above IGBT's W phase fault	
6	WPLF	Switch below IGBT's U phase fault	
7	UWSF	Output short between U and W	Check for the short of inverter
8	vUSF	Output short between U and V	output terminal, motor connection
9	WvSF	Output short between V and W	terminal or the proper motor connection.
10	UPGF	Ground fault at U phase	Check for the ground fault
11	vPGF	Ground fault at V phase	occurred at inverter output cable
12	WPGF	Ground fault at W phase	or motor or motor insulation damage.
13	UPOF	Output open at U phase	Check for proper connection of
14	vPOF	Output open at V phase	the motor to the inverter output or
15	WPOF	Output open at W phase	proper motor connection.



10.16 Frequency setting and 2nd drive method select

Group	Display	Parameter Name	Setting	Range	Default	Unit
	drv	Drive mode 1	-	0 ~ 3	1	-
Drive	Frq	Frequency mode 1	-	0 ~ 8	0	-
group	drv2	Drive mode 2	-	0 ~ 3	1	
	Frq2	Frequency mode 2	-	0 ~ 7	0	
I/O	I17~I24	Multi-function input		0 ~ 29		
group	117~124	terminal P1 select	-			

- ▶ Drive mode 1 is used when the input set as 2nd source is not entered into multi-input (I17~I24)
- ▶ When setting a multifunction digital input as a second source (22), Drive Mode 2 can set the frequency value and send commands. This is used when communication is suspended and local operating mode is resumed.
- ▶ The switching method for Drive mode 1 and Drive mode 2 is as follows: if multi-input terminal set as Drive mode 2 is off, it used as Drive mode 1; If multi-input terminal set as Drive mode 2 is on, it used as Drive mode2.
- ▶ Selects the self drive in the 2nd switching of drv2 among the followings

drv2	Drive mode 2	0	Operation v	ia Run/Stop key on the Keypad		
		1	Terminal FX: Forward Run command			
			operation	RX: Reverse Run command		
		2		FX: Run/Stop command		
				RX: Forward/Reverse command		
3 Operation via communica				ia communication		

▶ Selects the self drive in the 2nd switching of Frq2 among the following:


	Consider the containing of the containing the containing.					
Frq2	Frq2 Frequency mode 2	0	Digital	Keypad digital frequency mode1		
		1	Digital	Keypad digital frequency mode2		
		2		V1 terminal setting1: -10 ~ +10V		
		3		V1 terminal setting2: 0 ~ +10V		
		4	Analog	I terminal: 0 ~ 20mA		
		5		V1 terminal setting1 + I terminal		
		6		V1 terminal setting2 + I terminal		
		7	Setting via I	RS-485 communication		

▶ The following is an example for switching of drv1 and drv2.

Group	Display	Parameter Name	Setting	Range	Default	Unit
	drv	Drive mode 1	-	0 ~ 3	1	-
Drive	Frq	Frequency mode 1	-	0 ~ 8	0	-
group	drv2	Drive mode 2	-	0 ~ 3	1	
	Frq2	Frequency mode 2	-	0 ~ 7	0	
I/O group	124	Multi-function input terminal P8 input terminal	-	0 ~ 29	7	

▶ The following figure is drawn when setting is like the above and command frequency is 30 [Hz], F4 [stop method]=0.



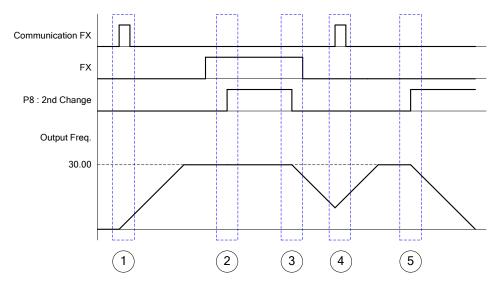

- ① Accelerate for accel time up to setting frequency by Drive 1 mode, FX signal.
- ② Drive continuously under FX is ON because DRV2 is 1 when P8 terminal input is ON and change into 2nd.
- ③ Stop gradually as stop command because DRV is communication drive when P8 terminal input is OFF and change into 1st.
- 4 Accelerate up to setting frequency for Drive 1 mode, FX signal is ON.
- Stop gradually under FX is OFF because DRV2 is 1 when P8 terminal input is ON and change into 2nd.

⚠ CAUTION

If you press ON while multi-function input terminal (P1 ~ P8) is set to 2nd Source, frequency command and drive command is changed to Drive mode 2. So you should check Drive mode 2 before configuring the multi-function terminal.



10.17 Over voltage trip prevention deceleration and Power Braking

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function	F4	Select stop method	3	0 ~ 3	0	
group 1	F59	BIT 0: Stall prevention under Accel BIT 1: Stall prevention under constant speed BIT 2: Stall prevention under Decel	-	0 ~ 7	0	
	F61	Select voltage limit under Decel	-	0 ~ 1	0	

[▶] To prevent overvoltage trip when reducing speed, set BIT2 of F59 to 1 and set 3 of F4 for Power Braking.

- ▶ Overvoltage trip prevention when reducing speed: this function prevents overvoltage trip when reducing speed or at stop by using the regeneration braking power.
- ▶ Power Braking: Adjusting the deceleration slope or accelerate again, when inverter's DC voltage rises above a certain level by the electric motor's regeneration energy. It can be used when short deceleration time without braking resistance is needed. However, be aware that the deceleration time can get longer than the set one and when it's used at a load that frequently decelerates, be cautious of damage caused by the motor's overheating.

∠!\ CAUTION

Stall prevention and Power Braking only operate when decelerating, and Power Braking has priority. That is, when BIT2 of F59 and Power Braking of F4 are both set, Power Braking operates.

F61 (selecting voltage restriction when decelerating) is visible when BIT2 of F59 is set.

Overvoltage trip may occur, if the deceleration time is too short or inertia is too big.



10.18 External brake control

Group	Code	Name	Set nr.	Limit	Default	Unit
Function Group 2	H40	Controlling method select	0	0~3	0	
In/Output	182	Brake open current	-	0~180.0	50.0	%
Group	183	Brake open delay time	-	0~10.00	1.00	Sec.
	184	Brake open CW Freq.	-	0~400	1.00	Hz
	185	Brake open CCW Freq.	-	0~400	1.00	Hz
	186	Brake close delay time	-	0~10.00	1.00	Sec.
	187	Brake close Freq.	-	0~400	2.00	Hz
	154	Multi-function output terminal select	19	0~ 19	12	
	155	Multi-function relay select	19	0~ 19	17	

^{182~87} is visible only when 154 or 155 is set to 19.

- ▶ Used to control on, off operation of electronic brake of a load system. It only operates when the set value of control mode (H40) is 0 (V/F control). Build sequence after checking set control mode.
- ▶ When the brake control is operating, DC brake and dwell run do not operate when starting up.


Brake open Sequence

▶ When the electric motor is given instructions to run, the inverter accelerates CW or CCW to the brake open frequency (I84, I85). After reaching the brake open frequency, the current running through the motor reaches brake open current (I82) and puts out brake open signals to multi-function output terminals or output relays that are set for brake control.

Brake close sequence

▶ During run, the electric motor decelerates when stop instruction is given. When output frequency reaches brake close frequency, it stops decelerating and puts out brake close signal to the set output terminal. Frequency turns "0" after keeping the frequency for brake close delay time (I86).



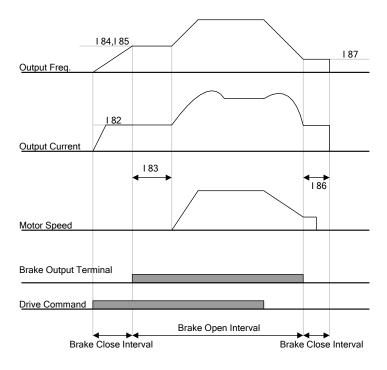

In Case of V/F Constant Control on Control Mode Select

△ CAUTION

External Brake control is only used in V/F steady control, and the brake open frequency has to be set smaller than the brake close frequency.

10.19 Kinetic energy buffering

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function	H64	KEB operation select	1	0~1	0	
Group 2	H65	KEB operation start level	-	110.0 ~ 140.0	130.0	-
	H66	KEB operation stop level	-	110.0 ~ 145.0	135.0	%
	H67	KEB operation gain	-	1 ~ 20000	1000	-
	H37	Load inertia	0	0~2	0	-


- When power failure occurs in the input power, the DC link voltage of the inverter gets low and low voltage trip occurs. Its function is to maintain the voltage of DC link by controlling output frequency of the inverter during the time of power failure. That is, it can keep the time from the point of power failure to low voltage trip long.
- ▶ Selects energy buffering operation when input power is cut. If H64 is set to 0, it operates normal deceleration run until low voltage occurs. When H64 is set to 1, it controls the inverter output frequency and charges the energy occurred from the motor to the inverter DC.
- ▶ H65 (KEB operation start level), H66 (KEB operation stop level): Selects starting and stopping point of the energy buffering operation. Set the stop level (H65) higher than the start level (H66) setting the low voltage trip level as standard.
- ▶ H37 (Load inertia): Uses the momentum amount of the load inertia to control energy buffering operation. If the inertia ratio is set high, the frequency change range gets small when running energy buffering.



10.20 DRAW Control

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function	F70	DRAW mode select	-	0 ~ 3	0	-
Group 1	F71	DRAW rate	-	0.0 ~ 100.0	0.0	%

▶ Draw control is a sort of Open Loop tension control. <u>Draw is the ratio of speed difference</u> between one roll and the other. Tension is generated as in the following equations:

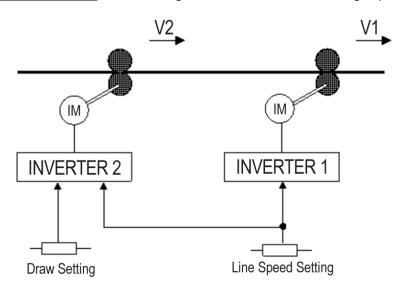

$$D = \frac{V1 - V2}{V2}$$

$$T = E \times S \times D = E \times S \times \frac{V1 - V2}{V2}$$

Where

V1, V2: Transfer speed of each roll (m/min)

T: Tension (kg)

E: Elasticity coefficient of processed material (kg/mm²)

S: Sectional area of processed material (mm²)

▶ The rate reflected in the output frequency differs according to the selection of F70 (DRAW mode select)

F70	Draw Operation	0	Draw not operated
	Operation	1	V1(0~10V) input
		2	I(0~20mA) input
		3	V1(-10~10V) input




▶ Select 1 and 2 for F70

The center value of analogue input (selected by the set value of I6~I15) as standard, if the input is big it gets (+), if small (-) and gets reflected in the output frequency as the ratio set in F71.

▶ Select 3 for F70

0V as standard, if analog input voltage is big, it gets (+), if small (-) and gets reflected in the output frequency as the rate set in F71.

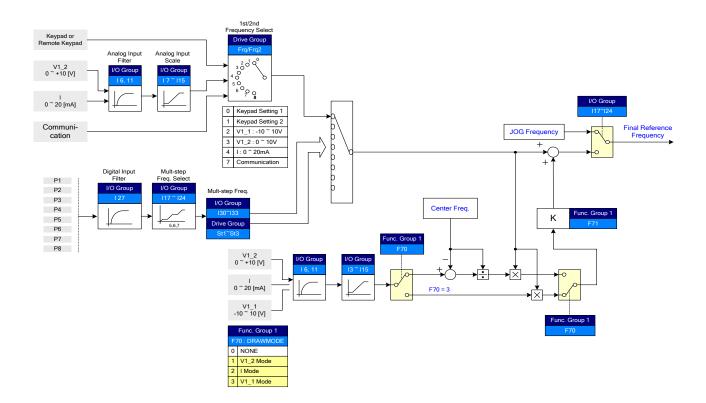

DRAW operation example

If draw operation is set to 30Hz, F70=3(V1: $-10V \sim 10V$), F71=10.0% selected, (I3 \sim I15 = factory defaults) Frequency that gets changed by DRAW operation is 27Hz(V1=-10V) \sim 33Hz(V1=10V)

⚠ CAUTION

When operating DRAW, set command frequency to FRQ/FRQ2 and set the rest of it from F70 (DRAW mode select). For example, if FRQ=2(V1) and F70=1(V1), it does not operate.



10.21 2 Phase PWM

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function Group	H48	PWM controlling mode	1	0 ~ 1	0	
2		0: NORMAL PWM				
		1: 2 phase PWM				

▶ Heat loss and leakage current from inverter can be reduced when H48 is set to 1(2 phase PWM) according to the load ratio.

10.22 Cooling fan control

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H77	[Cooling fan control]	1	0 ~ 1	0	

- Control the On/ Off of the heatsink cooling fan.
- ▶ When it is set to 0:
- -. Cooling fan begins to operate when power is ON.
- -. Cooling fan is stopped when inverter main circuit voltage becomes low due to power off.
- ▶ When it is set to 1:
- -. Cooling fan begins to operate when power is turned ON with RUN command ON.
- -. Cooling fan is stopped when RUN command is Off and when the deceleration ramp is end.
- -. Cooling fan keeps operating when heatsink temperature exceeds a certain limit regardless of RUN command.
- -. Used when frequent Run/Stop or long time stop is required. This may make the cooling fan life longer.



10.23 Operating mode selection when cooling fan trip occurs

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H78	[Operating mode when cooling fan trip occurs]	-	0 ~ 1	0	-
I/O group	l54	[Multi-function output terminal select]	18	0 ~ 18	12	-
	155	[Multi-function relay select]	18	0 ~ 18	17	-

- Select 0 or 1 in H78 code.
- If H78 code is set to 0 (continuous operation), alarm can be output in I54 or I55.
- ▶ 0: continuous operation when cooling fan trip occurs.
- -. Operation is not stopped regardless of cooling fan trip.
- -. When I54 or I55 is set to 18 (cooling fan fault alarm), fault alarm signal can be detected using Multi-function output terminal or Multi-function relay.



! Caution:

- If operation is continued after cooling fan trip occurs, overheat trip may happen and protective function be activated. It also reduces the life of main components due to rise in inverter inner temperature.
- ▶ 1: Operation stops at cooling fan fault
- message is displayed on the keypad and -. When cooling fan fault occurs, operation is stopped.
- -. If I54 or I55 is set to 17(Fault output), fault message is detected by the Multi-function output terminal or Multi-function relay.



10.24 Parameter read/write

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function	H91	[Parameter read]	1	0 ~ 1	0	
group 2	H92	[Parameter write]	1	0 ~ 1	0	

Used to read/write Inverter Parameters using remote keypad.



! Caution:

Take caution when Parameter write (H92) is executed. By doing this, operation inverter parameters are cleared and the parameters of remote the remote keypad are copied into the inverter.


Parameter read

Step	Note	Keypad display
1	Move to H91 code.	H91
2	Press Enter (●) key once.	0
3	Press Up (▲) key once.	rd
4	Press Enter (●) key twice.	rd
5	H91 is displayed when Parameter read is finished.	H91

Parameter write

Step	Note	Keypad display
1	Move to H92 code.	H92
2	Press Enter (●) key once.	0
3	Press Up (▲) key once.	Wr
4	Press Enter (●) key twice.	Wr
5	H91 is displayed when Parameter read is finished.	H92

During parameter reading (H91), the display of the remote keypad shows "rd" (Read) and "vr" (Verify), whereas during parameter writing (H92) the display only shows "wr" (Write).

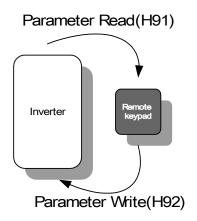



10.25 Parameters Restore default / Lock

Parameters restore

Group	Display	Parameter Name	Range	Range	
Function group 2	H93	[Parameter initialize]	0	-	0
group Z			1	4 groups initialize	
			2 Drive group initialize		
			3	F1 group initialize	
			4	F2 group initialize	
			5	I/O group initialize	

- Select the group to be initialized and perform it in H93 code.
- ▶ Press Enter (●) key after set H93. H93 will be displayed again after initialization is complete.

Password register

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H94	[Password register]	-	0 ~ FFFF	0	
	H95	[Parameter lock]	-	0 ~ FFFF	0	

- Register password for Parameter lock (H95).
- Password should be Hex decimal. (0 ~ 9, A, B, C, D, E, F)



<u>Do not forget the registered password.</u> It is used when unlocking the parameters.

- Factory default password is 0. Enter the new password except 0.
- ▶ Follow the steps below when you register the password for the first time.

Step	Note	Keypad display
1	Move to H94 code.	H94
2	Press Enter (●) key twice.	0
3	Register password. (Ex: 123)	123
4	123 will blink when Enter (●) key is pressed.	123
5	Press Enter (●) key.	H94



► Follow the table below to change the password. (Current PW: 123 → New PW: 456)

Step	Note	Keypad display
1	Move to H94 code.	H94
2	Press Enter (●) key.	0
3	Enter any number (e.g.: 122).	122
4	Press the Enter (●) key. 0 is displayed because wrong value was entered. Password cannot be changed in this status.	0
5	Enter the right password.	123
6	Press Enter (●) key.	123
7	Enter the new password.	456
8	Press the Enter (●) key. Then "456" will blink.	456
9	Press Enter (●) key.	H94

Parameter Lock

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H95	[Parameter lock]	-	0 ~ FFFF	0	
	H94	[Password register]	-	0 ~ FFFF	0	

- This parameter is used to lock the user-set parameters using the password.
- ▶ See the table below to lock the user-set parameter via the H94 [Password Register].

Step	Note	Keypad display
1	Move to H95 code.	H95
2	Press Enter (●) key.	UL
3	Parameter value can be changed in UL (Unlock) status.	UL
4	Press Enter (●) key.	0
5	Enter the password created in H94 (e.g.: 123).	123
6	Press Enter (●) key.	L
7	Parameter value cannot be changed in L (Lock) status.	L
8	Press Enter (●) key.	H95



▶ See the table below to unlock the user-set parameter via password.

Step	Note	Keypad display
1	Move to H95 code.	H95
2	Press Enter (●) key.	L
3	Parameter value cannot be changed in L(Lock) status.	L
4	Press Enter (●) key.	0
5	Enter the password created in H94 (e.g.: 123).	123
6	Press Enter (●) key.	UL
7	Parameter value can be changed in UL (Unlock) status. While seeing this message	UL
8	Press Enter (●) key.	H95



10.26 Functions related to "Fire Mode"

- The Fire mode function is used in all the applications required the continuous operation of the equipment even if the environmental conditions do not allow it, for example as in pumps and fans (HVAC) which have to operate during a fire emergency. The drive should then ignore any alarm tripped and should automatically and endlessly resets even serious trips. When the Fire mode is activated, the inverter might be damaged.
- Due to the activation of the Fire Mode function, the drive guarantee should be no longer valid if the conditions for activation of a heavy fault occur. It is possible to detect when a heavy alarm has tripped if the value of I96 changes to "1". This will void the drive guarantee. Also, the value "1" is not initialized.
- When in Fire mode, the Sinus M changes its several internal status as below.
 - A. Control mode changes to V/F.
 - B. The value in I88 becomes the frequency reference. This value has priority over any kind of reference.
 - C. Acceleration/deceleration time is 10 sec. and cannot be changed.
 - D. The trips below are ignored, but the fault display just shows what trip has occurred in the Drive group, whilst the digital output that is defined as "alarm trip" is activated even if the drive is still controlling the connected motor.
 - Emergency Stop (Est)
 - External Trip A (EtA)
 - External Trip B (EtB)
 - Inverter Overheated (Oht)
 - Inverter Overload (IOL)
 - Electrical Thermal trip (EtH)
 - Output Phase Loss (POt)
 - Motor Overload (Olt)
 - Fan Trip (Fan)
 - E. The Sinus M will endlessly reset the alarms below regardless of the auto-retry number. However, Auto-retry delay time (H27) is used.
 - Overcurrent (Oct)
 - Overvoltage (Ovt)
 - Low Voltage (Lut)
 - Ground Trip (GFt)
 - F. The Sinus M cannot operate when the alarms below have tripped, that damage the inverter.
 - Self Diagnosis IGBT Broken (FLtL)
 - Hardware Failure (HWt)
 - Communication Error with I/O board (Err)



LED display	Parameter name	Setting range	Description	Factory defaults	Adj. during Run
188	Fire Mode Frequency	0.00~400.00Hz	Command frequency when in Fire mode	50.00 Hz	0
196	Fire Mode Evidence	0 ~ 1	0 : No trip occurred during Fire mode 1 : Trip occurred during Fire mode	-	Display only

<u>Caution:</u> Once the Fire mode is activated, the drive cannot return to its previous operating conditions. To restore normal operating conditions, turn off and on the inverter in order to reboot its control board.

<u>Caution:</u> Once the Sinus M enters the Fire mode, no alarm previously tripped may be reset.

To deactivate the Fire mode, turn off and on the inverter AND disable the Fire Mode input. Failure to do so will prevent the alarms tripped from being displayed when the Sinus M is normally operating.

When in Fire-mode, the target frequency should be 50Hz and the ACC/DEC time should be set to 10sec. If the user attempts to change these values when the inverter is running, the output frequency is left unchanged (50Hz), whereas the new values for ACC/DEC become effective only after disabling the Fire mode.



Notes:



CHAPTER 11 - MONITORING

11.1 Operating status monitoring

Output current

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	CUr	[Output current]				

Inverter output current can be monitored in Cur.

Motor RPM

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	rPM	[Motor RPM]	-			
Function group 2	H31	[Number of motor poles]	-	2 ~ 12	4	
	H49	[PID control select]	-	0 ~ 1	0	
	H74	[Gain for Motor rpm display]	-	1 ~ 1000	100	%

- Motor rpm can be monitored in rPM.
- ▶ When H40 is set to 0 {V/F control} or 1 {PID control}, the Inverter output frequency (f) is displayed in RPM using the formula below. Motor slip is not considered.

$$RPM = \left(\frac{120 \times f}{H31}\right) \times \frac{H74}{100}$$

- ▶ H31: Enter the number of motor poles shown on the motor nameplate.
- ▶ H74: This parameter is used to change the motor speed display at run speed (r/min) or mechanical speed (m/min).

Inverter DC Link Voltage

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	dCL	[Inverter DC Link Voltage]	-			

- Inverter DC link voltage can be monitored in dCL.
- \blacktriangleright $\sqrt{2}$ times the value of input voltage is displayed in dCL while motor is at a stop.



User display select

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	vOL	[User display select]	-			
Function group 2	H73	[Monitoring item select]	-	0 ~ 2	0	

- The selected item in H73- [Monitoring item select] can be monitored in vOL- [User display select.
- If output power or torque is selected, Por or tOr will be displayed.
- ▶ H73: Select one of the desired item to be shown.

H73	[Monitoring item select]	0	Output voltage [V]	
		1	Output power [kW]	
		2	Torque [kgf · m]	

▶ Enter motor efficiency indicated on motor nameplate in H36 to display the correct torque value.



Power on display

Group	Code	Parameter	Sett	ing range	Initial
Function	H72	[Power on display]	0	Frequency command (0.00)	0
group 2			1	Accel time (ACC)	
			2	Decel time (DEC)	
			3	Drive mode (drv)	
			4	Frequency mode (Frq)	
			5	Multi-step frequency 1 (St1)	
			6	Multi-step frequency 2 (St2)	
			7	Multi-step frequency 3 (St3)	
			8	Output current (CUr)	
			9	Motor rpm (rPM)	
			10	Inverter DC link voltage (dCL)	
			11	User display select (vOL)	
			12	Fault display 1(nOn)	
			13	Operating direction select (drC)	
			14	Output current 2	
			15	Motor rpm 2	
			16	Inverter DC link voltage 2	
			17	User display select 2	

- Select the parameter to be displayed on the keypad after Power ON. The output current and motor rpm are displayed when 8, 9, 14, 15 are set.




11.2 Monitoring the I/O terminal

Input terminal status monitoring

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	125	[Input terminals status display]	-			


- Current input terminal status (ON/Off) can be monitored in I25.
- ▶ For example: The following is displayed when P1, P3, P4 are ON and P2, P5 are OFF.

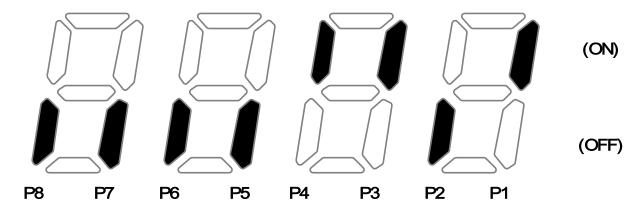

Output terminal status monitoring

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I26	[Output terminals status display]	-			

- Current output terminals (MO, relays) status (ON/Off) can be monitored in I26.
- ▶ For example: The followings are displayed when Multi-function output terminal (MO) is ON with Multi-function relay OFF.

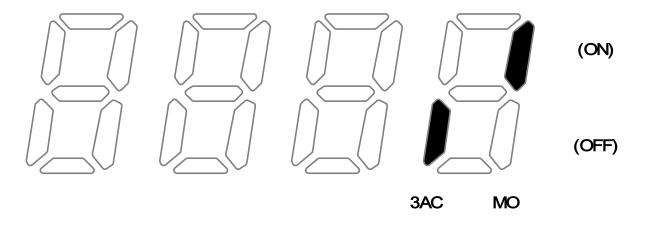



11.3 Monitoring fault condition

Monitoring current fault status

Group	Display	Parameter Name	Setting	Range	Default	Unit
Drive group	nOn	[Current Fault Display]	-			

- Fault occurred during operation is displayed in nOn.
- Up to 3 kinds of faults can be monitored.
- ▶ This parameter gives information on fault types and the operating status at the time of the fault. Refer to Page 11-5 for keypad setting.

л ксураа эсп	ig.		
Fault types	Frequency	3000	
	Current	50	
	Accel/Decel Information	REE	Fault during Accel
		of !	Fault during Decel
		540	Fault during constant run


- ▶ Refer to Page 14-1 on fault types.
- Fault History Monitoring

Group	Display	Parameter Name	Setting	Range	Default	Unit
Function group 2	H1	[Fault history 1]	-			
group 2	~	~				
	H5	[Fault history 5]				
	H6	[Reset fault history]	-	0 ~ 1	0	

- H1 ~ H5: Up to 5 faults information are stored.
- H6: Previous fault information stored in the code H1 through H5 are all cleared setting "1"
 H6.
- ▶ When a fault occurs during operation, it can be monitored in **nOn**.



- ▶ When the fault condition is reset via the STOP/RST key or multi-function terminal, information displayed in **nOn** will be moved to H1. Moreover, the previous fault info stored in H1 will be automatically moved to H2. Therefore, the updated fault info, will be stored in the H1.
- ▶ When more than 1 fault occurred at the same time, up to 3 types of faults will be stored in one code.

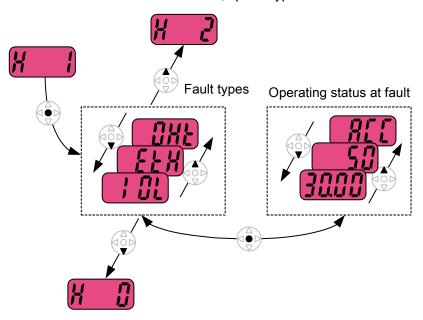




11.4 Analog Output

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	150	[Analog output item select]	-	0 ~ 3	0	
	I51	[Analog output level adjustment]	-	10 ~ 200	100	%

- Output item and the level from the AM terminal are selectable and adjustable.
- ▶ I50: The selected item will be output on the Analog output terminal (AM).

150	Analog output			Item correspo	Item corresponding to 10V		
	item select			200V	400V		
		0	Output frequency.	Max Frequen	cy (F21)		
		1	Output current	150% of Inve	rter rated		
		2	Output voltage	282Vac	564Vac		
		3	Inverter DC link voltage	400Vdc	800Vdc		

 ▶ I51: If you want to use Analog output value as an input signal for instruments, the value can be adjustable according to instruments specifications.





11.5 Multi-function output terminal (MO) and Relay (3AC)


Group	Code	Parameter	Settin	g range			Initial
	15.4	[Multi-function	0	FDT-1			12
	I54	output terminal select]	1	FDT-2			
	155	[Multi-function	2	FDT-3			17
	155	relay select]	3	FDT-4			
		4 FDT-5					
			5	Overload (C	DLt}		
			6	Inverter Ove	erload (IOLt)		
			7	Motor stall {	(STALL)		
			8	Over voltag	e trip {OV}		
			9	Low voltage	e trip {LV}		
			10	Inverter over	erheat {OH}		
			11	Command I	oss		
			12	During run			
			13	During stop			
I/O group		14	During cons	stant run			
		15	During spee	ed searching			
roup			16	Wait time fo	or run signal	input	
			17	Fault output			
			18	Cooling fan When	trip alarm When a	When low	
	I56	[Fault relay output]		setting the H26– [Number of auto restart]	trip, different than low voltage occurs	voltage trip occurs	
				Bit 2	Bit 1	Bit 0	
			0	-	-	-	2
			1	-	-	✓	
			2	-	✓	-	
			3	-	✓	✓	
			4	✓	-	-	
			5	✓	-	✓	
			6	✓	✓	-	
			7	✓	✓	✓	



- ▶ I56: When 17 {Fault output} is selected in I54 and I55, Multi-function output terminal and relay will be activated with the value in I56.
- 0: FDT-1
 - Check whether the output frequency matches the user-setting frequency.
 - ▶ Active condition: Absolute value (preset frequency output frequency) ≤ Frequency Detection Bandwidth/2

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I53	[Detected Frequency Bandwidth]	-	0 ~ 400	10.00	Hz


- Cannot be set above Max frequency (F21).
 - ▶ When setting I53 to 10.0

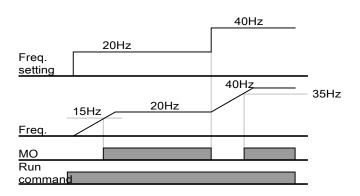

- 1: FDT-2
 - Activated when the preset frequency matches frequency detection level (I52) and FDT-1 condition is met.
 - ▶ Active condition: (Preset frequency = FDT level) & FDT-1

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I52	[Detected Frequency level]	-	0 ~ 400	30.00	Hz
	153	[Detected Frequency Bandwidth]	-	0 ~ 400	10.00	

- Cannot be set above Max frequency (F21).
 - ▶ When setting I52 and I53 to 30.0 Hz and 10.0 Hz, respectively

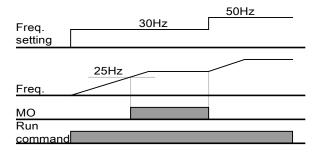




• 2: FDT-3

- Activated when run frequency meets the following condition.
- ▶ Active condition: Absolute value (FDT level run frequency) ≤ FDT Bandwidth/2

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I52	[Detected Frequency level]	-	0 400	30.00	Hz
	I53	[Detected Frequency Bandwidth]	-	0 ~ 400	10.00	

- Cannot be set above Max frequency (F21).
- ▶ When setting I52 and I53 to 30.0Hz and 10.0 Hz, respectively

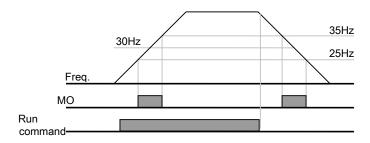

• 3: FDT-4

▶ Activated when run frequency meets the following condition.


Active condition:

Accel time: Run Frequency ≥ FDT Level

Decel time: Run Frequency > (FDT Level – FDT Bandwidth/2)

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I52	[Detected Frequency level]	-	0 ~ 400	30.00	Hz
	I53	[Detected Frequency Bandwidth]	-	0 ~ 400	10.00	

- Cannot be set above Max frequency (F21).
 - ▶ When setting I52 and I53 to 30.0Hz and 10.0 Hz, respectively

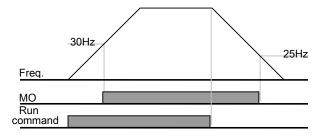



• 4: FDT-5

▶ Activated as B contact contrast to FDT-4.


Active condition:

Accel time: Run Frequency ≥ FDT Level

Decel time: Run Frequency > (FDT Level – FDT Bandwidth/2)

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	I52	[Detected Frequency level]	-	0 400	30.00	Hz
	153	[Detected Frequency Bandwidth]	-	0 ~ 400	10.00	

- Cannot be set above Max frequency (F21).
 - ▶ When setting I52 and I53 to 30.0Hz and 10.0 Hz, respectively

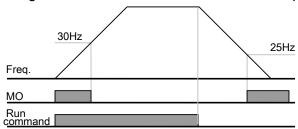


- 5: Overload (OLt)
 - ▶ Refer to page 12-2.
- 6: Inverter Overload (IOLt)
 - ▶ Refer to page 12-6.
- 7: Motor stall (STALL)
 - ▶ Refer to page 12-3.
- 8: Over voltage trip (Ovt)
 - Activated when over voltage trip occurs due to DC link voltage exceeded 400Vdc for 2S/T class and 820Vdc for 4T class.
- 9: Low voltage trip (Lvt)
 - Activated when low voltage trip occurs due to DC link voltage under 180Vdc for 2S/T class and 360Vdc for 4T class.
- 10: Inverter heatsink overheat (OHt)
 - Activated when the heatsink is overheated.
- 11: Command loss
 - ▶ Activated when Analog (V1,I) and RS485 communication commands are lost.




• 12: During operation

  Activated when run command is ON and inverter output voltage is different from 0.




13: During stop

 Activated during stop without output voltage/frequency.



14: During constant speed

 ▶ Activated during constant speed operation.



15: During speed searching

▶ Refer to page 10-13.

• 16: Wait time for run signal input

▶ This function becomes active during normal operation and that the inverter waits for active run command from external sequence.

• 17: Fault output

- ▶ The parameter set in I56 is activated.
- ▶ For example, if setting I55, I56 to 17 and 2, respectively, Multi-function output relay will become active when trip different from "Low voltage trip" occurred.

18: Cooling fan trip alarm

▶ Used to give an alarm signal when H78 is set to 0 (constant operation at cooling fan trip). Refer to page 10-21 .



11.5.1 A, B Contact selection


LED display	Parameter name	Setting range	Description	Factory defaults	Adj. During run
I91	A, B Contact	0	A Contact (Normal open)	0	0
191	selection	1	B Contact (Normal Close)	U	

- This function code is for selecting the Contact type of multifunction transistor Digital output MO. MO contact type is A contact (normally open) when setting value is "0", and B contact (normally closed) when setting value is "1".
- Multifunction relay digital output 3 A,B,C does not need this function, because this relay has already both A, B Contacts.

11.5.2 A, B Contact On/Off delay

LED display	Parameter name	Setting range	Description	Factory defaults	Adj. During Run
192	MO On delay	0.0~10.0 sec	MO contact On delay time	0.0 sec	Χ
193	MO Off delay	0.0~10.0 sec	MO contact Off delay time	0.0 sec	Χ
194	30A,B,C On delay	0.0~10.0 sec	30 A,B,C contact On delay time	0.0 sec	Х
195	30A,B,C Off delay	0.0~10.0 sec	30 A,B,C contact Off delay time	0.0 sec	Х

- These codes are for On, off delay time of multi functional transistor Digital output MO and Relay Digital output 3 A,B,C.
- If the operation time of the contact is shorter than the delay time, operation is as shown below.

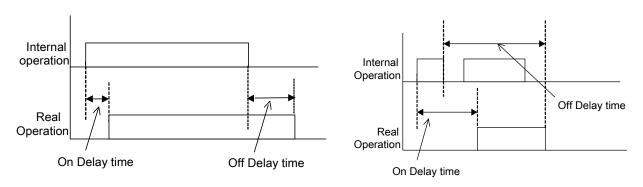



11.6 Output terminal select at keypad-inverter communication error

Group	Display	Parameter Name	Setting	Range	Default	Unit
I/O group	157	[Output terminal select when communication error with keypad]	-	0 ~ 3	0	

- Select relay output or open collector output when keypad-inverter communication fails.
 - ▶ Keypad and inverter CPU communication is made by serial communication.

When communication error occurs for a certain time, will be displayed and error signal can be output to MO or relay.

	Output relay	Output terminal
	Bit 1	Bit 0
0	-	-
1	-	✓
2	✓	-
3	✓	✓

- ▶ 0: Not used
- ▶ 1: Signal output to MO
- ▶ 2: Signal output to 30A, 30B contacts
- ▶ 3: Signal output to MO, 30A, 30B




CHAPTER 12 - PROTECTIVE FUNCTIONS

12.1 Electronic Thermal Protection


Group	Code	Parameter	Set	Range	Initial	Unit
Function group 1	F50	[ETH (Electronic thermal) select]	1	0 ~ 1	0	
	F51 [Electronic thermal level for 1 minute]		-	50 ~ 200	150	%
	F52 [Electronic thermal level for continuous]		-		100	%
	F53	[Motor type]	-	0 ~ 1	0	

- Select F50 [Electronic thermal select] to 1.
- It activates when the motor is overheated. If current greater than set in F51 flows, inverter output is turned off for the preset time in F51- [Electronic thermal level for 1 minute].
- ▶ F51: Enter the value of max current that is capable of flowing to the motor continuously for one minute. It is set in percent of motor rated current. The value cannot be set lower than F52.
- ▶ F52: Enter the amount of current for continuous operation. Normally motor rated current is used. It cannot be set greater than F51.
- ▶ F53: For a standard fan cooled motor, cooling effects decrease when a motor is running at low speed. A forced cooled motor is a motor that uses a separately powered cooling fan maximize cooling effect even in low speed.

F53	[Motor type]	0	Standard fan cooled motors having a cooling fan directly connected to the shaft
		1	Forced cooled motor that uses a separately powered cooling fan.

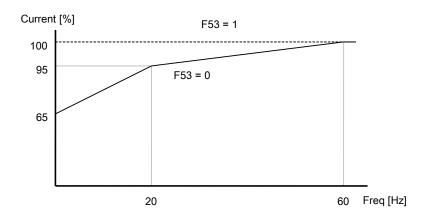



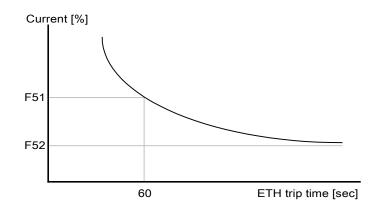


12.2 Overload Warning and trip

Overload warning

Group	Code	Parameter	Set	Range	Initial	Unit
Function	F54	[Overload warning level]	-	30 ~ 150	150	%
group 1	F55	[Overload warning time]	-	0 ~ 30	10	Sec
I/O	154	[Multi-function output terminal select]	5	0 ~ 18	12	
group	155	[Multi-function relay select]	5		17	

- Select one output terminal for this function between MO and 3ABC.
- If selecting MO as output terminal, set I54 to 5 (Overload: OL).
- ▶ F54: Set the value as a percent of motor rated current.

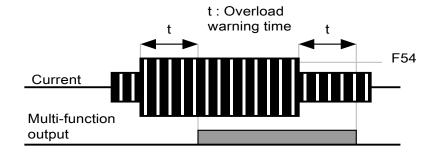



Overload trip

Group	Code	Parameter	Set	Range	Initial	Unit
Function group 1	F56	[Overload trip select]	1	0 ~ 1	1	
	F57	[Overload trip level]	-	30 ~ 200	180	%
	F58	[Overload trip time]	-	0 ~ 60	60	sec

- Set F56 to 1.
- Inverter output is turned off when motor is overloaded.
- Inverter output is turned off when excessive current flows to the motor for F58 [Overload trip time].

12.3 Stall prevention

Group	Code	Parameter	Set	Range	Initial	Unit
Function	F59	[Stall prevention select]	-	0 ~ 7	0	
group 1	F60	[Stall prevention level]	-	30 ~ 200	150	%
I/O group	154	[Multi-function output terminal select]	7	0 ~18	12	
	155	[Multi-function relay select]	7		17	


- During acceleration: Motor acceleration ramp is stopped when current exceeds the value set in F60.
- During constant run: Motor decelerates when current exceeds the value set in F60.
- During deceleration: Motor deceleration ramp is stopped when inverter DC link voltage rises above a certain voltage level.
- F60: The value is set as the percent of motor rated current (H33).
- I54, I55: Inverter outputs signals through multi-function output terminal (MO) or relay output (3ABC) or external sequence when stall prevention function is activated. Motor stall status can be monitored setting F59 different from (000).

▶ F59: Stall prevention can be set as the table below.

F59	Stall prevention	Setting	During Deceleration	During constant speed	During Acceleration
			Bit 2	Bit 1	Bit 0
		0	-	-	-
		1	-	-	✓
		2	-	✓	-
		3	-	✓	✓
		4	✓	-	-
		5	✓	-	✓
		6	✓	✓	-
		7	✓	✓	✓



- ▶ For example, set F59 to 3 to make stall prevention active during Acceleration and constant run.
- ▶ When stall prevention is executed during acceleration or deceleration, Accel/Decel time may take longer than the user-setting time.
- ▶ When stall prevention is activated during constant run, t1, t2 are executed in accordance with the value set in ACC [Accel time] and dEC [Decel time].

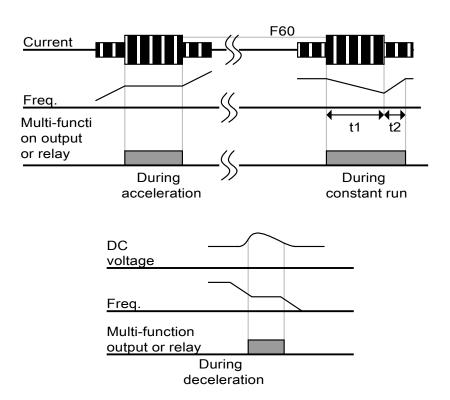



12.4 Input/Output phase loss protection

Group	Code	Parameter	Set	Range	Initial	Unit
Function group 2	H19	[Input/Output phase loss protection select]	1	0 ~ 3	0	

- Set H19 value to 1
- Output phase loss: Inverter output is shut off at the event of one or more output phase loss among U, V and W.
- Set H19 value to 2
- Input phase loss: Inverter output is shut off at the event of one or more input phase loss among R, S and T. If there is no input phase loss, output is shut off when it is time to replace DC link capacitor.
- Set H19 value to 3
- Input/output phase loss: Inverter output is shut off at the event of one or more input or output phases loss among R, S and T or U, V and W If there is no input or output phase loss, output is shut off when it is time to replace DC link capacitor.

(!) Caution:

Set H33- [Motor rated current] correctly. If the actual motor rated current and the value of H33 are different, output phase loss protection function could not be activated.


H19	[Input/Output phase loss	Both bars down	Not used
	protection select]	Right hand (low bit) UP	Output phase loss protection
		Left hand (high bit) UP	Input phase loss protection
		Both bars UP	Input/output phase loss protection



12.5 External trip signal

Group	Code	Parameter	Set	Range	Initial	Unit
I/O group	l17	[Multi-function input terminal P1 define]		0 ~ 29	0	
	~	~				
	123	[Multi-function input terminal P7 define]	18		6	
	124	[Multi-function input terminal P8 define]	19		7	

- Select a terminal among P1 and P8 to output external trip signal.
- Set I23 and I24 to 18 and 19 to define P7 and P8 as External A contact and B contact.
- ▶ External trip signal input A contact (N.O.): Normal open contact input. When a P7 terminal set to "Ext trip-A" is ON (Closed), inverter displays the fault and turns off its output.
- ▶ External trip signal input B contact (N.C.): Normal close contact input. When a P8 terminal set to "Ext trip-B" is OFF (Open), inverter displays the fault and turns off its output.

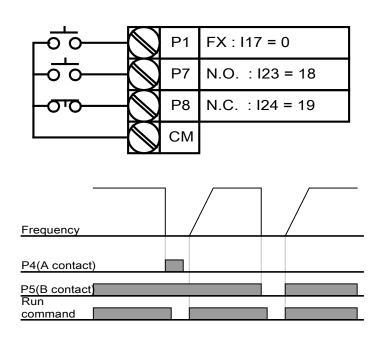



12.6 Inverter Overload

Group	Code	Parameter	Set	Range	Initial	Unit
I/O	154	[Multi-function output terminal select]	6	0 ~ 18	12	
group	155	[Multi-function relay select]	6	0 10	17	

- ▶ Inverter overload prevention function is activated when the current is above inverter rated current.
- ▶ Multi-function output terminal (MO) or Multi-function relay (3ABC) is used as the alarm signal output during inverter overload trip.

12.7 Frequency command loss

Group	Code	Parameter	Set	Range	Initial	Unit
I/O group	I16	[Criteria for analog input signal loss]	0	0 ~ 2	0	
	I62	[Drive mode select after loss of frequency command]	-	0 ~ 2	0	
	163	[Wait time after loss of frequency command]	-	0.1 ~ 120	1.0	sec
	154	[Multi-function output terminal select]	11	0 ~ 18	12	
	155	[Multi-function relay select]	11		17	

- Select the Drive mode when frequency reference set via Analog (V1, I) input terminal or communication option is lost.
- ▶ I16: This is to set the criteria for analog input signal loss.

I16	[Criteria for analog input signal loss]	0	Disabled (Does not check the analog input signal loss)
		1	When half the value set in I2, I7, I12 is entered
		2	When less than the value set in I2, I7, I12 is entered

Ex 1) The inverter determines the freq reference is lost when DRV- Frq is set to 3 (Analog V1 input), I16 to 1 and analog input signal is less than half the value set in I7.

Ex 2) The inverter determines the freq reference is lost when DRV- Frq is set to 6 (V1+I), I16 to 2 and V1 input signal is either below the value set in I7 or I input value is less than the I12 value.




▶ I62: When no frequency command is given for the time set in I63, set the drive mode as the table below.

162	[Drive mode select after loss of frequency command]	0	Continuous operation with the frequency before command loss occurs
		1	Free run stop (Coast to stop)
		2	Deceleration ramp to stop

▶ I54, I55: Multi-function output terminal (MO) or Multi-function relay output (3ABC) is used to output information on loss of frequency command to external sequence.

Ex) when I16 is set to 2, I62 to 2, I63 to 5.0 sec and I54 to 11, respectively,

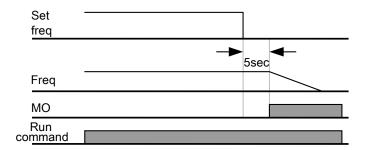



12.8 DB Resistor Enable Duty setting

Group	Code	Parameter	Set	Range	Initial	Unit
Function	H75	[Enable duty limit]	1	0 ~ 1	1	
group 2	H76	[Enable duty]	-	0 ~ 30	10	%

- Set H75 to 1.
- Set %ED (Enable Duty) in H76.

▶ H75: DB resistor ED limit setting

0	No limit
	Caution:
	Take caution when DB resistor is used over its Watt rating. Fire may result from resistor overheat. When resistor having heat detection sensor is used, sensor output can be used as external trip signal in multi-function input.
1	ED is limited as the setting in H76.

▶ H76: set the resistor operating rate (%ED) in one sequence of operation. Continuous usage rate is Max 15 sec and usage signal is not issued over 15 sec.

Ex 1)
$$H76 = \frac{T_dec}{T_acc+T_steady+T_dec+T_stop} \times 100[\%]$$


Where:

T_acc: Acceleration time to reach the set freq.


T_steady: Time for constant speed operation at setting freq.

T_dec: Time to decelerate to lower frequency set.

T_stop: waiting time at motor stopped before operation again.

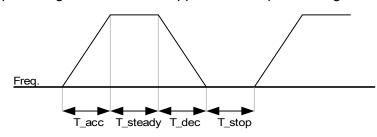

Ex 2)
$$H76 = \frac{T_dec}{T_dec + T_steady1 + T_acc + T_steady2} \times 100[\%]$$

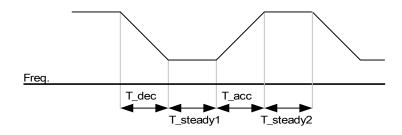



CHAPTER 13 - RS485 COMMUNICATION

13.1 Introduction

Inverter can be controlled and monitored by the sequence program of the PLC or other master module.

Drives or other slave devices may be connected in a multi-drop on the RS-485 network and can be monitored or controlled by a single PLC or PC. Parameter setting and change are available through PC.

13.1.1 Features

Inverter can be easily applied for factory automation because operation and monitoring is available by User-program.

- * Parameter change and monitoring is available via computer.
 - (Ex: Accel/Decel time, Freq. Command etc.)
- * Interface type of RS485 reference:
- 1) Allows the drive to communicate with any other computers.
- 2) Allows connection up to 31 drives with multi-drop link system.
- 3) Electrical noises protected.

Users can use any kind of RS232-485 converters. The specifications of converters depend on the manufacturers. Refer to the converter manual for detailed specifications.

13.1.2 Before installation

Before installation and operation, this manual should be read carefully. If not, it can cause personal injury or damage to other equipment.

13.2 Specification

13.2.1 Performance specification

Item	Specification
Communication method	RS485
Transmission form	Bus method, Multi drop Link System
Applicable inverter	Sinus M series
Converter	RS232 converter
Connectable drives	Max. 31 drives
Transmission distance	Max. 1,200m (Within 700m Recommend)



13.2.2 Hardware specification

Item	Specification
Installation	Use S+, S- terminals on control terminal board
Power supply	Use Insulated power from the inverter power supply

13.2.3 Communication specification

Item	Specification			
Communication speed	19,200/9,600/4,800/2,400/1,200 bps selectable			
Control procedure	Asynchronous communication system			
Communication system	Half duplex system			
Character system	ASCII (8 bit)			
Stop bit length	Modbus-RTU: 2 bit ES Bus: 1 bit			
Sum check	2 byte			
Parity check	None			

13.3 Installation

13.3.1 Connecting the communication line

Connect the RS485 communication line to the inverter's (S+), (S-) terminals of the control terminals. Check the connection and switch the inverter ON.


If the communication line is connected correctly, set the communication-related parameters as following:

- ▶ DRV-03 [Drive mode]: 3(RS485)
- ▶ DRV-04 [Freq. mode]: 7(RS485)
- ▶ I/O-60 [Inv. Number]: 1~250 (If more than 1 inverters are connected, be sure to use different numbers for each inverter)
- ▶ I/O-61 [Baud-rate]: 3 (9,600 bps as Factory default)
- ▶ I/O-62 [Lost Mode]: 0 No action (Factory default)
- ▶ I/O-63 [Time-Out]: 1.0 sec (Factory default)
- ▶ I/O-59 [Comm. Prot]: 0 Modbus-RTU, 1 ES BUS



13.3.2 Computer and inverter connection

System configuration

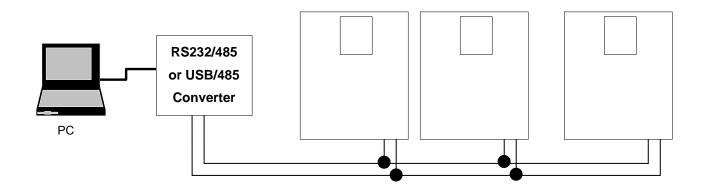

- The number of drives to be connected is up to 31 drives.
- The specification of length of communication line is max. 1200m. To ensure stable communication, is suggested to limit the length below 700m.

13.4 Operation

13.4.1 Operating steps

- Check whether the computer and the inverter are connected correctly.
- Switch the inverter ON. Do not connect the load until stable communication between the computer and the inverter is verified.
- Start the operating program for the inverter from the computer.
- Operate the inverter using the operating program for the inverter.
- Refer to "13.8 Troubleshooting" if the communication is not operating normally.

*User program or the "REMOTE DRIVE" program supplied from ES can be used as the operating program for the inverter.



13.5 Communication protocol (MODBUS-RTU)

Use Modbus-RTU protocol (Open protocol).

Computer or other hosts can be Master and inverters Slaves. Inverter responds to Read/Write command from Master.

Supported function code

Function code	Description
0x03	Read Hold Register
0x04	Read Input Register
0x06	Preset Single Register
0x10	Preset Multiple Register

Exception code

Function code		Description		
0x01		ILLEGAL FUNCTION		
0x02		ILLEGAL DATA ADDRESS		
0x03		ILLEGAL DATA VALUE		
0x	06	SLAVE DEVICE BUSY		
User define 0x14		1.Write Disable (Address 0x0003 value is 0). 2.Read Only or Not Program during Running.		

13.6 Communication protocol (ES BUS)

13.6.1 Basic format

Command message (Request):

ENQ	Drive No.	CMD	Data	SUM	EOT
1 byte	2 bytes	1 byte	n bytes	2 bytes	1 byte

Normal response (Acknowledge Response):

ACK	Drive No.	CMD	Data	SUM	EOT
1 byte	2 bytes	1 byte	n * 4 bytes	2 bytes	1 byte

Negative response (Negative Acknowledge Response):

NAK	Drive No.	CMD	Error code	SUM	EOT
1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

Description:

Request starts with "ENQ" and ends with "EOT".

Acknowledge Response starts with "ACK" and ends with "EOT".

Negative Acknowledge Response starts with "NAK" and ends with "EOT".

"Drive Number" is the number of drives and indicated in 2 bytes ASCII-HEX.

(ASCII-HEX: Hexadecimal consists of '0' ~ '9', 'A' ~ 'F)



CMD: Capital letter

Character	ASCII-HEX	Command
'R'	52h	Read
'W'	57h	Write
'X'	58h	Request for monitoring
'Υ'	59h	Action for monitoring

Data: ASCII-HEX

Ex) when data value is 3000: 3000 (dec) \rightarrow '0' 'B' 'B' '8'h \rightarrow 30h 42h 42h 38h

Error code: ASCII (20h ~ 7Fh)

Receive/Send buffer size: Receive= 39 bytes, Send=44 bytes

Monitor register buffer: 8 Word

SUM: to check the communication error

SUM= ASCII-HEX format of lower 8 bit of (Drive No. + CMD + DATA)

Ex) Command Message (Request) for reading one address from address "3000"

ENQ	Drive No	CMD	Address	Number of address to read	SUM	EOT
05h	"01"	"R"	"3000"	"1"	"A7"	04h
1 byte	2 bytes	1 byte	4 bytes	1 byte	2 bytes	1 byte

SUM = '0' + '1' + 'R' + '3' + '0' + '0' + '0' + '1'

= 30h + 31h + 52h + 33h + 30h + 30h + 30h + 31h

= 1A7h (Control values such as ENQ/ACK/NAK are excluded.)

13.6.2 Detail communication protocol

1) Request for Read: Request for read successive 'N' numbers of WORD from address "XXXX"

ENQ	Drive No	CMD	Address	Number of address to read	SUM	EOT
05h	"01" ~ "1F"	"R"	"XXXX"	"1" ~ "8" = n	"XX"	04h
1 byte	2 bytes	1 byte	4 bytes	1 byte	2 bytes	1 byte

Total bytes = 12

The quotation marks (" ") mean a character.

1.1) Acknowledge Response:

ACK	Drive No	CMD	Data	SUM	EOT
06h	"01" ~ "1F"	"R"	"XXXX"	"XX"	04h
1 byte	2 bytes	1 byte	N * 4 bytes	2 byte	1 byte

Total bytes = 7 + n * 4 = Max 39

1.2) Negative Acknowledge Response:

NAK	Drive No	CMD	Error code	SUM	EOT
15h	"01" ~ "1F"	"R"	"***"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

Total bytes = 9



2) Request for Write:

ENQ	Drive No	CMD	Address	Number of address to read	Data	SUM	EOT
05h	"01"~ "1F"	"W"	"XXXX"	"1" ~ "8" = n	"XXXX"	"XX"	04h
1 byte	2 bytes	1 byte	4 bytes	1 byte	n * 4 bytes	2 byte	1 byte

Total bytes = 12 + n * 4 = Max 44

2.1) Acknowledge response:

ACK	Drive No	CMD	Data	SUM	EOT
06h	"01" ~ "1F"	"W"	"XXXX"	"XX"	04h
1:byte	2:bytes	1:byte	n * 4 bytes	2 bytes	1 byte

Total bytes = 7 + n * 4 = Max 39

Note) When Request for Write and Acknowledge Response is exchanged between PC and Inverter for the first time, previous data is returned. From the second time of transmission, the current data will be returned.

2.2) Negative response:

NAK	Drive No	CMD	Error code	SUM	EOT
15h	"01" ~ "1F"	"W"	"*****	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

Total bytes = 9

3) Request for Monitor Register

This is useful when constant parameter monitoring and data updates are required.

Request for Register of 'n' numbers of Address (not consecutive)

•						
ENQ	ENQ Drive No		CMD Number of address to read		SUM	EOT
05h	"01" ~ "1F"	"X"	"1" ~ "8"=n	"XXXX"	"XX"	04h
1 byte	2 bytes	1 byte	1 byte	n * 4 byte	2 byte	1 byte

Total bytes = 8 + n * 4 = Max 40

3.1) Acknowledge Response:

ACK	Drive No	CMD	SUM	EOT
06h	"01" ~ "1F"	"X"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	1 byte

Total bytes = 7

3.2) Negative Acknowledge Response:

NAK	Drive No	CMD	Error code	SUM	EOT
15h	"01" ~ "1F"	"X"	"**"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

Total bytes = 9



4) Action Request for monitor register: Request for read of address registered by monitor register.

ENQ	Drive No	CMD	SUM	EOT
05h	"01" ~ "1F"	"Y"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	1 byte

Total bytes = 7

4.1) Acknowledge response:

ACK	Drive No	CMD	Data	SUM	EOT
06h	"01" ~ "1F"	"Y"	"XXXX"	"XX"	04h
1 byte	2 bytes	1 byte	n * 4 bytes	2 bytes	1 byte

Total bytes = 7 + n * 4 = Max 39

4.2) Negative response:

NAK	Drive No	CMD	Error code	SUM	EOT
15h	"01" ~ "1F"	"Y"	"**"	"XX"	04h
1 byte	2 bytes	1 byte	2 bytes	2 bytes	1 byte

Total bytes = 9

5) Error code

Error code	Description
"IF"	When master is sending codes other than Function code (R, W, X, Y).
"IA"	When parameter address does not exist
"ID"	When Data value exceeds its permissible range during 'W' (Write).
"WM"	When the specific parameters cannot be written during 'W' (Write).
VVIVI	(For example, in the case of Read Only, Write disabled during Run)
"FE"	When frame size of specific function is not correct and Checksum field is
	wrong.



13.7 Parameter code list <Common area>

<Common area>: Accessible area regardless of inverter models (Note 1)

Address	Parameter	Scale	Unit	R/W	Data value					
					FFFF: 0.4kW 0000: 0.75kW 0001: n.u.					
					0002: 1.5kW 0003: 2.2kW 0004: 3.7kW					
0x0000	Inverter capacity			R	0005: 4.0kW 0006: 5.5kW 0007: 7.5kW					
					0008: 11.0kW 0009: 15.0kW 000A: 18.0kW					
					000B: 22.0kW					
0x0001	Inverter Input Voltage			R	0: 2S/T class 1: 4T class					
0x0002	S/W Version			R	0x0023: Version EU2.3 (Note 2)					
0x0003	Parameter Lock			R	0: Lock (default) 1: Unlock					
0x0004	Frequency Reference	0.01	Hz	R	Starting freq. ~ Max. freq.					
					BIT 0: Stop (0→1)					
				R/W	BIT 1: Forward run (0→1)					
					BIT 2: Reverse run (0→1)					
				W	BIT 3: Fault reset (0→1)					
				V V	BIT 4: Emergency stop (0→1)					
				-	BIT 5, BIT 15: Not used					
					BIT 6~7: Output freq. arrival					
0x0005	Run Command				0 (Terminal), 1 (keypad)					
					2 (Reserved), 3 (communication)					
					BIT 8~12: Freq. command					
				R	0: DRV-00, 1: Not used,					
					2~8: Multi-Step frequency 1~7					
					9: Up, 10: Down, 11: UDZero, 12: V0, 13: V1,					
					14: I, 15: V0+I, 16: V1+I, 17: Jog, 18: PID,					
		2.4			19: Communication, 20 ~ 31: Reserved					
	Acceleration Time	0.1		R/W						
0x0007	Deceleration Time	0.1	sec	R/W						
8000x0	Output Current	0.1	Α	R						
0x0009	Output Frequency	0.01	Hz	R	See Function List.					
0x000A	<u> </u>	0.1	V	R						
0x000B	DC Link voltage	0.1	V	R						
0x000C	Output power	0.1	kW	R						



Address	Parameter	Scale	Unit	R/W	Data value
					BIT 0: Stop
					BIT 1: Forward running
					BIT 2: Reverse running
					BIT 3: Fault (Trip)
					BIT 4: Accelerating
					BIT 5: Decelerating
	Inverter status				BIT 6: Speed arrival
0x000D				R	BIT 7: DC Braking
					BIT 8: Stopping
					BIT 9: not Used
					BIT10: Brake Open
					BIT11: Forward run command
					BIT12: Reverse run command
					BIT13: REM. R/S
					BIT14: REM. Freq.
					BIT 0: OCT
					BIT 1: OVT
					BIT 2: EXT-A
					BIT 3: EST (BX)
					BIT 4: COL
					BIT 5: GFT (Ground Fault)
					BIT 6: OHT (Inverter overheat)
					BIT 7: ETH (Motor overheat)
0x000E	Trip information			R	BIT 8: OLT (Overload trip)
					BIT 9: HW-Diag
					BIT10: EXT-B
					BIT11: EEP (Parameter Write Error)
					BIT12: FAN (Lock & Open Error)
					BIT13: PO (Phase Open)
					BIT14: IOLT
					BIT15: LVT
					BIT 0: P1
					BIT 1: P2
	Input terminal status				BIT 2: P3
0000				_	BIT 3: P4
0x000F				R	BIT 4: P5
					BIT 5: P6
					BIT 6: P7
					BIT 7: P8



Address	Parameter	Scale	Unit	R/W	Data value			
					BIT 0~3: Not Used			
0x0010	Output terminal status			R	BIT 4: MO (Multi-Output with OC)			
000010	Output terminal status			K	BIT 5~6: Not Used			
					BIT 7: 3ABC			
0x0011	V1	0~3FF		R	Value corresponding to 0V ~ +10V			
0x0012	V2	0~3FF		R	Value corresponding to 0V ~ −10V input when Setting FreqMode to 2			
0x0013	I	0~3FF		R	Value corresponding to 0 ~ 20mA input			
0x0014	RPM			R	See Function List.			
0x0019	Unit display			R	Not Used			
0x001A	Pole number			R	Not Used			
0x001B	Custom Version			R	Not Used			
					BIT 0: COM (I/O Board Reset)			
					BIT 1: FLTL			
0x001C	Trip information-B			R	BIT 2: NTC			
					BIT 3: REEP			
					BIT 4~15: Not Used			
					0x00FF: 166 0x0100: 167			
0x00FF	Read address register			R	0x0101: 168			
0x0106				, N	0x0103: 170			
					0x0105: 172			
0x0107					0x0107: 174			
~	Write address register			W	0x0109: 176			
0x010E				VV	0x010B: 178			
					0x010D: 180 0x010E: 181			

Note 1) The changed value in Common area affects the current setting but returns to the previous setting when power is cycled or Inverter is reset. However, changing value is immediately reflected in other parameter groups even in the case of Reset or Power On/Off.

Note 2) S/W version of Common area is displayed in hexadecimal format, while that of parameter area (H79) is displayed in decimal format.



Address	Parameter No	Parameter Name	Default	Min	Max	Unit	Adj. during run	R/W	Comm
			D	RV GROUP					
A100	D1	ACC	5.0	0	6000.0	sec	0	W	0
A101	D2	DEC	10.0	0	6000.0	sec	0	W	0
A102	D3	DRV	1	0	3		Х	W	0
A103	D4	FRQ	0	0	8		Х	W	0
A104	D5	ST 1	10.00	0	400.00	Hz	0	W	0
A105	D6	ST 2	20.00	0	400.00	Hz	0	W	0
A106	D7	ST 3	30.00	0	400.00	Hz	0	W	0
A107	D8	CUR	0	0	1		0	R	0
A108	D9	RPM	0	0	1800		0	R	0
A109	D10	DCL	0	0	6553.5		0	R	0
A10A	D11	USR	0	0	1		0	R	0
A10B	D12	FLT	0	0	1		0	R	0
A10C	D13	DRC	0	0	1		0	W	0
A10D	D14	DRV2	1	0	3		Х	W	0
A10E	D15	FRQ2	0	0	7		Х	W	0
A10F	D16	FRQ3	0	0	7		Х	W	0
A110	D17	PID Ref.	0	0	MaxFBKVal		0	W	0
A111	D18	PID FBK.	0	0	MaxFBKVal		0	R	0

				FU1 GROUP					
A200	F1	Run Prohibit	0	0	2		Χ	W	0
A201	F2	ACC Pattern	0	0	1		Χ	W	0
A202	F3	DEC Pattern	0	0	1		Χ	W	0
A203	F4	Stop Method	0	0	3		Χ	W	0
A207	F8	DcBr freq	5.00	0	60.00	Hz	Χ	W	0
A208	F9	DcBlk time	0.10	0	60.00	sec	Χ	W	0
A209	F10	DcBr value	50	0	200	%	Χ	W	0
A20A	F11	DcBr time	0.10	0	60.0	sec	Х	W	0
A20B	F12	DcSt value	50	0	200	%	Х	W	0
A20C	F13	DcSt time	0	0	60.0	sec	Х	W	0
A20D	F14	PreExTime	1	0	60.0	sec	Х	W	0
A213	F20	Jog Freq	10.00	0	400.00	Hz	0	W	0
A214	F21	Max Freq	50.00	40.00	maxUPP	Hz	Х	W	0
A215	F22	Base Freq	50.00	30.00	maxUPP	Hz	Χ	W	0
A216	F23	Start Freq	50	10	1000	Hz	Χ	W	0
A217	F24	Freq Limit	0	0	1		Χ	W	0
A218	F25	High Freq	50.00	0	400.00	Hz	Χ	W	0
A219	F26	Low Freq	0.50	0	highFreq	Hz	Χ	W	0
A21A	F27	Trq Boost	0	0	1		Х	W	0
A21B	F28	Fwd Boost	2.0	0	15.0	%	Χ	W	0
A21C	F29	Rev Boost	2.0	0	15.0	%	Χ	W	0
A21D	F30	VF Pattern	0	0	2		Χ	W	0
A21E	F31	User Freq1	12.50	0	400.00	Hz	Χ	W	0



A21F	F32	User Volt 1	25	0	100	%	Χ	W	0
A220	F33	User Freq 2	25.00	0	400.00	Hz	Χ	W	0
A221	F34	User Volt 2	50	0	100	%	Χ	W	0
A222	F35	User Freq 3	37.50	0	400.00	Hz	Χ	W	0
A223	F36	User Volt 3	75	0	100	%	Χ	W	0
A224	F37	User Freq 4	50.00	0	400.00	Hz	Х	W	0
A225	F38	User Volt 4	100	0	100	%	Χ	W	0
A226	F39	Volt Perc	100.0	40.0	110.0	%	Χ	W	0
A227	F40	Energy save	0	0	30	%	0	W	0
A231	F50	ETH select	1	0	1		0	W	0
A232	F51	ETH 1min	150	contPerc[0]	200	%	0	W	0
A233	F52	ETH cont	100	50	ethPerc[0]	%	0	W	0
A234	F53	Motor type	0	0	1		0	W	0
A235	F54	OL level	150	30	150	%	0	W	0
A236	F55	OL time	10.0	0	30.0	sec	0	W	0
A237	F56	OLT select	1	0	1		0	W	0
A238	F57	OLT level	180	30	200	%	0	W	0
A239	F58	OLT time	60.0	0	60.0	sec	0	W	0
A23A	F59	Stall prev.	0	0	7		Χ	W	0
A23B	F60	Stall level	150	30	200	%	Χ	W	0
A23C	F61	OutVolt Supp	0	0	1		Χ	W	0
A23D	F62	Input AC Vol	310	310	480	V	0	W	0
A23E	F63	UP/DN SAVE	0	0	1		Χ	W	0
A23F	F64	UP/DN FREQ	0	0	400.00	Hz	0	W	0
A240	F65	UP/DN Mode	0	0	2		Χ	W	0
A241	F66	UP/DN Step	0	0	400.00	Hz	Х	W	0
A245	F70	Draw Mode	0	0	3		Χ	W	0
A246	F71	Draw Percent	0	0	100.0	%	0	W	0

			F	U2 GROUP					
A300	H1	Last Fault1	0	0	1		0	R	0
A301	H2	Last Fault2	0	0	1		0	R	0
A302	Н3	Last Fault3	0	0	1		0	R	0
A303	H4	Last Fault4	0	0	1		0	R	0
A304	H5	Last Fault5	0	0	1		0	R	0
A305	H6	Fault Clear	0	0	1		0	W	0
A306	H7	Dwell freq	5.00	0	400.00	Hz	X	W	0
A307	H8	Dwell time	0.0	0	10.0	sec	Χ	W	0
A309	H10	Jump freq	0	0	1		Χ	W	0
A30A	H11	jump lo 1	10.00	0	jumpHiFreq[0]	Hz	Х	W	0
A30B	H12	jump Hi 1	15.00	jumpLoFreq[0]	400.00	Hz	Χ	W	0
A30C	H13	jump lo 2	20.00	0	jumpHiFreq[1]	Hz	Х	W	0
A30D	H14	jump Hi 2	25.00	jumpLoFreq[1]	400.00	Hz	Χ	W	0
A30E	H15	jump lo 3	30.00	0	jumpHiFreq[2]	Hz	Χ	W	0
A30F	H16	jump Hi 3	35.00	jumpLoFreq[2]	400.00	Hz	Х	W	0
A310	H17	Curve Time	40	1	100	%	Х	W	0
A311	H18	Curve Time1	40	1	100	%	Х	W	0
A312	H19	Trip select	0	0	3		0	W	0
A313	H20	Power-on run	0	0	1		0	W	0



A314	H21	RST restart	0	0	1		0	W	0
A315	H22	Speed Search	0	0	15		Х	W	0
A316	H23	SS Sup-Curr	100	80	200	%	0	W	0
A317	H24	SS P-gain	100	0	9999		0	W	0
A318	H25	SS I-gain	200	0	9999		0	W	0
A319	H26	Retry number	0	0	10		0	W	0
A31A	H27	Retry delay	1.0	0	60.0	sec	0	W	0
A31D	H30	Motor select	0	0	maxMotNum		Х	W	0
A31E	H31	Pole number	4	2	12		Х	W	0
A31F	H32	Rated-Slip	2.00	0	10.00	Hz	Х	W	0
A320	H33	Rated-Curr	1.8	5	150.0	Α	Х	W	0
A321	H34	Noload-Curr	7	1	100.0	Α	Х	W	0
A322	H35	Motor Input	0	0	2		Х	W	0
A323	H36	Efficiency	72	50	100	%	Х	W	0
A324	H37	Inertia rate	0	0	2		Х	W	0
A325	H39	Carrier freq	3.0	1.0	15.0	KHz	0	W	0
A327	H40	Control Mode	0	0	3		Х	W	0
A328	H41	Auto Tune	0	0	1		Χ	W	0
A329	H42	Rs	2.500	0	28.000	Ω	Χ	W	0
A32B	H44	Lsigma	26.00	0	300.00	mΗ	Χ	W	0
A32C	H45	SL P-Gain	1000	0	32767		0	W	0
A32D	H46	SL I-Gain	100	0	32767		0	W	0
A32E	H47	TRQ Limit	180.0	100.0	220.0	%	Χ	W	0
A32F	H48	PWM Mode	0	0	1		X	W	0
A330	H49	Set PID	0	0	1		Χ	W	0
A331	H50	PID F/B	0	0	2		Χ	W	0
A332	H51	PID P-gain	300.0	0	999.9	%	0	W	0
A333	H52	PID I-time	1.00	0.10	32.00	sec	0	W	0
A334	H53	PID D-time	0	0	30.00	sec	0	W	0
A335	H54	Process PID	0	0	1		Х	W	0
A336	H55	PID limitH	50.00	pidLimitFreqL	400.00	Hz	0	W	0
A337	H56	PID limitL	0.50	0	pidLimitFreqH	Hz	0	W	0
A338	H57	PID Ref. Set	0	0	4		Х	W	0
A33A	H59	PID Out Inv.	0	0	1		Χ	W	0
A33B	H60	Self-Diag	0	0	maxSelfDiag		Χ	W	0
A33C	H61	Sleep Delay	60.0	0	2000.0	sec	Χ	W	0
A33D	H62	Sleep Freq.	0	0	400.00	Hz	0	W	0
A33E	H63	WakeUp Level	2.0	0	50.0	%	0	W	0
A33F	H64	KEB Select	0	0	1		X	W	0
A340	H65	KEB StartLev	125.0	110.0	140.0	%	X	W	0
A341	H66	KEB StopLev	130.0	kebStartLevel	145.0	%	Χ	W	0
A342	H67	KEB Gain	1000	1	20000		Χ	W	0
A344	H69	Acc/Dec ch F	0	0	400.00	Hz	Х	W	0
A345	H70	Acc/Dec freq	0	0	1	Hz	X	W	0
A346	H71	Xcel T Mode	1	0	2		0	W	0
A347	H72	PowerOn disp	0	0	17		0	W	0
A348	H73	User disp	0	0	2		0	W	0
A349	H74	RPM factor	100	1	1000	%	0	W	0



A34A	H75	DB mode	1	0	1		0	W	0
A34B	H76	DB %ED	10	0	30	%	0	W	0
A34C	H77	FAN Control	0	0	1		0	W	0
A34D	H78	FAN Trip	0	0	1		0	W	0
A34E	H79	S/W Version	2.3	0	10.0		0	R	0
A350	H81	2nd Acc time	5.0	0	6000.0	sec	0	W	0
A351	H82	2nd Dec time	10.0	0	6000.0	sec	0	W	0
A352	H83	2nd BaseFreq	50.00	3000	400.00	Hz	Х	W	0
A353	H84	2nd V/F	0	0	2		Χ	W	0
A354	H85	2nd F-boost	5.0	0	15.0	%	Х	W	0
A355	H86	2nd R-boost	5.0	0	15.0	%	Χ	W	0
A356	H87	2nd Stall	150	30	150	%	Х	W	0
A357	H88	2nd ETH 1min	150	contPerc[1]	200	%	0	W	0
A358	H89	2nd ETH cont	100	50	ethPerc[1]	%	0	W	0
A359	H90	2nd R-Curr	1.8	1	50.0	Α	Χ	W	0
A35A	H91	Para Read	0	0	1		Χ	W	0
A35B	H92	Para Write	0	0	1		Х	W	0
A35C	H93	Para Init	0	0	5		Χ	W	0
A35D	H94	Password set	0	0	65535		0	W	0



				/O GROUP					
A401	12	VR volt x1	0	0	viXmax[0]	V	0	W	0
A402	13	VR freq y1	0	0	400.00	Hz	0	W	0
A403	14	VR volt x2	10.00	viXmin[0]	v1max	V	0	W	0
A404	15	VR freq y2	50.00	0	400.00	Hz	0	W	0
A405	16	V1 filter	10	0	9999	msec	0	W	0
A406	17	V1 volt x1	0	0	viXmax[1]	V	0	W	0
A407	18	V1 freq y1	0	0	400.00	Hz	0	W	0
A408	19	V1 req y1	10.00	viXmin[1]	v1max	V	0	W	0
A409	I10	V1 freq y2	50.00	0	400.00	Hz	0	W	0
A40A	I11	I filter	10	0	9999	msec	0	W	0
A40B	l12	I curr x1	4.00	0	viXmax[2]	mA	0	W	0
A40C	I13	I freq y1	0	0	40000	Hz	0	W	0
A40C A40D	113	I curr x2	20.00	viXmin[2]	20.00	mA	0	W	0
A40D A40E	I15		50.00	0	40000	Hz	0	W	0
A40E A40F		I freq y2 Wire broken		0		ПZ	0	W	0
	I16		0		2				
A410	I17	P1 define	0	0	29		0	W	0
A411	I18	P2 define	1	0	29		0	W	0
A412	I19	P3 define	2	0	29		0	W	0
A413	120	P4 define	3	0	29		0	W	0
A414	I21	P5 define	4	0	29		0	W	0
A415	122	P6 define	5	0	29		0	W	0
A416	123	P7 define	6	0	29		0	W	0
A417	124	P8 define	7	0	29		0	W	0
A418	125	In status	0	0	255		0	R	Χ
A419	126	Out status	0	0	3		0	R	Χ
A41A	127	Ti Filt Num	4	1	15		0	W	0
A41D	I30	ST 4	30.00	0	400.00	Hz	0	W	0
A41E	I31	ST 5	25.00	0	400.00	Hz	0	W	0
A41F	l32	ST 6	20.00	0	400.00	Hz	0	W	0
A420	133	ST 7	15.00	0	400.00	Hz	0	W	0
A421	I34	Acc Time-1	3.0	0	6000.0	sec	0	W	0
A422	l35	Dec Time-1	3.0	0	6000.0	sec	0	W	0
A423	I36	Acc Time-2	4.0	0	6000.0	sec	0	W	0
A424	137	Dec Time-2	4.0	0	6000.0	sec	0	W	0
A425	138	Acc Time-3	5.0	0	6000.0	sec	0	W	0
A426	139	Dec Time-3	5.0	0	6000.0	sec	0	W	0
A427	140	Acc Time-4	6.0	0	6000.0	sec	0	W	0
A428	I41	Dec Time-4	6.0	0	6000.0	sec	0	W	0
A429	I42	Acc Time-5	7.0	0	6000.0	sec	0	W	0
A42A	I43	Dec Time-5	7.0	0	6000.0	sec	0	W	0
A42B	144	Acc Time-6	8.0	0	6000.0	sec	0	W	0
A42C	145	Dec Time-6	8.0	0	6000.0	sec	0	W	0
A42D	146	Acc Time-7	9.0	0	6000.0	sec	0	W	0
A42E	147	Dec Time-7	9.0	0	6000.0	sec	0	W	0
A431	150	FM mode	0	0	3		0	W	0
A432	I51	FM adjust	100	10	200	%	0	W	0
A433	152	FDT freq	30.00	0	400.00	Hz	0	W	0
A434	153	FDT band	10.00	0	400.00	Hz	0	W	0
A435	154	Aux mode 1	12	0	19		0	W	0
A436	155	Aux mode 2	17	0	19		0	W	0
A437	156	Relay mode	2	0	7		0	W	0
A438	157	CommErrMode	0	0	3		0	W	0
		,				1	_	1	-



A43A	159	Protocol	0	0	1		Х	W	Х
A43B	I60	Inv No.	1	1	250		0	W	0
A43C	l61	Baud rate	3	0	4		0	W	0
A43D	l62	Lost command	0	0	2		0	W	0
A43E	l63	Time out	10	1	1200	sec	0	W	0
A43F	l64	Delay Time	5	2	100	msec	0	W	0
A440	l65	Parity Stop	0	0	3		0	W	0
A441	I66	Read Addr1	5	0	42239		0	W	0
A442	l67	Read Addr2	6	0	42239		0	W	0
A443	l68	Read Addr3	7	0	42239		0	W	0
A444	I69	Read Addr4	8	0	42239		0	W	0
A445	I70	Read Addr5	9	0	42239		0	W	0
A446	l71	Read Addr6	10	0	42239		0	W	0
A447	l72	Read Addr7	11	0	42239		0	W	0
A448	173	Read Addr8	12	0	42239		0	W	0
A449	174	Write Addr1	5	0	42239		0	W	0
A44A	l75	Write Addr2	6	0	42239		0	W	0
A44B	I76	Write Addr3	7	0	42239		0	W	0
A44C	177	Write Addr4	8	0	42239		0	W	0
A44D	l78	Write Addr5	5	0	42239		0	W	0
A44E	l79	Write Addr6	6	0	42239		0	W	0
A44F	180	Write Addr7	7	0	42239		0	W	0
A450	I81	Write Addr8	8	0	42239		0	W	0
A451	l82	BR RIs Curr	50.0	0	180.0	Α	0	W	0
A452	183	BR RIs Dly	1.00	0	10.00	sec	Х	W	0
A453	I84	BR RIsFwdFr	1.00	0	400.00	Hz	Х	W	0
A454	l85	BR RIsRevFr	1.00	0	400.00	Hz	Х	W	0
A455	I86	BR Eng Dly	1.00	0	10.00	sec	Х	W	0
A456	187	BR Eng Fr	2.00	0	400.00	Hz	Х	W	0
A457	I88	FireMode frq	50.00	0	400.00	Hz	0	W	0
A458	I89	Min FBK Val	0.0	0	100.0		0	W	0
A459	190	Max FBK Val	100.0	0	100.0		0	W	0
A45A	I91	MO Inverse	0	0	1		0	W	0
A45B	192	MO On Delay	0	0	10.0	sec	Х	W	0
A45C	193	MO Off Dela	0	0	10.0	sec	Χ	W	0
A45D	194	30ABC On DLY	0	0	10.0	sec	Χ	W	0
A45E	195	30ABC Off DL	0	0	10.0	sec	Х	W	0
A45F	196	NO Warranty	0	0	1		Х	R	0



13.8 Troubleshooting

Refer to Troubleshooting when RS485 communication error occurs.

Check points	Corrective measures
Is the power provided to the converter?	Provide electric power to the converter.
Are the connections between converter and computer correct?	Refer to converter manual.
Is Master not polling?	Verify the master is polling the inverter.
Is baud rate of computer and inverter correctly set?	Set the correct value in accordance with "13.3 Installation".
Is the data format of user program* right?	Revise User Program (Note1).
Is the connection between converter and communication card right?	Check for GF the correct wiring in accordance with "13.3 Installation".

(Note 1) User program is User-made S/W for PC.

13.9 Miscellaneous

ASCII Code List

Character	Hex								
Α	41	а	61	0	30	:	3A	DLE	10
В	42	b	62	1	31	;	3B	EM	19
С	43	С	63	2	32	<	3C	ACK	06
D	44	d	64	3	33	=	3D	ENQ	05
E F	45	е	65	4	34	>	3E	EOT	04
F	46	f	66	5	35	?	3F	ESC	1B
G	47	g	67	6	36	@	40	ETB	17
Н	48	h	68	7	37	[5B	ETX	03
I	49	i	69	8	38	\	5C	FF	0C
J	4A	J	6A	9	39]	5D	FS	1C
K	4B	k	6B	space	20		5E	GS	1D
L	4C	I	6C	!	21		5F	HT	09
M	4D	m	6D	"	22		60	LF	0A
N	4E	n	6E	#	23	{	7B	NAK	15
0	4F	0	6F	\$	24		7C	NUL	00
Р	50	р	70	%	25	}	7D	RS	1E
Q	51	q	71	&	26	~	7E	S1	0F
R	52	r	72	1	27	BEL	07	SO	0E
S	53	S	73	(28	BS	08	SOH	01
Т	54	t	74)	29	CAN	18	STX	02
U	55	u	75	*	2A	CR	0D	SUB	1A
V	56	V	76	+	2B	DC1	11	SYN	16
W	57	w	77	,	2C	DC2	12	US	1F
X	58	x	78	-	2D	DC3	13	VT	0B
Υ	59	у	79		2E	DC4	14		
Z	5A	Z	7A	/	2F	DEL	7F		



Notes:



CHAPTER 14 - TROUBLESHOOTING & MAINTENANCE

14.1 Protective functions

/!

WARNING

When a fault occurs, the cause must be corrected before the fault can be cleared. If protective function keeps active, it could lead to reduction in product life and damage to the equipment.

Fault Display and information

Keypad display	Protective functions	Descriptions
	Overcurrent	The inverter turns off its output when the output current of the inverter flows greater than the inverter rated current.
	Overcurrent2	When IGBT's Arm is short and output short occurs, the inverter turns off its output.
	Ground fault current	The inverter turns off its output when a ground fault occurs and the ground fault current is greater than the internal setting value of the inverter.
1 111	Inverter Overload	The inverter turns off its output when the output current of the inverter flows greater than the rated level (150% for 1 minute).
	Overload trip	The inverter turns off its output if the output current of the inverter flows at 150% of the inverter rated current for more than the current limit time (1 min).
	Inverter overheat	The inverter turns off its output if the heatsink overheats due to a damaged cooling fan or an alien substance in the cooling fan by detecting the temperature of the heatsink.
bür	Output Phase loss	The inverter turns off its output when one or more of the output (U, V, W) phase is open. The inverter detects the output current to check the phase loss of the output.
<u> </u>	Over voltage	The inverter turns off its output if the DC voltage of the DC BUS exceeds 400V for 2S/T class and 820V for 4T class when the motor decelerates. This fault can also occur due to a surge voltage generated at the power supply system.
[Lut	Low voltage	The inverter turns off its output if the DC voltage drops below 180V for 2S/T class and 360V for 4T class because insufficient torque or overheating of the motor can occur when the input voltage of the inverter drops.
<u>EFH</u>	Electronic Thermal	The internal electronic thermal of the inverter determines the overheating of the motor. If the motor is overloaded the inverter turns off the output. The inverter cannot protect the motor when driving a motor having more than 4 poles or multi motors.
	Input phase loss	Inverter output is blocked when one of R, S, T is open or the electrolytic capacitor needs to be replaced.



Fault Display and Information

Keypad display	Protective functions	Descriptions					
FLEL	Self-diagnostic malfunction	Displayed when IGBT damage, output phase short, output phase ground fault or output phase open occurs.					
EEP	Parameter save error	Displayed when user-setting parameters fails to be entered into memory.					
	Inverter hardware fault	Displayed when an error occurs in the control circuit of the inverter.					
Err	Communication Error	Displayed when the inverter cannot communicate with the keypad.					
rtrr	Remote keypad communication error	Displayed when inverter and remote keypad does not communicate each other. It does not stop Inverter operation.					
	Keypad error	Displayed after Inverter resets keypad when keypad error occurs and this status is maintained for a certain time.					
FAn	Cooling fan fault	Displayed when a fault condition occurs in the inverter cooling fan.					
		Used for the emergency stop of the inverter. The inverter instantly turns off the output when the EST terminal is turned on.					
$(\xi \xi \xi)$	Instant cut off	Caution: The inverter starts to regular operation when turning off the EST terminal while FX or RX terminal is ON.					
	External fault A contact input	When multi-function input terminal (I17-I24) is set to 18 {External fault signal input: A (Normal Open Contact)}, the inverter turns off the output.					
(Etb)	External fault B contact input	When multi-function input terminal (I17-I24) is set to 19 {External fault signal input: B (Normal Close Contact)}, the inverter turns off the output.					
	Operating method when the frequency command is lost	When inverter operation is set via Analog input (0-10V or 0-20mA input) or (RS485) and no signal is applied, operation is done according to the method set in I62 (Operating method when the frequency reference is lost).					
	NTC open	When NTC is not connected, outputs are cut off.					
upr	Brake control error	When the External Brake control function is activated, if the rating current flows below the set value during over 10 sec, the output is cut off without opening the brake.					



14.2 Fault remedy

Keypad display	Cause	Remedy
Overcurrent	Caution: When an overcurrent fault occurs, operati removed to avoid damage to IGBT inside Accel/Decel time is too short compared	
	to the GD ² of the load. Load is greater than the inverter rating. Inverter output is issued when the motor is free running. Output short circuit or ground fault has occurred. Mechanical brake of the motor is operating too fast.	 Replace the inverter with appropriate capacity. Resume operation after stopping the motor or use H22 (Speed search). Check output wiring. Check the mechanical brake.
Overcurrent2	Short occurs between up and down of IGBTs. Inverter output short occurs. Accel/Decel time is too short if compared to GD ² .	Check the IGBTs.Check output wiring.Increase the Accel/Decel time.
Ground fault current	Ground fault has occurred at the output wiring of the inverter The insulation of the motor is damaged.	Check the wiring of the output terminal.Replace the motor.
Inverter overload Overload trip	Load is greater than the inverter rating. Torque boost scale is set too large.	 Upgrade the capacity of motor and inverter or reduce the load weight. Reduce torque boost scale.
Inverter overheat	Cooling system has faults. A damaged cooling fan is not replaced with a new one. Ambient temperature is too high.	 Check for alien substances clogged in the heatsink. Replace the damaged cooling fan with a new one. Keep ambient temperature under 50°C.
Output Phase loss	Faulty contact of magnetic switch at output Faulty output wiring	 Make connection of magnetic switch at output of the inverter securely. Check output wiring.
Cooling fan fault	An alien substance is clogged in a ventilating slot. Inverter has been in use without changing a damaged cooling fan.	Check the ventilating slot and remove the clogged substances.Replace the damaged cooling fan.



• Fault remedy

Keypad display	Cause	Remedy
Over voltage	Decel time is too short compared to the GD^2 of the load. Regenerative load is connected at the inverter output. Line voltage is too high.	 Increase the Decel time. Use Dynamic Brake Unit. Check whether line voltage exceeds its rating.
Low voltage	Line voltage is low. Load larger than line capacity is connected to line (ex: welding machine, motor with high starting current connected to the commercial line). Faulty magnetic switch at the input side of the inverter.	 Check whether line voltage is below its rating. Check the incoming AC line. Adjust the line capacity corresponding to the load. Change a magnetic switch.
Electronic thermal	Motor has overheated. Load is greater than inverter rating. ETH level is set too low. Inverter capacity is incorrectly selected. Inverter has been operated at low speed for too long.	 Reduce load capacity and operating duty. Change inverter with higher capacity. Adjust ETH level to an appropriate level. Select correct inverter capacity. Install a cooling fan with a separate power supply.
External fault A contact input External fault External fault B contact input	The terminal set to "18 (External fault-A)" or "19 (External fault-B)" in I20-I24 in I/O group is ON.	Fliminate the cause of fault at circuit connected to external fault terminal or cause of external fault input.
Operating method when the frequency command is lost	No frequency command is applied to V1 and I.	© Check the wiring of V1 and I and frequency reference level.
Remote keypad communication error	Communication error between inverter keypad and remote keypad	Check for connection of communication line and connector.
Brake control error	No brake open current is flowing.	Check the Motor Capacity & Wiring.



Fault remedy

F	Protective functions & cause	Description
		© Contact your local ES sales representative.
EEP	: Parameter save error	
HWT	: Hardware fault	
Err	: Communication error	
COM	: Keypad error	
NTC	: NTC error	

Overload Protection

IOLT: IOLT(inverter Overload Trip) protection is activated at 150% of the inverter rated current for 1 minute and greater.

OLT: OLT is selected when F56 is set to 1 and activated at 200% of F57[Motor rated current] for 60 sec in F58. This can be programmable.

Sinus M is not provided with "Overspeed Protection."



14.3 Precautions for maintenance and inspection

<u>/!</u>\

WARNING

- Make sure to remove the input power while performing maintenance.
- Make sure to perform maintenance after checking the DC link capacitor has discharged. The bus capacitors in the inverter main circuit can still be charged even after the power is turned off. Check the voltage between terminal P or P1 and N using a tester before proceeding.
- Sinus M series inverter has ESD (Electrostatic Discharge) sensitive components. Take protective measures against ESD before touching them for inspection or installation.
- Do not change any inner parts and connectors. Never modify the inverter.

14.4 Check points

■ Daily inspections

Proper installation environment
Cooling system fault
Unusual vibration and noise
Unusual overheating and discoloration

■ Periodic inspection

Screws and bolts may become loose due to vibration, temperature changes, etc.

Check that they are tightened securely and retighten as necessary.

Alien substances are clogged in the cooling system.

Clean it using dry air.

Check the rotating condition of the cooling fan, the condition of capacitors and the connections with the magnetic contactor.

Replace them if there are any abnormalities.

14.5 Part replacement

The inverter consists of many electronic parts such as semiconductor devices. The following parts may deteriorate with age because of their structures or physical characteristics, leading to reduced performance or failure of the inverter. For preventive maintenance, the parts must be changed periodically. The parts replacement guidelines are indicated in the following table. Lamps and other short-life parts must also be changed during periodic inspection.

Part name	Change period (unit: Year)	Description
Cooling fan	3	Exchange (as required)
DC link capacitor in main circuit	4	Exchange (as required)
Electrolytic capacitor on control board	4	Exchange (as required)
Relays	-	Exchange (as required)



CHAPTER 15 - SPECIFICATIONS

Input & output ratings: 200-230V

SINUS N	1 ■ ■ ■ A2K2	2S/T	0001	0002	0003	0005	0007	0011	0014	0017	0020	0025	0030
Max capa Motor pov	-	[HP]	0.5	1-1.5	2-2.5	3-4	5.5-6	7.5	10- 12.5	15	20	25	30
200-230V		[kW]	0.4	0.75- 1.1	1.5- 1.8	2.2-3	4.0- 4.5	5.5	7.5- 9.2	11	15	18.5	22
	Capa [kVA]		0.95	1.9	3.0	4.5	6.5	9.1	12.2	17.5	22.9	28.2	33.5
Output	FLA [A] 3		2.5	5	8	12	17	24	32	46	60	74	88
ratings	Max Frequ	uency	400 [H	lz] ⁴									
	Max Volta	ge	3Ф 20	0 ~ 230	V ⁵								
Input	Rated Voltag		3Ф 20	3Ф 200 ~ 230 VAC (+10%, -15%)									
ratings	Rated Frequ	d Jency	, 50 ~ 60 [Hz] (±5%)										
Cooling method		N/C ⁶				ı	orced	cooling					
Weight [k	g]		0.76	0.77	1.12	1.84	1.89	3.66	3.66	9.0	9.0	13.3	13.3

Input & output ratings: 380-480V

SINUS M BA2K2			0001	0002	0003	0005	0007	0011	0014	0017	0020	0025	0030
Max cap Motor po	•	[HP]	0.5	1- 1.25	2	3	5.5-6	7.5	10	15	20	25	30
380-415		[kW]	0.4	0.75- 0.9	1.5	2.2	4-4.5	5.5	7.5	11	15	18.5	22
Max capacity ¹ [HP] Motor power 440-460Vac [kW]		[HP]	0.5	1-1. 5	2-3	3-4	5.5-6	7.5	10- 12.5	15	20	30	30
		[kW]	0.4	0.75- 1.1	1.5- 1.8	2.2-3	4-4.5	5.5	7.5- 9.2	11	15	22	22
	Capacity [kVA] ²		0.95	1.9	3.0	4.5	6.9	9.1	12.2	18.3	22.9	29.7	34.3
Output	FLA [A] 3		1.25	2.5	4	6	9	12	16	24	30	39	45
ratings	Max Fred	quency	400 [Hz] ⁴										
	Max Volta	age	3Ф 380 ~ 480V ⁵										
Input	Rated Vo	ltage	3Ф 380 ~ 480 VAC (+10%, -15%)										
ratings	Rated Frequence	су.	50 ~ 60 [Hz] (±5%)										
Cooling	N/C ⁶	N/C ⁶ Forced cooling											
Weight [kg]		0.76	0.77	1.12	1.84	1.89	3.66	3.66	9.0	9.0	13.3	13.3

- 1) Indicates the maximum applicable motor capacity when using a 4-pole ES Standard motor.
- 2) Rated capacity is based on 220V for 2S/T class and on 440V for 4T class.
- 3) Refer to section Inverter Efficiency and Heating Loss when Carrier frequency setting (H39) is above 3kHz.



- 4) Max. frequency setting range is extended to 300Hz when H40 (Control mode select) is set to 3 (Sensorless vector control).
- 5) Maximum output voltage cannot be higher than the input voltage. It can be programmable below the input voltage.
- 6) Natural convection.



Control

Control me	thod	V/F, Sensorless vector control				
Frequency	setting resolution	Digital command: 0.01Hz Analog command: 0.06Hz (Max freq.: 60Hz)				
Frequency	accuracy	Digital command: 0.01% of Max output frequency Analog command: 0.1% of Max output frequency				
V/F pattern	ı	Linear, Squared, User V/F				
Overload c	apacity	150% per 1 min.				
Torque boo	ost	Manual/Auto torque boost				
Dynamic	Max braking torque	20% 1)				
Braking	Time/%ED	150% ^{2) when using optional DB resistor}				

- 1) Means average braking torque during Decel to stop of a motor.
- 2) Refer to Chapter 16 for DB resistor specification.

Operation

Operation	on mode	Keypad/ Terminal/ Cor selectable	Keypad/ Terminal/ Communication option/ Remote keypad selectable					
Frequency setting		Analog: 0 ~ 10[V], -10 ~ 10[V], 0 ~ 20[mA] Digital: Keypad						
Operation	on features	PID, Up-down, 3-wire						
		NPN / PNP selectable						
Input	Multi-function terminal P1 ~ P8	FWD/REV RUN, Emergency stop, Fault reset, Jog operation, Multi-step Frequency-High, Mid, Low, Multi-ste Accel/Decel-High, Mid, Low, DC braking at stop, 2 nd motor select, Frequency UP/Down, 3-wire operation, External trip A PID-Inverter (V/f) operation bypass, Option-inverter (V/f) operation bypass, Analog Hold, Accel/Decel stop, Up/Down Save Freq, Open Loop 1, Fire Mode.						
	Open collector terminal	Fault output and	Less than 26Vdc 100mA					
Output	Multi-function relay	inverter status output	(N.O., N.C.) Less than 250VAC 1A, Less than 30VDC 1A					
	Analog output	0 ~ 10 Vdc (less than10mA): Output Freq, Output Current, Output Voltage, DC link selectable						



Protective function


Trip	Over Voltage, Under Voltage, Over Current, Over Current2, Ground Fault current detection, Inverter Overheat, Motor Overheat, Output Phase Open, Overload Protection, Communication Error, Loss of Speed Command, Hardware Fault, Fan trip, Brake error
Alarm	Stall prevention, overload
Momentary	Below 15 msec: Continuous operation (should be within rated input voltage, rated
Power	output power).
Loss	Above 15 msec: Auto restart enable

Environment

Degree of protection	IP20
Ambient temp	−10°C ~ 50°C
Storage temp	−20°C ~ 65°C
Humidity	Below 90% RH (no condensation)
Altitude/Vibration	Below 1,000m, 5.9m/sec ² (0.6G)
Atmospheric pressure	70~106 kPa
Location	Protected from corrosive gas, combustible gas, oil mist or dust

15.1 Temperature Derating Information

Load and ambient temperature classified by the Carrier Frequency

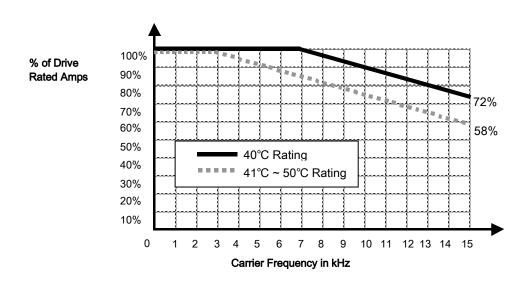

ACAUTION

- 1) The above graph is only applied when the inverter is operated in the allowable temperature. Pay attention to the air cooling when the inverter is installed in a panel box, and the inside temperature should be within an allowable temperature range.
- 2) This derating curve is based on inverter current rating when rated motor is connected.



15.2 Inverter Efficiency and Heating Loss

• Measured conditions: 50Hz; 100% Current Load; Default Carrier Frequency.

Note: The inverter efficiency is computed by considering the SMPS power consumption.

SINUS M = = 2S/T BA2K2		0001	0002	0003	0005	0007	0011	0014	0017	0020	0025	0030
Efficiency	%	95.3	95.5	98.4	97.2	97.2	98.4	98.9	97.0	95.2	95.7	96.2
Heating Loop	W	13	28	18	56	106	73	70	290	683	759	799
Heating Loss	kcal	11	24	15	48	91	63	61	249	587	799	687


SINUS M BA2K2		0001	0002	0003	0005	0007	0011	0014	0017	0020	0025	0030
Efficiency	%	96.2	96.2	97.5	97.6	97.5	98.2	98.3	97.0	95.7	95.7	95.2
Heating Loss	W	9	22	32	47	94	84	113	293	608	759	1019
Heating Loss	kcal	8	19	27	40	81	72	97	252	523	652	877



CHAPTER 16 - OPTIONS

16.1 Remote option

1) Remote Keypad

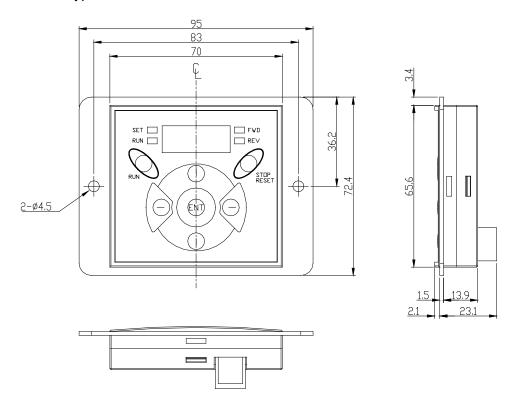

2) Remote Cable (2M,3M,5M)




Remote Cable Model Number

Model number	Specification
On request	INV, REMOTE 2M (Sinus M)
ZZ0073100	INV, REMOTE 3M (Sinus M)
On request	INV, REMOTE 5M (Sinus M)




Installation


1) Take off the top cover of the I/O board kit and remove the hole cover to connect remote cable on the side.

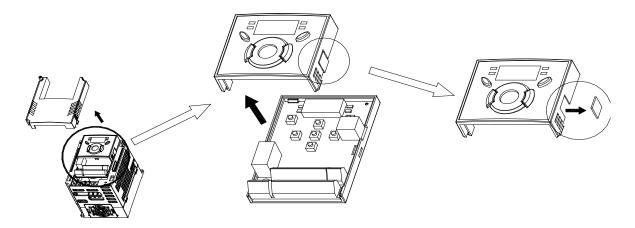

2) Attach the top cover of the I/O board kit and connect the remote cable as shown below.

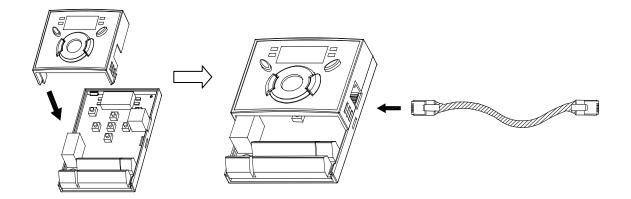

3) Connect the other side of the remote cable to the remote keypad as shown below.

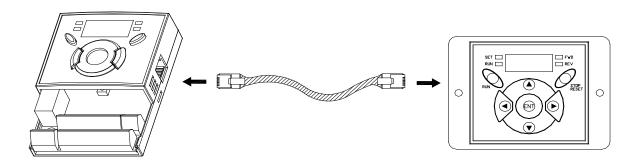




- Without Parameter Read, Parameter Write is not available since the Remote memory is empty when the Remote keypad is first used.
- Do not use the remote cable other than standard ES'. Otherwise, malfunction may occur due to noise input or voltage drop in the keypad.
- Check for disconnection of the communication cable and/or poor cable connection if "----" is displayed on the 7-segment display of the Remote keypad.
- When Parameter Read(H91) is executed, "rd"(Read) and "wr"(Verifiy) is displayed successively on the 7-segment display of the Remote keypad. On the other hand, when Parameter Write(H92) is executed, "wr"(Write) is displayed only.




16.2 Conduit Kit

- Installation
- 1) From SINUS M 0001 to SINUS M 0007.

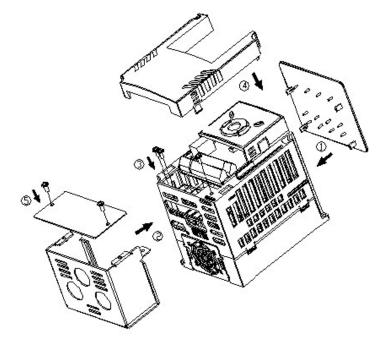


2) From SINUS M 0011 to SINUS M 0014.

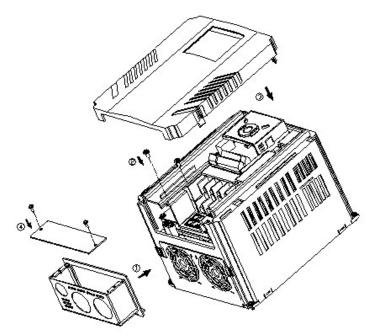



3) From SINUS M 0017 to SINUS M 0030.

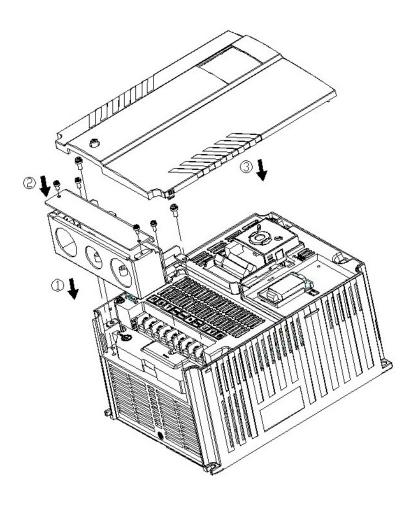

Conduit kit

Conduit Kit	Code	Model
Inverter Conduit Kit 1	ZZ0073102	SINUS M 0001 – SINUS M 0002
Inverter Conduit Kit 2	ZZ0073104	SINUS M 0003
Inverter Conduit Kit 3	ZZ0073106	SINUS M 0005 – SINUS M 0007
Inverter Conduit Kit 4	ZZ0073108	SINUS M 0011 – SINUS M 0014
Inverter Conduit Kit 5	ZZ0073110	SINUS M 0017 - SINUS M 0020
Inverter Conduit Kit 6	ZZ0073112	SINUS M 0025 - SINUS M 0030



16.3 EMC Filters

EMI / RFI POWER LINE FILTERS

THE ES RANGE OF POWER LINE FILTERS FFM (Footprint) AND FV SERIES, HAVE BEEN SPECIFICALLY DESIGNED WITH HIGH FREQUENCY ES INVERTERS. THE USE OF ES FILTERS, WITH THE INSTALLATION ADVICE OVERLEAF HELP ENSURE TROUBLE FREE USE ALONG SIDE SENSITIVE DEVICES AND COMPLIANCE TO CONDUCTED EMISSION AND IMMUNITY STANDARDS EN61800-3.

IN CASE OF LEAKAGE CURRENT, A PROTECTIVE DEVICE IS USED ON POWER SUPPLY, THAT COULD BE DAMAGED WHEN POWERING ON/OFF THE DEVICE. TO AVOID THIS, THE SENSE CURRENT OF THE PROTECTIVE DEVICE SHOULD BE LARGER THAN THE VALUE OF THE LEAKAGE CURRENT. SEE TABLE BELOW.

RECOMMENDED INSTALLATION INSTRUCTIONS

To conform to the EMC directive, it is necessary that these instructions be followed as closely as possible. Follow the usual safety procedures when working with electrical equipment. All electrical connections to the filter, inverter and motor must be made by a qualified electrical technician.

- 1-) Check the filter rating label to ensure that the current, voltage rating and part number are correct.
- 2-) For best results the filter should be fitted as closely as possible to the incoming mains supply of the wiring enclosure, usually directly after the enclosures circuit breaker or supply switch.
- 3-) The back panel of the wiring cabinet of board should be prepared for the mounting dimensions of the filter. Care should be taken to remove any paint etc... from the mounting holes and face area of the panel to ensure the best possible earth connection of the filter.
- 4-) Mount the filter securely.
- 5-) Connect the mains supply to the filter terminals marked LINE, connect any earth cables to the earth stud provided. Connect the filter terminals marked LOAD to the mains input of the inverter using short lengths of appropriate gauge cable.
- 6-) Connect the motor and fit the <u>ferrite core</u> (output ferrite ring) as close to the inverter as possible. Armoured or screened cable should be used with the 3 phase conductors only threaded twice through the center of the ferrite core. The earth conductor should be securely earthed at both inverter and motor ends. The screen should be connected to the enclosure body via and earthed cable gland.
- 7-) Connect any control cables as instructed in the inverter instructions manual.

IT IS IMPORTANT THAT ALL LEAD LENGTHS ARE KEPT AS SHORT AS POSSIBLE AND THAT INCOMING MAINS AND OUTGOING MOTOR CABLES ARE KEPT WELL SEPARATED.




SINUS M	series	/ FFM	Filter	s (Footprint))							
INVERTER	POWER	CODE	CURRENT	VOLTAGE	LEAKAGE CURRENT	DIMENSIONS L W H	MOUNTING X X	WEIGHT	MOUNT	OUTPUT FERRITE		
		<u>I</u>		l	NOM. MAX.					I		
SINUS 0001 2S/T SINUS 0002	0.4kW 1.1kW	AC1710101*	5A	200÷480VAC	0.5mA 27mA	175x76.5x40	161x53	1.2kg	M4	AC1810302		
2S/T SINUS 0003	1.8kW	AC1710201*	12A	200÷480VAC	0.5mA	176.5x107.5x40	162.5x84	1.3kg	M4	AC1810302		
2S/T SINUS 0005	3kW				27mA							
2S/T SINUS 0007 2S/T	4.5kW	AC1710202*	20A	200÷480VAC	0.5mA 27mA	176.5x147.5x45	162.5x124	1.8kg	M4	AC1810302		
SINUS 0011 2S/T	5.5kW	AC1710300*	30A	200÷480VAC	0.5mA 27mA	266x185.5x60	252x162	2kg	M4	AC1810302		
SINUS 0014 2S/T	9.2kW	AC1710500*	50A	200÷480VAC	0.5mA 27mA	270x189.5x60	252x162	2.5kg	M4	AC1810402		
SINUS 0017 2S/T	11kW											
SINUS 0020 2S/T	15kW											
SINUS 0025 2S/T	18kW		Not available (see Standard Filters)									
SINUS 0030 2S/T	22kW											
SINUS 0001 4T	0.4kW	AC1710101*	5A	200÷480VAC	0.5mA	175x76.5x40	161x53	1.2kg	M4	AC1810302		
SINUS 0002 4T	0.9kW	ACITIOIOI	SA	200÷460 VAC	27mA	175876.5840	101x33	1.2kg	IVI 4	AC1010302		
SINUS 0003 4T	1.5kW	AC1710104*	6A	200÷480VAC	0.5mA 27mA	176.5x107.5x40	162.5x84	1.2kg	M4	AC1810302		
SINUS 0005 4T	2.2kW	AC1710200*	11A	200÷480VAC	0.5mA	176 Ev1 17 Ev 1E	162.5x124	1 Eka	M4	AC1810302		
SINUS 0007 4T	4.5kW	AC1710200"	IIA	200÷400VAC	27mA	176.5x147.5x45	102.3X124	1.5kg	IVI 41	AC 1010302		
SINUS 0011 4T SINUS 0014	5.5kW	AC1710300*	30A	200÷480VAC	0.5mA 27mA	266x185.5x60	252x162	2kg	M4	AC1810302		
4T	7.5kW				21111/1							
SINUS 0017 4T	11kW	AC1710510*	51A	200÷480VAC	0.5mA	368x258.5x65	354x217	2.5kg	M6	AC1810402		
SINUS 0020 4T	15kW		2 ., ,	200÷480VAC	27mA	300x230.3x05	00 1 7211	Z.JNY				
SINUS 0025 4T	18kW	AC1710600*	60A	200÷480VAC	0.5mA 27mA	460x288x65	446x246	2.8kg	M8	AC1810402		
SINUS 0030 4T	22kW	AC1710700*	70A	200÷480VAC	0.5mA 27mA	460x288x65	446x246	2.8kg	M8	AC1810402		



SINUS M s	series	/ Stan	dard I	Filters						
INVERTER	POWER	CODE	CURRENT	VOLTAGE	LEAKAGE CURRENT	DIMENSIONS L W H	MOUNTING	WEIGHT	MOUNT	OUTPUT FERRITE
					NOM. MAX.		1			
SINUS 0017 2S/T	11kW	AC1711000*	100A	250VAC	0.5mA	420×200×120	409v166	13.8		AC1810603
SINUS 0020 2S/T	15kW	AC1711000	TOUA		27mA	420x200x130	408x166	kg	1	AC1610003
SINUS 0025 2S/T	18kW	AC1711100*	1204	250VAC	0.5mA	420x200x130	408x166	13.8		AC1810603
SINUS 0030 2S/T	22kW	AC1711100°	120A	250VAC	27mA	42UX2UUX13U	4000100	kg	ı	AC1610603

^{*} Domestic and industrial environment EN50081-1 (B class) \rightarrow EN61000-6-3:02

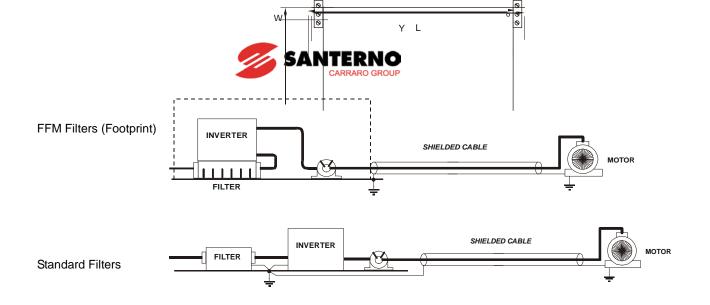



FFM Filters (Footprint)

Standard Filters






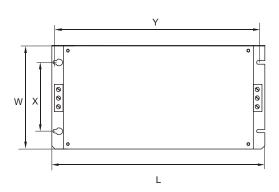

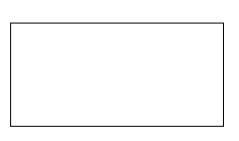

Output ferrite ring

 



FILTER	TYPE	D	d	L
AC1810302	2xK618	15	26	22
AC1810402	2xK674	23	37	31
AC1810603	3xK40	41	60	58



16.4 Braking resistors

2S/T Class Inverter (200÷230Vac)

	`	,				
SINUS M	0001 2S/T	0002 2S/T	0003 2S/T	0005 2S/T	0007 2S/T	0011 2S/T
Resistor	200Ω 350W*	100Ω 350W	56Ω 350W	56Ω 350W	50Ω 1100W	15Ω 1100W
Code	RE2644200	RE2644100	RE2643560	RE2643560	RE3083500	RE3083150

2S/T Class Inverter (200÷230Vac)

SINUS M	0014 2S/T	0017 2S/T	0020 2S/T	0025 2S/T	0030 2S/T
Resistor	15Ω 1100W	10Ω 2200W	10Ω 2200W	5Ω 4000W	5Ω 4000W
Code	RE3083150	RE3113100	RE3113100	RE3482500	RE3482500

4T Class Inverter (380÷480Vac)

SINUS M	0001 4T	0002 4T	0003 4T	0005 4T	0007 4T	0011 4T
Resistor	400Ω 350W	400Ω 350W	200Ω 350W	200Ω 350W	100Ω 550W	75Ω 550W
Code	RE2644400	RE2644400	RE2644200	RE2644200	RE3064100	RE3063750

4T Class Inverter (380÷480Vac)

SINUS M	0014 4T	0017 4T	0020 4T	0025 4T	0030 4T
Resistor	50Ω 1100W	33Ω 2200W	33Ω 2200W	20Ω 4000W	20Ω 4000W
Code	RE3083500	RE3113330	RE3113330	RE3483200	RE3483200


Suggested braking resistors are for standard applications where enable duty and continuous braking are lower than the given values. For heavy duty (applications where load is pulled for more time than max. continuous braking, stopping of big flywheels and so on), please contact Elettronica Santerno.

^{*} The wattage is based on Enable duty (%ED) 5%, Average braking torque of 150% with a continuous braking time of 15 sec.




16.4.1 Dimensions

Model 350W - IP55

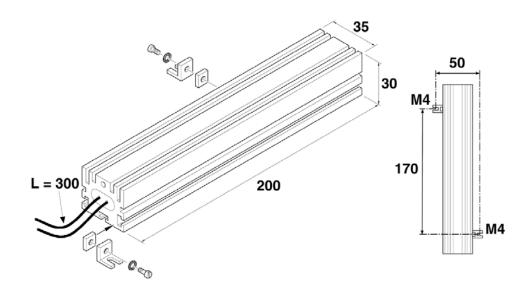

Overall Dimensions, Resistor 350W - IP55


Model 550W - IP55

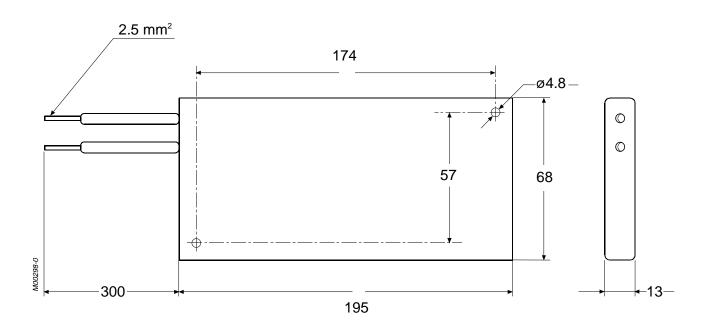

Overall Dimensions, Resistor 550W - IP55



Model 1100W - IP55

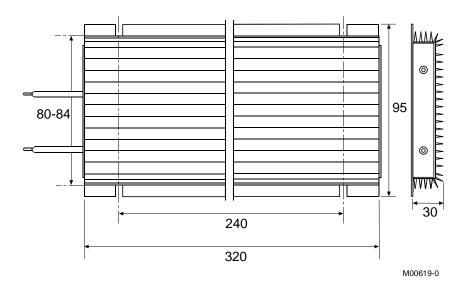

Overall Dimensions, Resistor 1100W - IP55

Model 2200W – IP54


A (mm)	B (mm)	L (mm)	l (mm)	P (mm)
190	67	380	177-182	300

P000550-0

Overall Dimensions, Resistor 2200W - IP54



Model 4000W - IP20

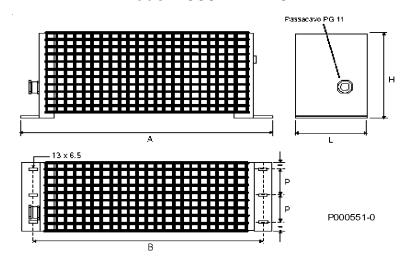

A (mm)	B (mm)	L (mm)	H (mm)	P (mm)
620	600	100	250	40


Overall Dimensions, Resistor 4000W - IP20




16.4.2 Braking resistor wiring diagram

Wire the braking resistor to terminals B1 and B2 on the inverter as short as possible.

Power terminal wiring (0.4 ~ 7.5kW)

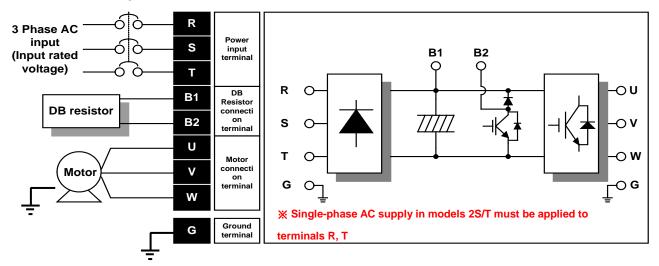

Power terminal wiring (11.0 ~ 22.0kW)

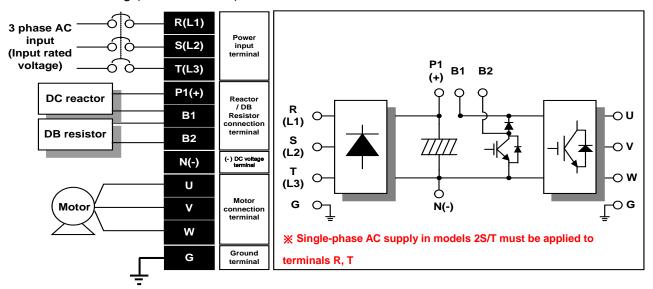



CHAPTER 17 - EC Declaration of Conformity





EC DECLARATION OF CONFORMITY

Elettronica Santerno S.p.A.

S.S. Selice, 47 - 40026 Imola (BO) - Italy

AS A MANUFACTURER

DECLARES

UNDER ITS SOLE RESPONSIBILITY

THAT THE THREE-PHASE DIGITAL INVERTER OF THE $\,$ SINUS $\,$ M $\,$ SERIES WITH RELATED ACCESSORIES/OPTIONS:

SINUS M 0001 2T/4T	SINUS M0011 2T/4T
SINUS M 0002 2T/4T	SINUS M 0014 2T/4T
SINUS M 0003 2T/4T	SINUS M 0017 2T/4T
SINUS M 0005 2T/4T	SINUS M 0025 2T/4T
SINUS M 0007 2T/4T	SINUS M 0030 2T/4T

WHICH THIS DECLARATION RELATES TO,

WHEN APPLIED UNDER THE OPERATING CONDITIONS GIVEN IN THE USER MANUAL CONFORMS TO THE FOLLOWING STANDARDS:

CEI EN 61800-3 (2005)	Adjustable speed electrical power drive systems. Part 3: EMC requirements and specific test methods	
	Electronic equipment for use in power installations	

ACCORDING TO THE ELECTROMAGNETIC COMPATIBILITY DIRECTIVE 2004/108/CE

AND THE LOW VOLTAGE DIRECTIVE 2006/95/CE (LAST TWO FIGURES OF THE YEAR WHEN THE CE MARKING WAS APPLIED: 04)

PLACE AND DATE Imola, 9/05/2009 General Manager
BOMBARDA ING. GIORGIO

GRUPPO CARRARO

Elettronica Santerno Spa Società soggetta all'attività di direzione e coordinamento di Carraro Spa Sede Legale Via Olmo 37 35011 Campodarsego (Pd) Tel. +39 049 9219111 Fax +39 049 9289111 Stabilimenti e uffici S.S. Selice 47 40060 Imola (Bo) Tel. +39 0542 489711 Fax +39 0542 489797 www.elettronicasanterno.com sales@elettronicasanterno.it

Cap. Soc. € 2.500.000 l.v. Codice Fiscale e Partita Iva 03686440284 R.E.A. PD 328951 Cod. Mecc. PD 054138 Cod. Ident. IVA Intracom. IT0368640284