

MODBUS MODULE

INSTRUCTIONS
FOR ASAC-0/ASAC-1/ASAB

Issued on 15/06/12

R. 01

- This manual is integrant and essential to the product. Carefully read the instructions contained herein as they provide important hints for use and maintenance safety.
- This device is to be used only for the purposes it has been designed to. Other uses should be considered improper and dangerous. The manufacturer is not responsible for possible damages caused by improper, erroneous and irrational uses.
- Elettronica Santerno is responsible for the device in its original setting.
- Any changes to the structure or operating cycle of the device must be performed or authorized by the Engineering Department of Elettronica Santerno.
- Elettronica Santerno assumes no responsibility for the consequences resulting by the use of non-original spareparts.
- Elettronica Santerno reserves the right to make any technical changes to this manual and to the device without prior notice. If printing errors or similar are detected, the corrections will be included in the new releases of the manual.
- The information contained herein is the property of Elettronica Santerno and cannot be reproduced. Elettronica Santerno enforces its rights on the drawings and catalogues according to the law.

Contents

| | | |
|-----|---|---|
| 1. | Important User Information | 2 |
| 2. | Introduction | 2 |
| 3. | Installation | 2 |
| 4. | Adjustment | 3 |
| 5. | Connection | 3 |
| 6. | LEDs | 4 |
| 7. | Modbus Functions | 4 |
| 8. | Modbus Register | 5 |
| 9. | Trip Codes | 7 |
| 10. | Examples | 8 |
| 11. | Modbus Error Codes | 8 |
| 12. | Modbus Control via Remote Operator | 9 |
| 13. | Specifications | 9 |



Elettronica Santerno S.p.A.
S.S. Selice, 47 – 40026 Imola (BO) Italy
Tel. +39 0542 489711 – Fax +39 0542 489722
www.santerno.com, sales@santerno.com

1. Important User Information

Observe all necessary safety precautions when controlling the soft starter remotely. Alert personnel that machinery may start without warning.

It is the installer's responsibility to follow all instructions in this manual and to follow correct electrical practice.

Use all internationally recognised standard practice for RS-485 communications when installing and using this equipment.

2. Introduction

Santerno soft starters can be controlled and monitored across an RS-485 serial communication network using the Modbus RTU and AP ASCII protocols.

3. Installation



CAUTION




Remove mains and control voltage from the soft starter before attaching or removing accessories. Failure to do so may damage the equipment.

3.1 Installation Procedure

1. Remove control power and mains supply from the soft starter.
2. Attach the Modbus Module to the starter as shown.
3. Apply control power to the soft starter.

3.2 Physical Installation


1. Fully pull out the top and bottom retaining clips on the module.
2. Line up the module with the comms port slot.
3. Push in the top and bottom retaining clips to secure the module to the starter.

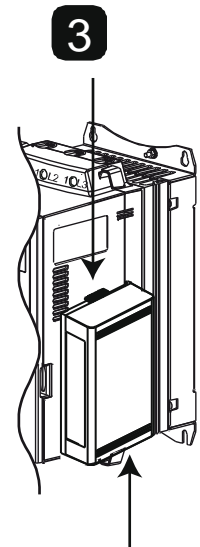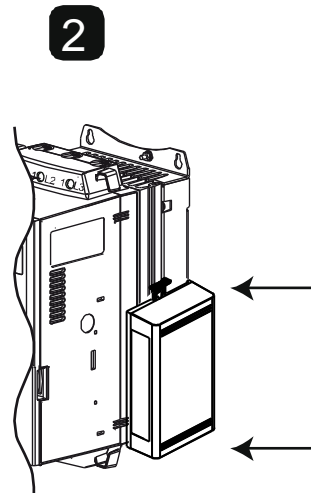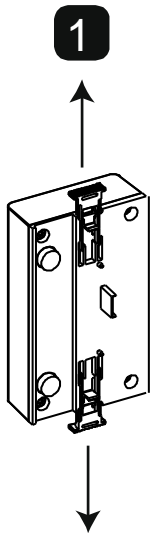

10178B

Remove the module using the following procedure:


1. Take the module off-line.
2. Remove control power and mains supply from the soft starter.
3. Disconnect all field wiring from the module.
4. Fully pull out the top and bottom retaining clips on the module.
5. Pull the module away from the soft starter.

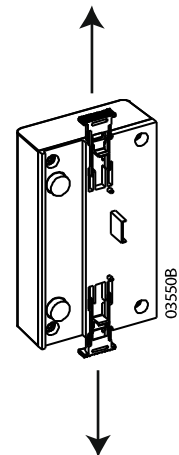


03550B

4. Adjustment

Network communication parameters must be set on the Modbus Module. DIP switch settings take effect on the power-up of the Modbus Module via the soft starter.

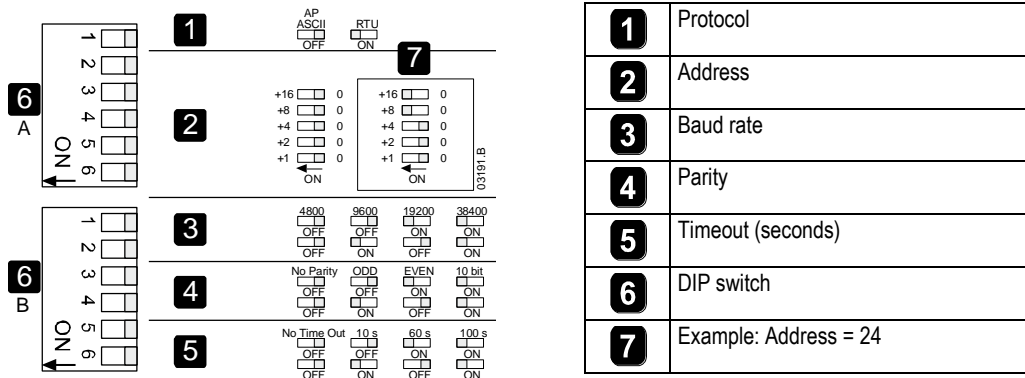

5. Connection

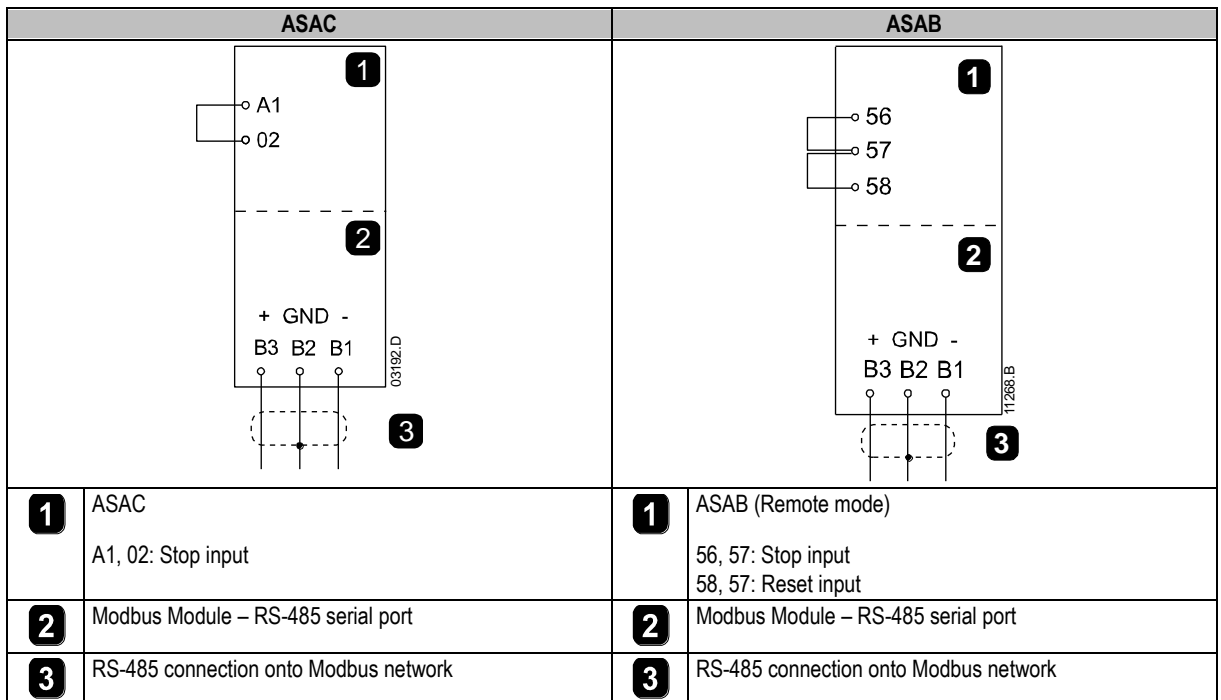

ASAC: For the Modbus Module to accept serial commands, a link must be fitted across terminals A1-02 on the soft starter.

ASAB: Input links are required across the stop and reset inputs if the soft starter is being operated in Remote mode. In Local mode, links are not required.




NOTE

ASAB: Parameter *Comms in Remote* selects whether the soft starter will accept Start and Stop commands from the Serial Network Master while in Remote Mode. Refer to the soft starter user manual for parameter details.

6. LEDs

The Network Status LED (1) indicates the state of the communications link between the module and the network. LED operation is as follows:

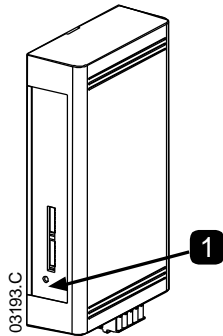

| | | |
|----------|----------|--|
| 1 | Off | No connection or soft starter not powered up |
| | On | Communication active |
| | Flashing | Communication inactive |



NOTE

If communication is inactive, the soft starter may trip if the Communications Timeout function has been set on the module. When communication is restored, the soft starter will require a Reset.

7. Modbus Functions

The Modbus Module supports the following Modbus functions:

- 03 Read multiple registers
- 06 Write single register
- 16 Write multiple registers

Modbus broadcast functions are not supported.

ASAC soft starters (including Remote Operator):

- Read multiple registers 40003 to 40008
- Write single register 40002

ASAB soft starters:

- Read multiple registers starting from 40003 up to a maximum of 119 register blocks.
- Single write register 40002 or multiple write registers 40009 to 40599.



NOTE

A multiple read across register boundary 40008/40009 will result in a Modbus Error code 05 at the Master.

8. Modbus Register



NOTE

Some soft starters do not support some functions.

Registers 40600 and above are not compatible with ASAC Series soft starters. For ASAC, use registers 40002~40008.

All registers are multiple read/write unless otherwise stated.

| Register | Description | Bits | Details |
|--------------------|--|--|---|
| 40002 | Command (single write) | 0 to 2 3 to 7 | To send a command to the starter, write the required value: 1 = Start 2 = Stop 3 = Reset 4 = Quick stop (coast to stop) 5 = Forced communication trip 6 = Start using Parameter Set 1 ¹ 7 = Start using Parameter Set 2 ¹ <i>Reserved</i> |
| 40003 | Starter status | 0 to 3 | 1 = Ready 2 = Starting 3 = Running 4 = Stopping (including braking) 5 = Restart delay (including temperature check) 6 = Tripped 7 = Programming mode 8 = Jog forward 9 = Jog reverse |
| | | 4 | 1 = Positive phase sequence (only valid if bit 6 = 1) |
| | | 5 | 1 = Current exceeds FLC |
| | | 6 | 0 = Uninitialised 1 = Initialised |
| | | 7 | 0 = Remote Operator communications are OK 1 = Remote Operator/Communications device fault |
| 40004 | Trip code | 0 to 7 | Refer to Trip Codes |
| 40005 ² | Motor current | 0 to 7 | Average 3-phase motor current (A) |
| 40006 | Motor temperature | 0 to 7 | Motor 1 temperature (thermal model) |
| 40007 | Product information | 0 to 2 | Product parameter list version |
| | | 3 to 7 | Product type code ³ |
| 40008 | Serial Protocol Version | 0 to 7 | |
| 40009 ⁴ | Parameter management Single or multiple read or write | 0 to 7 | Manage soft starter programmable parameters. |
| 40600 | Version | 0 to 5 | Binary protocol version number |
| | | 6 to 8 | Parameter list version number |
| | | 9 to 15 | Product type code ³ |
| 40601 | <i>Reserved</i> | | |
| 40602 ⁵ | Changed parameter number | 0 to 7 | 0 = parameters not changed 1~255 = index number of the last parameter changed |
| | | 8 to 15 | Total number of parameters available in the starter |
| 40603 ⁵ | Changed parameter value | 0 to 13 | Value of the last parameter that was changed, as indicated in register 40602 |
| | | 14 to 15 | <i>Reserved</i> |
| 40604 | Starter state | 0 to 4 | 0 = <i>Reserved</i> 1 = Ready 2 = Starting 3 = Running 4 = Stopping 5 = Not ready (restart delay, restart temperature check) 6 = Tripped 7 = Programming mode 8 = Jog forward 9 = Jog reverse |
| | | 5 | 1 = Warning |
| | | 6 | 0 = Uninitialised |
| | | | 1 = Initialised |

| Register | Description | Bits | Details |
|--------------------|------------------------|---------------------------------|--|
| | | 7 | 0 = Local control 1 = Remote control |
| | | 8 | 0 = Parameter(s) have changed since last parameter read 1 = No parameters have changed ⁵ |
| | | 9 | 0 = Negative phase sequence 1 = Positive phase sequence |
| | | 10 to 15 | Refer to Trip Codes ⁶ |
| 40605 ² | Current | 0 to 13 14 to 15 | Average rms current across all three phases <i>Reserved</i> |
| 40606 | Current | 0 to 9 10 to 15 | Current (% motor FLC) <i>Reserved</i> |
| 40607 | Motor temperature | 0 to 7 8 to 15 | Motor 1 thermal model (%) Motor 2 thermal model (%) |
| 40608 ⁷ | Power | 0 to 11 12 to 13 14 to 15 | Power Power scale <i>Reserved</i> |
| 40609 | % Power factor | 0 to 7 8 to 15 | 100% = power factor of 1 <i>Reserved</i> |
| 40610 | Voltage | 0 to 13 14 to 15 | Average rms voltage across all three phases <i>Reserved</i> |
| 40611 ² | Current | 0 to 13 14 to 15 | Phase 1 current (rms) <i>Reserved</i> |
| 40612 ² | Current | 0 to 13 14 to 15 | Phase 2 current (rms) <i>Reserved</i> |
| 40613 ² | Current | 0 to 13 14 to 15 | Phase 3 current (rms) <i>Reserved</i> |
| 40614 | <i>Reserved</i> | | |
| 40615 | <i>Reserved</i> | | |
| 40616 | <i>Reserved</i> | | |
| 40617 | Parameter list version | 0 to 7 8 to 15 | Parameter list minor revision Parameter list major version |
| 40618 | Digital Input state | 0 to 15 | For all inputs, 0 = open, 1 = closed (shorted) 0 = Start 1 = Stop 2 = Reset 3 = Input A 4 to 15 = <i>Reserved</i> |
| 40619~ 40631 | <i>Reserved</i> | | <i>Reserved</i> |

¹ Ensure that the programmable input is not set to Motor Set Select before using this function.

² For models ASAB-0053B and smaller this value will be 10 times greater than the value displayed on the keypad.

³ Product type code:

4 = ASAC

9 = ASAB

⁴ Refer to the relevant soft starter literature for a complete parameter list. The first product parameter is always allocated to register 40009. The last product parameter is allocated to register 40XXX, where XXX = 008 plus total number of available parameters in the product.

⁵ Reading register 40603 (Changed parameter value) will reset registers 40602 (Changed parameter number) and 40604 (Parameters have changed). Always read registers 40602 and 40604 before reading register 40603.

⁶ Bits 10~15 of register 40604 report the soft starter's trip or warning code. If the value of bits 0~4 is 6, the soft starter has tripped. If bit 5 = 1, a warning has activated and the starter is continuing to operate.

⁷ Powerscale functions as follows:

0 = multiply Power by 10 to get W

1 = multiply Power by 100 to get W

2 = Power is represented in kW

3 = multiply Power by 10 to get kW

9. Trip Codes

| Trip Code | Description | ASAC-0 | ASAC-1 | ASAB |
|-----------------|---|--------|--------|------|
| 1 | Excess start time | | ● | ● |
| 2 | Motor overload (thermal model) | | ● | ● |
| 3 | Motor thermistor | | ● | ● |
| 4 | Current imbalance | | ● | ● |
| 5 | Frequency (Mains supply) | ● | ● | ● |
| 6 | Phase sequence | | ● | ● |
| 7 | Instantaneous overcurrent | | | ● |
| 8 | Power loss/Power circuit | ● | ● | ● |
| 9 | Undercurrent | | | ● |
| 10 | Heatsink (starter) overtemperature | | | ● |
| 11 | Motor connection | | | ● |
| 12 | Input A trip/Auxiliary Trip A | | | ● |
| 13 | FLC too high/FLC out of range | | | ● |
| 14 | Unsupported option (function not available in inside delta) | | | ● |
| 15 | Starter communication (between module and soft starter) | ● | ● | ● |
| 16 | Network communication (between module and network) | ● | ● | ● |
| 17 | Internal fault x (where x is the fault code detailed in the table below). | | | ● |
| 23 | Parameter out of Range | | | ● |
| 26 | L1 phase loss | | | ● |
| 27 | L2 phase loss | | | ● |
| 28 | L3 phase loss | | | ● |
| 29 | L1-T1 shorted | | | ● |
| 30 | L2-T2 shorted | | | ● |
| 31 | L3-T3 shorted | | | ● |
| 32 | Motor 2 overload (thermal model) | | | ● |
| 33 ¹ | Time-overcurrent (Bypass overload) | | ● | ● |
| 35 | Battery/clock | | | ● |
| 36 | Thermistor circuit | | | ● |
| 255 | No trip | ● | ● | ● |

¹ For ASAB, time-overcurrent protection is only available on internally bypassed models.

9.1 Internal Fault x

The table below details the internal fault code associated with trip code 17.

| Internal fault | Message displayed on the keypad |
|----------------|--|
| 70 ~ 72 | Current Read Err Lx |
| 73 | Internal fault X Contact your local supplier with the fault code (X). |
| 74 ~ 76 | Motor Connection Tx |
| 77 ~ 79 | Firing Fail SCRx |
| 80 ~ 82 | VZC Fail Px |
| 83 | Low Control Volts |
| 84 ~ 98 | Internal fault X Contact your local supplier with the fault code (X). |

10. Examples

Command: Start

| Message | Starter Address | Function Code | Register Address | Data | CRC |
|---------|-----------------|---------------|------------------|------|------------|
| In | 20 | 06 | 40002 | 1 | CRC1, CRC2 |
| Out | 20 | 06 | 40002 | 1 | CRC1, CRC2 |

Starter status: Running

| Message | Starter Address | Function Code | Register Address | Data | CRC |
|---------|-----------------|---------------|------------------|----------|------------|
| In | 20 | 03 | 40003 | 1 | CRC1, CRC2 |
| Out | 20 | 03 | 2 | xxxx0011 | CRC1, CRC2 |

Trip code: Motor overload

| Message | Starter Address | Function Code | Register Address | Data | CRC |
|---------|-----------------|---------------|------------------|----------|------------|
| In | 20 | 03 | 40004 | 1 | CRC1, CRC2 |
| Out | 20 | 03 | 2 | 00000010 | CRC1, CRC2 |

Download parameter from starter

ASAB: Read Parameter 7, Current Limit (Parameter 2B), 350%

| Message | Starter Address | Function Code | Register Address | Data | CRC |
|---------|-----------------|---------------|------------------|------|------------|
| In | 20 | 03 | 40015 | 1 | CRC1, CRC2 |
| Out | 20 | 03 | 2 (bytes) | 350 | CRC1, CRC2 |

Upload single parameter to starter

ASAB: Write Parameter 12, Excess Start Time (Parameter 2G), set = 10

| Message | Starter Address | Function Code | Register Address | Data | CRC |
|---------|-----------------|---------------|------------------|------|------------|
| In | 20 | 06 | 40020 | 10 | CRC1, CRC2 |
| Out | 20 | 06 | 40020 | 10 | CRC1, CRC2 |

Upload multiple parameters to starter

ASAB: Write Parameters 7, 8, 9 (parameters 2B Current Limit, 2C Initial Current, 2D Start Ramp Time). Set to values of 350%, 300%, 15 seconds respectively.

| Message | Starter Address | Function Code | Register Address | Data | CRC |
|---------|-----------------|---------------|------------------|--------------|------------|
| In | 20 | 16 | 40015,3 | 350, 300, 15 | CRC1, CRC2 |
| Out | 20 | 16 | 40015,3 | 350, 300, 15 | CRC1, CRC2 |



NOTE

This function can only be used to upload consecutive parameter blocks. The Register Address data indicates the number of parameters to be uploaded, and the register address of the first parameter.



NOTE

Parameter information can only be uploaded/downloaded from ASAB starters.

11. Modbus Error Codes

| Code | Description | Example |
|------|---------------------------|--|
| 01 | Illegal function code | Function other than 03 or 06 |
| 02 | Illegal data address | Register number invalid |
| 03 | Not readable data | Register not allowed for data reading |
| 04 | Not writable data | Register not allowed for data writing |
| 05 | Data boundary fault | Multiple data transfer across data boundary or data size more than 125 |
| 06 | Invalid command code | eg writing "6" into 40003 |
| 07 | Illegal parameter read | Invalid parameter number |
| 08 | Illegal parameter write | Invalid parameter number, read only, or hidden parameter |
| 09 | Unsupported command | Sending a serial command to ASAB with parameter 6B = Disable Control in RMT. |
| 10 | Local communication error | Communication error between Modbus slave and starter |



NOTE

Some of the above codes are different from those defined in the Modbus Application Protocol Specification available on www.modbus.org.

12. Modbus Control via Remote Operator


The Modbus Module can be used to connect a Remote Operator to the soft starter, enabling control via an RS-485 serial communications network. Refer to the Remote Operator instructions for details.

12.1 Grounding and Shielding

Twisted pair data cable with earth shield is recommended. The cable shield should be connected to the GND device terminal at both ends and one point of the site protective earth.

12.2 Termination Resistors

In long cable runs prone to excessive noise interference, termination resistors should be installed between the data lines at both ends of the RS-485 cable. This resistance should match the cable impedance (typically 120 Ω). Do not use wire wound resistors.

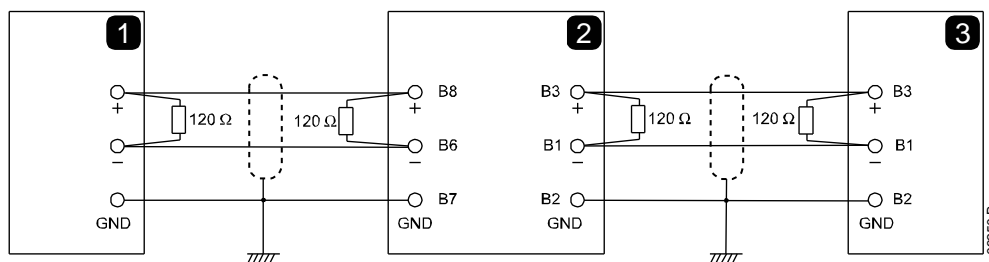

| | |
|----------|------------------------|
| 1 | Network master RS-485 |
| 2 | Remote Operator RS-485 |
| 3 | Soft starter RS-485 |

12.3 RS-485 Data Cable Connection

Daisy chain connection is recommended. This is achieved by parallel connections of the data cable at the actual device terminals.

12.4 Remote Operator RS-485 Network Connection Specifications

| | |
|--------------------------------------|----------------------------------|
| Input impedance: | 12 kΩ |
| Common mode voltage range: | - 7 V to + 12 V |
| Input sensitivity: | ± 200 mV |
| Minimum differential output voltage: | 1.5 V (with max loading of 54 Ω) |

13. Specifications

| | |
|--|--|
| Enclosure | |
| Dimensions | 40 mm (W) x 166 mm (H) x 90 mm (D) |
| Weight | 250 g |
| Protection | IP20 |
| Mounting | |
| Spring-action plastic mounting clips (x 2) | |
| Connections | |
| Soft starter | 6-way pin assembly |
| Network | 5-way male and unpluggable female connector (supplied) |
| Maximum cable size | 2.5 mm ² |
| Settings | |
| Protocol | Modbus RTU, AP ASCII |
| Address range | 0 to 31 |
| Data rate (bps) | 4800, 9600, 19200, 38400 |
| Parity | None, Odd, Even, 10-bit |
| Timeout | None (off), 10 s, 60 s, 100 s |
| Certification | |
| C✓ | IEC 60947-4-2 |
| CE | IEC 60947-4-2 |
| RoHS | Compliant with EU Directive 2002/95/EC |

